

Beautiful by Drew Barrymore 19665

Beautiful 10-Cup Food Processor User Manual

Model: 19665 | Brand: Beautiful by Drew Barrymore

Overview	Setup	Operation	Safety Information	Product Maintenance	Troubleshooting	Specifications	Warranty & Support
--------------------------	-----------------------	---------------------------	------------------------------------	-------------------------------------	---------------------------------	--------------------------------	--

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your Beautiful 10-Cup Food Processor. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth only.
- Avoid contact with moving parts. Keep hands and utensils out of the processing bowl while operating to prevent personal injury and/or damage to the food processor.
- Never feed food by hand. Always use the food pusher provided.
- Blades are sharp. Handle with extreme care when assembling, disassembling, or cleaning.
- Ensure the lid and bowl are securely locked in place before operating the appliance. The "Twist & Lock" system is designed for safety.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is for household use only. Do not use outdoors.



Figure 1.1: The secure twist-and-lock system ensures the bowl and lid are properly seated before operation, preventing spills and enhancing safety.

2. PRODUCT OVERVIEW

The Beautiful 10-Cup Food Processor is a versatile kitchen appliance designed to simplify your food preparation tasks. It features a powerful 500-watt motor and a touch-activated LED display for intuitive control.

2.1 Components

- **Motor Base:** Contains the 500-watt motor and touch-activated LED display.
- **10-Cup Processing Bowl:** Large capacity bowl for various ingredients.
- **Lid with Feed Chute:** Features a secure twist-and-lock mechanism and an opening for adding ingredients during operation.
- **Food Pusher:** Used to guide ingredients through the feed chute.
- **Multipurpose Blade:** For chopping, mincing, mixing, and pureeing.
- **Dough Blade:** Specifically designed for kneading dough.
- **Reversible Shredding Disc:** For fine or coarse shredding.
- **Slicing Disc:** For consistent slicing of fruits and vegetables.
- **Storage Case:** Keeps all accessories neatly organized.



Figure 2.1: The Beautiful 10-Cup Food Processor with its main components visible, including the motor base, processing bowl, and feed chute.

2.2 Key Features

- **Touch-Activated LED Display:** Provides a sleek interface for selecting functions.
- **Twist-and-Lock System:** Ensures secure assembly and safe operation.
- **BPA-Free Components:** All food-contact parts are made from BPA-free materials.
- **Dishwasher Safe Parts:** Bowl, lid, blades, and food pusher are safe for dishwasher cleaning.
- **Compact Storage:** Accessories can be stored within the processing bowl for space-saving convenience.

3. SETUP AND ASSEMBLY

Before first use, wash all parts that will come into contact with food in warm, soapy water, then rinse and dry thoroughly. Ensure the motor base is unplugged from the power outlet.

1. Place the motor base on a clean, dry, and stable surface.
2. Carefully place the 10-cup processing bowl onto the motor base. Align the handle with the right side of the base and twist clockwise until it locks into place.
3. Select the desired blade or disc:
 - For chopping, mixing, or pureeing: Carefully place the multipurpose blade onto the center shaft in the bowl.
 - For kneading dough: Carefully place the dough blade onto the center shaft in the bowl.
 - For slicing or shredding: Place the disc adapter onto the center shaft, then carefully place the desired slicing or shredding disc onto the adapter. Ensure the cutting edge is facing up for slicing, or the appropriate side for shredding.
4. Place the lid onto the processing bowl, aligning the feed chute with the handle. Twist the lid clockwise until it securely locks into place. The appliance will not operate unless the bowl and lid are correctly locked.
5. Ensure the food pusher is inserted into the feed chute if you plan to add ingredients during operation.

6. Plug the power cord into a 120-volt AC electrical outlet.

4. OPERATING INSTRUCTIONS

The Beautiful Food Processor features a touch-activated LED display with three speed options: Low, High, and Pulse.

4.1 Basic Operation

1. Prepare ingredients: Cut large ingredients into pieces that fit easily through the feed chute.
2. Assemble the food processor as described in Section 3.
3. Add ingredients to the processing bowl or through the feed chute. Do not overfill the bowl; ensure the liquid level does not exceed the maximum fill line.
4. Select your desired speed using the touch-activated dial:
 - **Low:** For lighter tasks like chopping soft vegetables or mixing batters.
 - **High:** For heavier tasks like shredding hard cheeses or processing tougher ingredients.
 - **Pulse:** For short bursts of power, ideal for chopping, mincing, or controlling consistency. Press and hold for continuous pulsing, release to stop.
5. When processing is complete, turn the dial to the "OFF" position and unplug the appliance.
6. Wait for the blade or disc to stop completely before removing the lid and then the bowl.



Figure 4.1: The intuitive dial allows selection of Low, High, or Pulse speeds for precise control over processing tasks.

4.2 Specific Functions

- **Chopping/Mincing/Pureeing (Multipurpose Blade):** Use the Pulse setting for coarse chopping. For finer results or pureeing, use the Low or High setting continuously until desired consistency is reached. Add liquids through the feed chute if needed for smoother purees.

- **Dough Kneading (Dough Blade):** Add dry ingredients to the bowl, then gradually add liquids through the feed chute while the processor is running on Low. Process until a dough ball forms and cleans the sides of the bowl. Do not over-process.
- **Slicing (Slicing Disc):** Place ingredients vertically in the feed chute for round slices, or horizontally for longer slices. Use the food pusher to guide ingredients through. For best results, use firm, chilled ingredients.
- **Shredding (Reversible Shredding Disc):** Place ingredients in the feed chute. Use the food pusher to guide ingredients through. For fine shredding, use one side of the disc; for coarse shredding, flip the disc to the other side.



Figure 4.2: The food processor efficiently processes ingredients, making meal preparation quicker and easier.

5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your food processor.

5.1 Cleaning

1. Always unplug the food processor before cleaning.
2. **Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
3. **Processing Bowl, Lid, Blades, and Discs:** All removable parts are dishwasher safe (top rack recommended). For hand washing, use warm, soapy water and a non-abrasive sponge. Handle blades and discs with extreme care due to their sharpness.
4. Rinse all parts thoroughly and dry completely before storing.



Figure 5.1: The processing bowl, lid, blades, and food pusher are designed for easy cleaning and are dishwasher safe.

5.2 Storage

The food processor is designed for compact storage. All accessories, including blades and discs, can be neatly stored inside the 10-cup processing bowl when not in use. Use the provided storage case for blades and discs to ensure safety and organization.



Figure 5.2: Accessories can be stored conveniently within the processing bowl, saving counter and cabinet space.

6. TROUBLESHOOTING

If you encounter issues with your food processor, please refer to the following common problems and solutions before contacting customer support.

Problem	Possible Cause	Solution
Appliance does not turn on.	<ul style="list-style-type: none"> Not plugged in. Bowl or lid not securely locked. Overheat protection activated. 	<ul style="list-style-type: none"> Ensure the power cord is firmly plugged into a working outlet. Check that the bowl and lid are twisted and locked into place. Unplug the unit and let it cool down for 30 minutes before attempting to use again.
Motor sounds strained or stops.	<ul style="list-style-type: none"> Overloaded bowl. Ingredients are too large or hard. 	<ul style="list-style-type: none"> Reduce the amount of ingredients in the bowl. Cut ingredients into smaller, more manageable pieces.

Problem	Possible Cause	Solution
Food is unevenly processed.	<ul style="list-style-type: none"> • Too many ingredients. • Ingredients not cut uniformly. • Using continuous speed instead of Pulse for chopping. 	<ul style="list-style-type: none"> • Process in smaller batches. • Ensure ingredients are cut to similar sizes before processing. • Use the Pulse function for better control over chopping consistency.

7. PRODUCT SPECIFICATIONS

- **Model Name:** Beautiful 10-Cup Food Processor
- **Model Number:** 19665
- **Brand:** Beautiful by Drew Barrymore (Manufactured by Made By Gather)
- **Color:** White Icing
- **Bowl Capacity:** 10 Cups
- **Power:** 500 Watts
- **Voltage:** 120 Volts
- **Number of Speeds:** 3 (Low, High, Pulse)
- **Blade Material:** Stainless Steel
- **Product Dimensions:** 8.89"D x 10.31"W x 17.05"H
- **Item Weight:** 14 pounds
- **Special Features:** Touch-Activated Display, BPA-Free, Dishwasher Safe Parts, Includes Storage Case, Soft Matte Finish, Reversible Shredding Disc, Easy to Clean.



Figure 7.1: Dimensional view of the food processor, indicating its height and width for space planning.

8. WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support inquiries, please refer to the warranty card included with your product or visit the manufacturer's official website. Please have your model number (19665) and purchase date available when contacting support.

Manufacturer: Made By Gather

Note: Specific warranty terms and conditions may vary and are subject to change.