

ZMISHIBO OXT42

ZMISHIBO Ø106 cm Silent Ceiling Fan

MODEL: OXT42 - USER MANUAL

1. Introduction

Thank you for choosing the ZMISHIBO Ø106 cm Silent Ceiling Fan. This modern ceiling fan integrates a powerful DC motor, adjustable LED lighting, and smart control options via both a remote control and a mobile application. Designed for comfort and efficiency, it features 6 speed settings, a reversible function for year-round use, and a quiet operation suitable for bedrooms, living rooms, and dining areas. Please read this manual thoroughly before installation and use to ensure safe and optimal performance of your new ceiling fan.

2. Safety Instructions

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these basic precautions:

- Read all instructions carefully before beginning installation.
- Ensure the electricity is turned off at the main circuit breaker or fuse box before installation or servicing.
- All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, consult a qualified electrician.
- The mounting structure must be capable of supporting the weight of the fan (approximately 3.94 kg).
- Do not install the fan in a location where the blades could strike objects or people. Maintain a minimum clearance of 2.3 meters (7.5 feet) from the floor to the fan blades.
- Ensure all connections are tight and secure to prevent the fan from falling.
- Do not operate the fan with a damaged power cord or plug.
- Do not insert objects into the fan blades while the fan is operating.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. Package Contents

Carefully unpack all components and ensure you have received all items listed below. If any parts are missing or damaged, contact customer support.

- Fan Motor Assembly
- Fan Blades (3)
- Light Kit with LED Module
- Remote Control (pre-paired)
- Short Downrod (12.7 cm)
- Long Downrod (20.3 cm)
- Mounting Bracket
- Canopy
- Hardware Pack (screws, washers, wire nuts)
- User Manual (this document)

4. Setup and Installation

Before installation, ensure the power is OFF at the circuit breaker. It is recommended to have two people for installation.

4.1 Pre-Installation Checks

- Verify that the ceiling junction box is securely mounted and capable of supporting the fan's weight.
- Ensure you have all necessary tools: screwdriver, wire strippers, electrical tape, ladder.

4.2 Mounting the Bracket

1. Attach the mounting bracket to the ceiling junction box using the screws and washers provided. Ensure it is firmly secured.

4.3 Assembling the Downrod and Fan Motor

1. Select the desired downrod (12.7 cm or 20.3 cm) based on your ceiling height.
2. Feed the electrical wires from the fan motor through the downrod.
3. Insert the downrod into the fan motor housing and secure it with the provided pin and screw.
4. Carefully lift the fan assembly and hang it onto the mounting bracket hook.

4.4 Wiring Connections

Connect the wires according to the following:

- **Green/Bare Copper Wire** (Ground) from fan to **Green/Bare Copper Wire** (Ground) from ceiling.
- **White Wire** (Neutral) from fan to **White Wire** (Neutral) from ceiling.
- **Black Wire** (Live) from fan to **Black Wire** (Live) from ceiling.

Secure all connections with wire nuts and electrical tape.

4.5 Attaching the Canopy and Blades

1. Slide the canopy up to the ceiling and secure it to the mounting bracket with the provided screws.
2. Attach each fan blade to the motor housing using the screws provided. Ensure they are tightly fastened.

4.6 Installing the Light Kit

1. Connect the wires from the light kit to the corresponding wires from the fan motor assembly.
2. Secure the light kit to the fan motor housing.

Ventilateur de plafond lumineux de 106 cm



Minuterie



6 Vitesses



Moteur DC Réversible



Ultra-Silencieux



Économie d'Énergie



3 Températures Couleur

Image: Fan dimensions, including 106 cm diameter, 12.7 cm and 20.3 cm downrod options, and compatibility with flat or up to 15° inclined ceilings.

Note on Sloped Ceilings: This fan is suitable for installation on sloped ceilings up to 15 degrees. Ensure the downrod ball joint seats correctly in the mounting bracket.

5. Operating Instructions

Your ZMISHIBO ceiling fan can be controlled via the included remote control or a dedicated mobile application.

5.1 Remote Control Operation

The remote control comes pre-paired with your fan. Insert 2 AAA batteries (not included) into the remote. Point the remote towards the fan receiver for optimal operation.



Télécommande

Pile et support mural inclus

Installation facile

Notice d'installation fournie

Image: Detailed layout of the remote control with button functions labeled.

- **Light On/Off:** Turns the light on or off.
- **Fan On/Off:** Turns the fan on or off.
- **Speed 1-6:** Adjusts fan speed from 1 (lowest) to 6 (highest).
- **Forward/Reverse (F/R):** Changes fan direction for summer (downward airflow) or winter (upward airflow) modes.
- **CCT+/-/Modif. CCT:** Adjusts light color temperature (Warm White, Natural White, Cool White).
- **Brightness +/-:** Dims or brightens the light (10% to 100%).

- **Natural Breeze:** Activates a mode that simulates natural wind by varying fan speed.
- **Timer (2H/4H):** Sets the fan to turn off automatically after 2 or 4 hours.
- **All Off:** Turns off both the fan and the light.

5.2 Mobile Application Control

Your fan is Wi-Fi compatible. Download the dedicated ZMISHIBO app from your smartphone's app store (iOS or Android). Follow the in-app instructions to connect your fan to your home Wi-Fi network. The app allows for full control of fan speeds, light settings, timer functions, and more, often with additional customization options.

5.3 Fan Functions

- **6 Speed Settings:** Choose from a gentle breeze (Speed 1-2) for sleeping, natural wind (Speed 3-4) for daily activities, or a powerful airflow (Speed 5-6) for rapid cooling.



Image: Visual representation of 6 fan speeds suitable for different activities like sleeping, working, or exercising.

- **Reversible DC Motor:** The energy-efficient DC motor allows for year-round comfort.
 - **Summer Mode (Downward Airflow):** Creates a cooling effect by pushing air downwards.
 - **Winter Mode (Upward Airflow):** Circulates warm air trapped near the ceiling, distributing it evenly throughout the room.



Image: Illustration of summer mode (downward airflow for cooling) and winter mode (upward airflow for heat distribution).

- **Ultra-Quiet Operation:** The fan operates at a low noise level (approx. 35 dB), ensuring a peaceful environment,

especially suitable for bedrooms.



Image: Demonstrates the ultra-silent operation of the fan, showing noise levels compared to common sounds.

5.4 Light Functions

- **3 Color Temperatures (CCT):** Easily switch between three distinct light settings to match your mood or activity:
 - **3000K Warm White:** For a cozy and relaxing ambiance.
 - **4500K Natural White:** Ideal for general illumination and daily tasks.
 - **6000K Cool White:** Bright and invigorating, suitable for focused work.
- **Dimmable (10%-100%):** Adjust the brightness continuously to create the perfect lighting for any occasion.

5.5 Timer Function

The integrated timer allows you to set the fan to automatically turn off after 2 or 4 hours, providing convenience and energy saving, especially useful during sleep.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- **Cleaning:** To clean the fan, wipe the blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish. Ensure the power is off before cleaning.
- **Blade Tightness:** Periodically check that all blade screws are tight. Over time, they may loosen due to fan vibration.
- **Light Kit:** The LED module is designed for long life and typically does not require replacement. If issues arise, contact customer support.
- **General Check:** Annually, check all connections and mounting hardware to ensure they remain secure.

7. Troubleshooting

If you experience any issues with your fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; loose wire connections; remote control battery dead.	Check circuit breaker/fuse; ensure all wire connections are secure; replace remote control batteries.

Problem	Possible Cause	Solution
Fan wobbles	Loose blade screws; mounting bracket not secure; unbalanced blades.	Tighten all blade screws; ensure mounting bracket is firmly attached; check if blades are bent or damaged.
Light does not work	Loose wire connection to light kit; LED module failure.	Check light kit wiring connections; if issue persists, contact customer support.
Remote control not working	Dead batteries; remote not paired (unlikely as it's pre-paired).	Replace batteries; ensure no obstructions between remote and fan.
Fan is noisy	Loose screws; motor issue; fan not properly installed.	Check and tighten all screws; ensure proper installation; if noise persists, contact customer support.

8. Specifications

Feature	Detail
Brand	ZMISHIBO
Model Name	OXT42
Model Number	ZMCF002
Color	Natural Wood
Dimensions (D x W x H)	106 cm x 106 cm x 32.5 cm
Weight	3.94 Kilograms
Power Source	Electric
Motor Type	DC Motor
Power Consumption	45 Watts
Number of Speeds	6
Noise Level	45 Decibels (Max, typically lower)
Light Type	Integrated LED
Color Temperature	3CCT (3000K, 4500K, 6000K)
Dimmable	Yes (10% to 100%)
Control Method	Remote Control, Mobile Application (Wi-Fi)
Special Features	Wi-Fi Compatible, Adjustable Height (2 downrods), Timer, Reversible Motor
Mounting Type	Ceiling Mount (up to 15° slope)
Material	Acrylonitrile Butadiene Styrene (ABS)
Included Components	Remote Control, Application (control)

9. Warranty and Support

Your ZMISHIBO ceiling fan comes with a **2-year warranty** from the date of purchase, covering defects in materials and workmanship under normal use. This warranty does not cover damage caused by improper installation, misuse, accidents, or unauthorized repairs.

For warranty claims, technical support, or any questions regarding your product, please contact ZMISHIBO customer service through the retailer where you purchased the product or visit the official ZMISHIBO website for contact information. Please have your purchase receipt and model number (OXT42) ready when contacting support.

© 2026 ZMISHIBO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question