

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Midea](#) /

› [Midea Pro Steel Upright Freezer Model MDRU793FGF46R Instruction Manual](#)

Midea MDRU793FGF46R

Midea Pro Steel Upright Freezer Model MDRU793FGF46R Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Midea Pro Steel Upright Freezer, Model MDRU793FGF46R. Please read these instructions thoroughly before installation and use, and retain them for future reference.

Important Safety Information

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Keep ventilation openings clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. SETUP AND INSTALLATION

2.1 Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Inspect the freezer for any signs of shipping damage. Report any damage immediately to your retailer.



This image displays the exterior of the Midea Pro Steel Upright Freezer. It features a sleek, polished steel finish and a single door design, indicating its upright configuration.

2.2 Placement

- Place the freezer on a firm, level surface to prevent vibrations.
- Allow at least 10 cm (4 inches) of space around the back and sides for proper air circulation.
- Avoid direct sunlight and proximity to heat sources like stoves or heaters.
- Ensure the ambient temperature is suitable for the appliance's climate class.

2.3 Electrical Connection

Connect the freezer to a dedicated, grounded electrical outlet with the correct voltage (220/240V ~ 60Hz). Do not use extension cords or adapter plugs. Allow the appliance to stand upright for at least 2-4 hours before plugging it in to allow refrigerants to settle.

3. OPERATION

3.1 Initial Startup

After plugging in the appliance, the internal temperature will gradually decrease. It may take several hours for the freezer to reach its set temperature. Avoid placing food inside during the first 2-4 hours of operation.

3.2 Temperature Control

The temperature is controlled via an electronic panel, typically located on the door or inside the appliance. Refer to the specific controls on your unit to adjust the temperature. For optimal freezing, a temperature of -18°C (0°F) or lower is recommended.

3.3 Convertible Mode

Your Midea MDRU793FGF46R freezer features a convertible mode, allowing it to function as either a freezer or a refrigerator. To switch modes, follow the instructions on the control panel. Ensure the appliance is empty before changing modes to prevent food spoilage.

3.4 Multi-Air Flow System

The Multi-Air Flow system ensures even cooling throughout the compartment by circulating cold air to every shelf level. This helps maintain a stable temperature and preserves food quality.

3.5 No Frost Technology

This appliance is equipped with No Frost technology, which prevents ice buildup inside the freezer compartment. This eliminates the need for manual defrosting, making maintenance easier.

3.6 Fast Freeze and Cool Functions

Activate the Fast Freeze function to rapidly lower the temperature for freezing large quantities of fresh food, preserving their quality. The Fast Cool function can be used when operating in refrigerator mode to quickly chill newly added items.

4. MAINTENANCE AND CARE

4.1 Cleaning

- Always unplug the appliance before cleaning.
- Clean the interior with a soft cloth and a mild, non-abrasive detergent. Rinse with clean water and dry thoroughly.
- Wipe the exterior with a soft, damp cloth. For stainless steel surfaces, use a specialized stainless steel cleaner.
- Clean the condenser coils at the back of the unit periodically (at least twice a year) to ensure efficient operation.

4.2 Power Outage

In case of a power outage, keep the freezer door closed to maintain the internal temperature for as long as possible. Food should remain frozen for several hours depending on the ambient temperature and how full the freezer is.

4.3 Vacation Care

- **Short Vacations:** Leave the freezer operating.
- **Long Vacations:** If you will be away for an extended period, remove all food, unplug the appliance, clean it

thoroughly, and leave the door slightly ajar to prevent odors and mold growth.

5. TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Freezer does not operate.	No power supply; power cord unplugged; circuit breaker tripped.	Check power connection; reset circuit breaker.
Temperature is not cold enough.	Door not closed properly; excessive door opening; warm food added recently; temperature setting too high.	Ensure door is sealed; reduce door openings; allow time for new food to cool; adjust temperature setting lower.
Unusual noises.	Appliance not level; objects touching the back; normal operating sounds.	Level the appliance; move objects away; gurgling/hissing sounds are normal refrigerant flow.
Door does not close completely.	Gasket obstructed or dirty; shelves/baskets out of place; appliance not level.	Clean gasket; rearrange contents; level the appliance.

If the problem persists after checking these points, please contact qualified service personnel.

6. SPECIFICATIONS

Feature	Detail
Model Number	MDRU793FGF46R
Capacity	21 Cubic Feet
Dimensions (D x W x H)	83.2 cm x 73.5 cm x 195 cm
Weight	88 Kilograms
Color	Pro Steel
Material	Stainless Steel
Installation Type	Freestanding
Power Supply	220/240V ~ 60Hz
Key Features	Convertible to Refrigerator, Multi-Air Flow, No Frost Technology, Fast Freeze and Cool Functions, Left-hand door opening.

7. WARRANTY AND CUSTOMER SUPPORT

7.1 Warranty Information

Your Midea Pro Steel Upright Freezer is covered by a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms, conditions, and duration of coverage. Keep your purchase receipt as proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, service requests, or questions regarding your appliance, please contact Midea customer support. Contact details can typically be found on the warranty card, the Midea official website, or by contacting your local retailer.