

CP97052

Saker Sakerplus Handheld Steam Cleaner User Manual

Model: CP97052

INTRODUCTION

The Saker Sakerplus Handheld Steam Cleaner is designed for efficient and chemical-free deep cleaning across various surfaces. With 1050W of power, it heats up rapidly to deliver pressurized hot steam, effectively melting away grease, grime, and sticky messes. This manual provides essential information for safe operation, maintenance, and troubleshooting to ensure optimal performance of your steam cleaner.



Image: The Saker Sakerplus Handheld Steam Cleaner shown with its full set of accessories, including various nozzles, brushes, and cloths.

Safety Information

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the safety cap is securely fastened before operation. The unit is equipped with a child-lock safety cap to prevent accidental opening during use.
- Do not open the safety cap while the unit is pressurized or hot. Allow the unit to cool down completely and release all pressure before refilling water.
- The steam cleaner operates at high temperatures (up to 239°F / 115°C). Avoid direct contact with steam to prevent burns.
- Do not use the steam cleaner on unsealed hardwood floors, delicate fabrics, or surfaces that are not heat-resistant.
- Use only clean tap water. Do not add any cleaning solutions, chemicals, or aromatic oils to the water tank, as this can damage the unit and void the warranty.
- Keep the appliance out of reach of children and pets.

- Unplug the steam cleaner from the power outlet when not in use and before performing any maintenance or cleaning.
- The unit features an automatic shut-off function for safety. If the water tank runs dry, the unit will power off.

PACKAGE CONTENTS

Your Saker Sakerplus Handheld Steam Cleaner package includes the following components:

- Saker Sakerplus Handheld Steam Cleaner Unit
- Measuring Cup
- Funnel
- Angled Nozzle
- Round Nylon Brushes (multiple sizes)
- Fabric Tool with Fiber Cloths (4 included)
- Extension Hose
- Glass Cleaning Accessory
- Cone-Shaped Nozzle



Image: A visual guide to the included accessories, detailing the bent nozzle, extended nozzle, glass-cleaning accessory, round brushes, fabric-cleaning accessory, and cone-shaped nozzle.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Fill Water Tank:** Ensure the unit is unplugged and cool. Unscrew the safety cap counter-clockwise. Use the provided measuring cup and funnel to fill the water tank with up to 350ml of clean tap water. Do not overfill.
3. **Secure Cap:** Screw the safety cap clockwise until it is tightly sealed.
4. **Attach Accessory:** Select the appropriate accessory for your cleaning task and firmly attach it to the nozzle of the steam cleaner.

OPERATING INSTRUCTIONS

1. **Power On:** Plug the steam cleaner into a standard electrical outlet. The power indicator light will illuminate, indicating the unit is heating up.

2. **Heat-Up Time:** The unit will be ready for use in approximately 3-5 minutes when the steam is consistently produced.
3. **Activate Steam:** Press and hold the steam button on the handle to release steam. Release the button to stop the steam flow. For continuous steam, some models may have a lock switch on the steam button.
4. **Cleaning Surfaces:**
 - **Tile & Grout:** Use the angled nozzle or a brush attachment for targeted cleaning.
 - **Upholstery & Fabric:** Attach the fabric tool with a fiber cloth. Test on an inconspicuous area first.
 - **Kitchen & Bathroom Fixtures:** The angled nozzle and round brushes are effective for stovetops, sinks, and toilets.
 - **Glass & Windows:** Use the glass cleaning accessory for streak-free results.
 - **Car Interior:** Various nozzles can be used for seats, dashboards, and floor mats.
5. **Refilling:** If steam production decreases or stops, the water tank may be empty. Unplug the unit, allow it to cool for several minutes, and carefully unscrew the safety cap to refill.
6. **Power Off:** When finished cleaning, release the steam button, unplug the unit, and allow it to cool down before storing.



Image: Examples of the steam cleaner's versatility, demonstrating its use for cleaning toilets, range hoods, glass, car wheels, and fabric surfaces.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your steam cleaner.

- **Cleaning the Unit:** After each use, ensure the unit is unplugged and cool. Wipe the exterior with a damp cloth.
- **Emptying Water:** Always empty any remaining water from the tank after use to prevent mineral buildup.
- **Accessory Care:** Clean accessories with water and mild soap. Allow them to dry completely before storing. Fiber cloths can be machine washed.
- **Descaling (Monthly/Bi-monthly):** Depending on water hardness, mineral deposits may build up. To descale, fill the tank with a mixture of 50% water and 50% white vinegar. Heat the unit and release steam until the tank is empty. Repeat with clean water to rinse. Always ensure proper ventilation during descaling.
- **Storage:** Store the steam cleaner and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank is empty or low. Unit not heated sufficiently. Mineral buildup.	Refill water tank. Allow 3-5 minutes for heating. Perform descaling procedure.
Water leaking from nozzle.	Accessory not properly attached. Unit not fully heated.	Ensure accessory is securely fastened. Wait for the unit to reach full operating temperature.
Power indicator light not on.	Unit not plugged in. Power outlet malfunction.	Check power cord connection. Test outlet with another appliance.
Safety cap difficult to open.	Unit is still pressurized or hot.	Unplug the unit and allow it to cool down completely. Release any residual pressure by pressing the steam button until no more steam comes out.

SPECIFICATIONS

- Model Name:** CP97052
- Brand:** Generic
- Wattage:** 1050 watts
- Heat-Up Time:** 3-5 minutes
- Steam Temperature:** Up to 239°F (115°C)
- Water Tank Capacity:** 350ml
- Power Cord Length:** 9.8 ft
- Weight:** Under 3 lbs
- Included Components:** Steam Cleaner Unit, Measuring Cup, Funnel, Angled Nozzle, Round Nylon Brushes, Fabric Tool, Extension Hose, Glass Cleaning Accessory, Cone-Shaped Nozzle.

Product size



Image: A diagram illustrating the physical dimensions of the Saker Sakerplus Handheld Steam Cleaner, showing its length, height, and width.

WARRANTY AND SUPPORT

While specific warranty details are not provided in this manual, most products come with a standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for any warranty claims. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact the manufacturer or your retailer. Refer to the product packaging or the seller's information on the purchase platform for contact details.

Online Resources: For additional tips and frequently asked questions, you may visit the product's support page on the retailer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

I'm trying to use my Saker Eversteam cleaner WKL-623 for the first time and it is not producing steam. How can I fix this?

If your Saker Eversteam cleaner is not producing steam during its first use, please check the following troubleshooting steps based on the manual: Wait for Heat-Up: The unit requires approximately 3-5 minutes to heat up....

[Read full answer](#)

The power cord plug on my Saker Sakerplus Handheld Steam Cleaner (Model CP97052) does not fit my power outlet; how can I resolve this?

The Saker Sakerplus Handheld Steam Cleaner (Model CP97052) is typically designed to plug into a standard electrical outlet. If the plug does not fit your power point, it is likely due to a regional...

[Read full answer](#)