

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [HUAYU](#) /
- › [HUAYU URC1366 12-IN-1 Universal Smart Remote Control User Manual](#)

HUAYU URC1366

HUAYU URC1366 Universal LCD/LED TV Remote

MODEL: URC1366 (12-IN-1)

Introduction

This manual provides instructions for the setup, operation, and maintenance of your HUAYU URC1366 12-IN-1 Universal Smart Remote Control. This remote is designed to control various brands of LCD/LED televisions and features dedicated buttons for popular streaming services like Netflix, Prime Video, and YouTube.

Product Overview



Image: Front, back, and side views of the HUAYU URC1366 universal remote control. The front features a power button, mute, info, subtitle, guide, text, playback controls, a numeric keypad (1-9, 0) with associated brand names (Samsung, LG, Sony, Philips, Panasonic, Sharp, Toshiba, Thomson, Telefunken, Grundig, Hisense, Vestel), navigation arrows with an OK button, back, exit, volume up/down, channel up/down, a smart button, and dedicated buttons for Netflix, Prime Video, and YouTube. The back and side views show the ergonomic design and battery compartment area.

Setup

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

2. Programming the Remote Control

The URC1366 remote can be programmed to control your television using a brand-specific code search method:

1. Manually turn on the television you wish to control.
2. Point the HUAYU remote control towards the television.
3. Press and hold the number button corresponding to your TV brand (e.g., '1' for Samsung, '2' for LG, '3' for Sony, etc.) for approximately 5 seconds. The indicator light on the remote should turn on and remain lit.
4. Release the number button. The remote is now in search mode.
5. Repeatedly press the **Power** button on the remote, pausing briefly after each press, until your television turns off. This indicates that the remote has found a compatible code.
6. Once the television turns off, immediately press the **OK** button to save the code. The indicator light should turn off.
7. Test other functions of the remote (e.g., Volume, Channel, Menu). If all functions work correctly, the programming is complete.
8. If some functions do not work, repeat the programming process from step 3 to find a more suitable code.

Operating Instructions

Familiarize yourself with the remote's buttons for optimal use:

- **Power** (): Turns the television on or off.
- **Mute** (): Mutes or unmutes the television sound.
- **INFO**: Displays information about the current program or input.
- **SUBT**: Accesses subtitle options.
- **GUIDE**: Opens the electronic program guide (EPG).
- **TEXT**: Activates or deactivates teletext.
- **Playback Controls** (◀◀, ▶▶, ■, ▶▶): Control media playback (rewind, play, pause, stop, fast forward).
- **Number Pad (0-9)**: Directly enters channel numbers or codes.
- **Brand Buttons (1-9)**: Used for programming specific TV brands (Samsung, LG, Sony, Philips, Panasonic, Sharp, Toshiba, Thomson, Telefunken, Grundig, Hisense, Vestel).
- **MENU**: Opens the television's main menu.
- **SOURCE**: Selects the input source (HDMI, AV, etc.).
- **Navigation Arrows** (▲, ◀, ▼, ▶): Navigate through menus and options.
- **OK**: Confirms selections or enters menus.
- **BACK** (↶): Returns to the previous screen or menu.
- **EXIT** (↷): Exits the current menu or application.
- **Volume Up/Down** (+ / -): Adjusts the sound volume.
- **Channel Up/Down** (P▲ / P▼): Changes television channels.
- **SMART** (△): Accesses the Smart TV hub or features.
- **Dedicated App Buttons (NETFLIX, PRIME, YouTube)**: Directly launch the respective streaming applications on compatible Smart TVs.

Maintenance

Cleaning

To clean your remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Do not use harsh chemicals or abrasive cleaners, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's performance diminishes or if the indicator light does not illuminate during operation. Always replace both batteries at the same time with new AAA batteries. Dispose of old batteries responsibly according to local regulations.

Storage

When not in use for extended periods, remove the batteries to prevent leakage and potential damage to the remote. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

- **Remote not working:** Check if the batteries are inserted correctly and are not depleted. Ensure there are no obstructions between the remote and the TV's infrared receiver.
- **Specific buttons not responding:** The remote might not be fully compatible with all functions of your TV model. Try reprogramming the remote using a different code if available, or consult your TV's manual for compatible remote types.
- **TV not responding to programming:** Ensure the TV is turned on manually before starting the programming process. Make sure you are holding the correct brand button and pressing the power button repeatedly until the TV turns off. Confirm the code by pressing OK immediately.
- **Smart app buttons not working:** Ensure your TV is a Smart TV and is connected to the internet. The functionality of these buttons depends on the TV's operating system and app availability.

Specifications

- **Brand:** HUAYU
- **Model:** URC1366
- **Type:** Universal LCD/LED TV Remote
- **Compatibility:** 12-in-1 (compatible with various TV brands as indicated on buttons)
- **Power Source:** 2 x AAA Batteries (not included)
- **Dedicated Buttons:** Netflix, Prime Video, YouTube

Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact your retailer. Keep your purchase receipt as proof of purchase.