

## HUAYU RM-L1655

# HUAYU KL RM-L1655 Universal LCD LED TV Remote Control User Manual

Model: RM-L1655

## 1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your HUAYU KL RM-L1655 Universal LCD LED TV Remote Control. Please read this manual carefully before using the remote control to ensure proper functionality and to maximize your viewing experience.

## 2. PRODUCT OVERVIEW

The HUAYU KL RM-L1655 is a universal remote control designed for LCD and LED televisions. It features dedicated buttons for popular streaming services like Netflix, YouTube, Prime Video, and Google Play, offering convenient access to your favorite content.



**Figure 1:** Front, side, and back views of the HUAYU KL RM-L1655 Universal Remote Control. The front displays various control buttons including number pad, volume, channel, navigation, and dedicated app buttons. The side view shows its slim profile. The back view includes auto-searching instructions.

## 2.1 Key Features

- Universal compatibility with various LCD/LED TV models.
- Dedicated quick access buttons for Netflix, YouTube, Prime Video, Google Play, Rakuten TV, and Freeview Play.
- Standard TV control functions: Power, Volume, Channel, Mute, Menu, Guide, Home, Back, Exit.
- Numeric keypad for direct channel input.
- Navigation pad with OK button.

## 2.2 Button Layout

Refer to Figure 1 for a visual representation of the remote control's buttons. Below is a description of key button groups:

- **Power Button ( ):** Turns the TV on or off.
- **Source Button:** Selects input source (HDMI, AV, etc.).
- **P.MODE, S.MODE, ASPECT, SUBTITLE:** Picture mode, Sound mode, Aspect ratio, Subtitle controls.
- **Numeric Keypad (0-9):** For direct channel selection.

- **Volume Control (VOL +/-):** Adjusts volume.
- **Channel Control (CH +/-):** Changes channels.
- **Mute Button ( ):** Mutes or unmutes sound.
- **Navigation Pad (Up, Down, Left, Right, OK):** For menu navigation and selection.
- **MENU, GUIDE, HOME, BACK, EXIT:** Access TV menus, program guide, smart home, go back, or exit current function.
- **Smart Button:** Accesses smart TV features.
- **TEXT, INFO, TV, MYAPPS:** Teletext, information display, TV mode, and applications access.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Previous, Next):** For controlling media playback.
- **Dedicated App Buttons (NETFLIX, YouTube, prime video, Google Play, Rakuten TV, Freeview Play):** Direct access to specified streaming applications.

### 3. SETUP INSTRUCTIONS

---

The HUAYU KL RM-L1655 remote control offers two primary setup modes: Automatic Code Search and Brand Search. The instructions for Automatic Code Search are also printed on the back of the remote control.

#### 3.1 Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries (not included), ensuring correct polarity (+ and -).
3. Close the battery compartment cover securely.

#### 3.2 Automatic Code Search (Recommended)

This method allows the remote to automatically find the correct code for your TV.

1. **Turn on the TV set manually.** Ensure your TV is powered on and not in standby mode.
2. **Initiate Auto Search:** Press and hold the **POWER** button on the remote control for approximately 3 seconds. The remote will begin searching for the correct code.
3. **Observe TV Response:** During the auto-searching process, observe your TV screen. When the "VOL+" (Volume Up) icon appears on the TV screen, immediately release the **POWER** button.
4. **Check Functionality:** Test the remote control's basic functions (e.g., Volume Up/Down, Channel Up/Down, Power On/Off).
5. **Finalize Setting:** If the remote works correctly, the setting is finished. If not, repeat the process from step 2.

*Note: The "Auto Searching" instructions are also printed on the back of the remote for quick reference.*

#### 3.3 Brand Search (Alternative Method)

If the automatic search does not yield results, you may use the brand search method. Specific brand codes are typically provided in a separate code list (not included in this manual). If you have a code list, follow these general steps:

1. Turn on your TV manually.
2. Find the code for your TV brand in the provided code list.
3. Press and hold the **SET** button (or a similar setup button, if available) and the **POWER** button simultaneously until the indicator light stays on.
4. Enter the 3 or 4-digit code for your TV brand using the numeric keypad.
5. The indicator light should turn off, indicating the code has been accepted.
6. Test the remote's functions. If it doesn't work, try the next code for your brand or repeat the auto-search.

Note: This remote primarily relies on the auto-search function. A separate code list may not be provided with all units.

## 4. OPERATING INSTRUCTIONS

Once your remote control is successfully set up, you can use it to control your TV's functions.

- **Power On/Off:** Press the **POWER** button.
- **Volume Adjustment:** Press **VOL+** to increase volume, **VOL-** to decrease.
- **Channel Change:** Press **CH+** to go to the next channel, **CH-** to go to the previous channel.
- **Direct Channel Input:** Use the **numeric keypad (0-9)** to enter channel numbers directly.
- **Mute/Unmute:** Press the button.
- **Menu Navigation:** Use the **Up, Down, Left, Right** arrows to navigate menus, and **OK** to confirm selections.
- **Accessing Apps:** Press the dedicated buttons for **NETFLIX, YouTube, prime video, Google Play, Rakuten TV,** or **Freeview Play** to launch these applications directly (requires a smart TV with internet connection and app installation).
- **Other Functions:** Use **MENU, GUIDE, HOME, BACK, EXIT, INFO, TEXT, MYAPPS** buttons as per your TV's functionality.

## 5. MAINTENANCE

### 5.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

### 5.2 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical wipes, as these may damage the surface or internal components.

### 5.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If not used for an extended period, remove the batteries to prevent leakage.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control does not work.	<ul style="list-style-type: none"><li>• Batteries are dead or inserted incorrectly.</li><li>• Remote is not programmed to the TV.</li><li>• Obstruction between remote and TV.</li></ul>	<ul style="list-style-type: none"><li>• Replace batteries with new ones, ensuring correct polarity.</li><li>• Perform the "Automatic Code Search" again (Section 3.2).</li><li>• Ensure a clear line of sight to the TV's IR receiver.</li></ul>
Only some functions work.	<ul style="list-style-type: none"><li>• Incorrect code programmed.</li><li>• TV does not support all functions.</li></ul>	<ul style="list-style-type: none"><li>• Repeat the "Automatic Code Search" (Section 3.2) to find a more compatible code.</li><li>• Some advanced functions may not be universally supported by all TV models.</li></ul>

Problem	Possible Cause	Solution
Dedicated app buttons do not work.	<ul style="list-style-type: none"><li>TV is not a smart TV or apps are not installed.</li><li>TV is not connected to the internet.</li></ul>	<ul style="list-style-type: none"><li>Ensure your TV is a smart TV and the respective applications are installed and updated.</li><li>Verify your TV's internet connection.</li></ul>

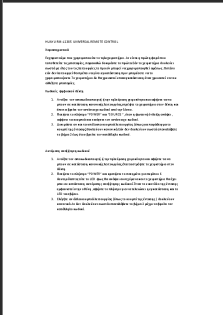 


## 7. SPECIFICATIONS


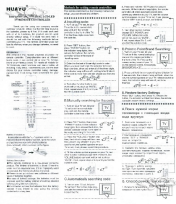 
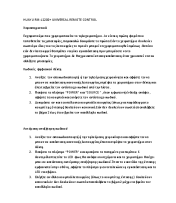 
- **Model:** RM-L1655
- **Brand:** HUAYU
- **Compatibility:** Universal LCD/LED TV Remote
- **Power Source:** 2 x AAA Batteries (not included)
- **Manufacturer:** Other (as per product data)
- **ASIN:** B0FDQL5P5C

## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer or manufacturer's official website where the product was purchased. Keep your purchase receipt as proof of purchase.

### Related Documents - RM-L1655

	<p><a href="#">Οδηγός Χρήσης Universal Τηλεχειριστηρίου HUAYU RM-L1385</a></p> <p>Οδηγίες για τη ρύθμιση και χρήση του universal τηλεχειριστηρίου HUAYU RM-L1385, με χειροκίνητη και αυτόματη αναζήτηση κωδικού.</p>
	<p><a href="#">HUAYU RM-L1785 Universal Remote Control for VESTEL TVs - Compatible Models</a></p> <p>Discover the HUAYU RM-L1785 universal remote control, designed for VESTEL LCD/LED TVs. This document lists compatible remote models and their characteristics, ensuring seamless TV operation.</p>
	<p><a href="#">HUAYU RM-L1508 Universal LCD TCL Remote Control</a></p> <p>User guide for the HUAYU RM-L1508 Universal LCD TCL Remote Control, including specifications, compatible TV models, and automatic code searching instructions.</p>

	<p><a href="#">HUAYU RM-L1772 Universal Remote Control for VESTEL TVs - Compatibility List</a></p> <p>Detailed information about the HUAYU RM-L1772 universal remote control, designed for VESTEL LCD/LED TVs. Includes characteristics and a comprehensive list of compatible remote control models.</p>
	<p><a href="#">HUAYU RM-L1195+ Universal LCD/LED TV Remote Controller Setup Guide</a></p> <p>Comprehensive guide to setting up the HUAYU RM-L1195+ universal LCD/LED TV remote controller. Learn how to program your remote using code input, manual search, automatic search, and brand-specific search methods. Includes battery installation and troubleshooting tips.</p>
	<p><a href="#">HUAYU RM-L1200+ Universal Remote Control Setup Guide</a></p> <p>Instructions and guide for setting up the HUAYU RM-L1200+ Universal Remote Control, including manual and automatic code search methods.</p>