

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Hiswelle](#) /

› [Hiswelle JS919 Large Cool Mist Humidifier User Manual](#)

## Hiswelle JS919

# Hiswelle JS919 Large Cool Mist Humidifier User Manual

Model: JS919

---

## 1. INTRODUCTION

Thank you for choosing the Hiswelle JS919 Large Cool Mist Humidifier. This ultrasonic humidifier is designed to provide optimal humidity levels for large spaces, improving air quality and comfort. It features advanced dual-core atomization technology, a large 4.5-gallon (17-liter) tank, and smart controls for a user-friendly experience.

---

## 2. IMPORTANT SAFETY INSTRUCTIONS

- Always place the humidifier on a firm, flat, and water-resistant surface.
- Do not place the humidifier near heat sources, direct sunlight, or in areas with extreme temperatures.
- Keep the humidifier out of reach of children and pets.
- Always unplug the humidifier before filling, cleaning, or performing any maintenance.
- Do not add essential oils directly into the water tank. Use the designated essential oil tray only.
- Ensure the mist outlet is not blocked and is directed away from walls, furniture, and electronics to prevent moisture damage.
- Do not immerse the main unit in water or other liquids.
- Use only clean, cool tap water or distilled water.

---

## 3. PRODUCT OVERVIEW & COMPONENTS

The Hiswelle JS919 humidifier is designed for ease of use and efficient humidification. Key components include the main tank, water inlet tank, top cover, mist tube, filter, essential oil tray, and a base chamber with a control panel.



Image: Hiswelle JS919 Humidifier with its unique extended mist tube, designed to deliver mist to higher areas.



Image: The humidifier features a portable handle and 360° caster wheels for easy movement between rooms.

## Balance Humidity with Smart Sensor

Automatically adjust mist levels to keep your desired humidity

RH < 50%	RH 50%- 55%	RH 55%-60%
Auto to High	Auto to Middle	Auto to Low

Image: Detailed view of the control panel, built-in handles, essential oil tray (aroma box), and the 360° extended mist tube.

## 4. SETUP GUIDE

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the humidifier on a flat, stable surface in the desired room. Ensure it is at least 6 inches (15 cm) away from walls and furniture.

- 3. Assemble Mist Tube:** Insert the extended mist tube into the top opening of the humidifier. Ensure it is securely in place.
- 4. Fill Water Tank:** Remove the top cover. Fill the 4.5-gallon (17-liter) water tank directly from the top. Do not exceed the 'MAX' fill line. Use purified or distilled water for best results and to minimize mineral buildup.



Image: Illustration of the top-fill design, allowing for easy and convenient water refilling without bending or squatting.

- 5. Power On:** Plug the power cord into a suitable electrical outlet. The digital display will illuminate.
- 6. Initial Operation:** Turn on the humidifier. It may take 20-30 seconds for the pump to work and mist to appear.

Your browser does not support the video tag.

Video: This video provides a comprehensive overview of the Hiswelle 17L/4.5Gal Ultra Large Humidifier, demonstrating its features and setup.

## 5. OPERATING INSTRUCTIONS

The Hiswelle JS919 can be operated using the touch control panel on the unit or the included remote control.

### Control Panel & Remote Functions:

- **Power On/Off:** Press the power button to turn the unit on or off.
- **Mist Volume:** Select from 4 adjustable mist levels (Low, Medium, High, Highest) to customize output.



Image: The humidifier offers 4 levels of mist volume, allowing users to choose the desired intensity.

- **Customize Humidity (Auto Mode):** The built-in humidistat allows you to set a desired humidity level

between 40% and 90% RH. The unit will automatically adjust mist output to maintain this level.



*Image: This graphic illustrates how the smart sensor automatically adjusts mist levels to maintain desired humidity (e.g., Auto to High for RH <50%, Auto to Middle for RH 50%-55%, Auto to Low for RH 55%-60%).*

- **Timer:** Set the operating time from 1 to 16 hours. The humidifier will automatically turn off once the set time expires.
- **Sleep Mode:** Activates ultra-quiet operation and dims the display lights for undisturbed rest.



*Image: The humidifier operating in a bedroom, demonstrating its ultra-quiet sleep mode for peaceful humidification.*

- **UV Lamp:** Activates the UV sterilization function for cleaner mist.
- **Intermittent Mist:** Provides mist at timed intervals.
- **Essential Oil Tray:** Located at the back of the unit. Pull out the tray, add 5-10 drops of your favorite essential oil to the pad, and reinsert. Do not add oils directly to the water tank.

## Easy to Operate

Simple Control Panel & Portable Remote Control



*Image: The humidifier's remote control allows convenient operation of all functions from a distance.*

- **Auto Shut-off:** The humidifier will automatically turn off when the water level is low to prevent damage.

Your browser does not support the video tag.

*Video: This video demonstrates the various operating modes and features of the Hiswelle 17L Cool Mist Humidifier, including mist output and control options.*

## 6. MAINTENANCE & CLEANING

Regular cleaning is essential to ensure optimal performance and prevent mineral buildup. Always unplug the humidifier before cleaning.

1. **Disassembly:** Remove the mist tube, top cover, water inlet tank, and filter.
2. **Descaling the Base Chamber:** Pour out any remaining water. Prepare a descaling solution by mixing white vinegar with water (1:5 ratio). Pour the solution into the base chamber, ensuring it does not contact the air outlet. Allow parts to soak for 15-20 minutes. Use a cleaning brush to remove scale from all parts.
3. **Cleaning Components:** Rinse the top cover, water inlet tank, mist tube, filter, and essential oil tray under running water. Use a soft cloth to wipe away any residue.
4. **Drying:** Dry all components thoroughly with a soft cloth. Ensure all parts are completely dry before reassembling or storing.

5. **Reassembly:** Reassemble the humidifier in reverse order of disassembly.

Your browser does not support the video tag.

*Video: This video provides detailed instructions on how to properly clean the Hiswelle humidifier, including disassembly and descaling steps.*

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No mist or low mist output	Low water level; mineral buildup; mist tube blocked.	Refill water tank; clean the humidifier (see Maintenance); check for obstructions in the mist tube.
Unusual noise	Unit not on a flat surface; water level too low; foreign object in fan.	Place on a flat surface; refill water tank; inspect and remove any foreign objects.
Water leakage	Overfilled water tank; components not assembled correctly.	Do not overfill past the MAX line; ensure all parts are securely assembled.
Odor from mist	Stagnant water; dirty water tank.	Change water regularly; clean the water tank and base chamber thoroughly.

## 8. TECHNICAL SPECIFICATIONS

- **Model Name:** JS919
- **Brand:** Hiswelle
- **Capacity:** 4.5 Gallons (17 Liters)
- **Mist Output:** Up to 800mL/h
- **Runtime:** Up to 48 hours (on lowest mist setting)
- **Coverage Area:** Up to 2000 Square Feet
- **Product Dimensions:** 11"D x 11"W x 28"H
- **Item Weight:** 10.43 pounds (4.74 Kilograms)
- **Wattage:** 70 watts
- **Operation Mode:** Ultrasonic
- **Special Features:** Aroma Diffuser, Digital Display, Remote Control, Top filling, 1-16 hour Timer, Touch control panel, Waterless Auto Shut Off, Humidistat, Sleep Mode & Whisper-Quiet, 4 Level Mist Option, UV Lamp.

## 9. WARRANTY & SUPPORT

Hiswelle products are designed for reliability and performance. For warranty information, technical support, or any questions regarding your humidifier, please refer to the contact details provided in your product packaging or visit the official Hiswelle website. Keep your purchase receipt for warranty claims.

