



[Manuals.plus](#) /

> [YESHOMY](#) /

> YESHOMY TV Stand for Televisions up to 65 Inches, with Sliding Barn Doors and 4 Storage Drawers, Console Table and Media Furniture for Living Room, 58 Inch, Barnwood

YESHOMY YH-0845KL

YESHOMY TV Stand Instruction Manual

Brand: YESHOMY | Model: YH-0845KL

1. INTRODUCTION

This instruction manual provides comprehensive guidance for the assembly, operation, and maintenance of your YESHOMY TV Stand. Please read this manual thoroughly before beginning assembly or use to ensure proper setup and safe operation. Retain this manual for future reference.

The YESHOMY TV Stand is designed to accommodate televisions up to 65 inches, featuring sliding barn doors and four storage drawers, making it a versatile console table and media furniture piece for your living room.



Figure 1.1: YESHOMY TV Stand (Barnwood) in a living room setting.

2. SAFETY INFORMATION

- Always assemble the unit on a soft, clean surface to prevent scratches.
- Ensure all parts are present and undamaged before beginning assembly. Do not proceed with assembly if any parts are missing or damaged.
- For optimal stability and safety, it is highly recommended that two people assemble this TV stand.
- Do not exceed the maximum weight capacity of 180 lbs (81.6 kg) on the top surface.
- Distribute weight evenly across shelves and drawers to prevent tipping.
- Always place the TV stand on a flat, level surface.
- To prevent serious injury, attach the TV stand to the wall using an anti-tip kit (if included or purchased separately), especially in homes with children.
- Keep small parts and packaging materials away from children and pets to avoid choking hazards.

3. PACKAGE CONTENTS

Before assembly, verify that all components listed below are included in your package:

- TV Stand Panels (various sizes)
- Sliding Barn Doors (2 units)
- Storage Drawers (4 units)
- Hardware Kit (screws, dowels, cam locks, etc.)
- Sliding Door Rails and Hardware
- Assembly Tool Kit (basic tools may be included)
- Installation and Usage Manual (this document)

If any parts are missing or damaged, please contact customer support immediately.

4. ASSEMBLY INSTRUCTIONS

Follow the numbered steps provided in the separate installation guide included with your product. The following general guidelines apply:

1. **Preparation:** Clear a spacious area for assembly. Lay out all parts on a soft, clean surface to prevent damage. Identify each part using the labels or diagrams in the installation guide.
2. **Hardware Identification:** Separate and identify all hardware components. Refer to the hardware list in your installation guide to ensure all pieces are present.
3. **Frame Assembly:** Begin by assembling the main frame of the TV stand according to the step-by-step diagrams. Ensure all connections are secure but do not overtighten screws until instructed.
4. **Shelf Installation:** Install the adjustable shelves into the designated slots. The shelves can be positioned at three different levels to accommodate various items.
5. **Drawer Assembly:** Assemble the four storage drawers. Pay attention to the orientation of drawer slides and panels.
6. **Drawer Installation:** Insert the assembled drawers into their respective compartments. Ensure they slide smoothly.
7. **Sliding Door Installation:** Attach the sliding door rails to the top of the TV stand. Then, hang the barn doors onto the rails, ensuring they slide freely.
8. **Final Tightening:** Once the entire unit is assembled, go back and gently tighten all screws and fasteners to ensure stability.
9. **Placement:** Carefully move the assembled TV stand to its desired location.

Note: *Assembly is best performed by two people for ease and speed.*



Product Dimensions



Figure 4.1: Product Dimensions.



Figure 4.2: Adjustable Shelf and Sliding Barn Door Design.

Well-Made Board



Figure 4.3: Top Surface Dimensions and Weight Capacity.



Figure 4.4: TV Stand accommodating TVs up to 70 inches. While the product title specifies up to 65 inches, the stand can physically support larger TVs, but ensure the TV base fits the stand's depth and weight capacity.

5. OPERATING INSTRUCTIONS

- **Sliding Barn Doors:** The two barn doors slide smoothly on metal rails. You can position them to cover the central open shelves or the side storage compartments, allowing you to conceal or display items as desired.
- **Storage Drawers:** The four storage drawers (two on each side) provide concealed storage for various items such as DVDs, remote controls, headphones, or other living room essentials. Pull them gently to open and push to close.
- **Adjustable Shelves:** The interior shelves are adjustable to three different height levels. To adjust, remove the shelf, reposition the shelf pins to the desired height, and then place the shelf back on the pins.
- **Cable Management:** The TV stand features pre-drilled holes in the back panel of the central compartment, allowing for easy routing and organization of cables for your electronic equipment.

Ample Storage Space |



Figure 5.1: Ample Storage Space in Drawers.



Figure 5.2: TV Stand with Central Shelves Exposed.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent moisture damage to the wood or laminate.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the finish.
- **Heat and Moisture:** Keep the TV stand away from direct heat sources and areas of high humidity. Use coasters under drinks to protect the surface.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary to maintain stability.
- **Sliding Mechanism:** If the barn doors do not slide smoothly, clean the rails and wheels. A small amount of silicone-based lubricant can be applied to the rails if needed.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
TV Stand is wobbly/unstable.	Loose fasteners; uneven floor.	Ensure all screws are tightened. Move to a level surface or use shims under the legs.
Sliding doors stick or are difficult to move.	Rails are dirty; wheels are obstructed; misaligned.	Clean the rails. Check for any obstructions. Ensure doors are properly hung on the rails.
Drawers do not slide smoothly.	Drawer slides are misaligned or damaged; drawer is overloaded.	Check drawer slide alignment and ensure they are securely attached. Reduce weight in the drawer.
Missing parts or damaged components.	Manufacturing error or shipping damage.	Do not proceed with assembly. Contact YESHOMY customer support immediately for replacement parts.

8. SPECIFICATIONS

Feature	Detail
Brand	YESHOMY
Model Name	TV Stand
Item Model Number	YH-0845KL
Color	Barnwood
Material	High-grade certified wood with tough laminate top
Product Dimensions (L x W x H)	58 x 15.5 x 27.6 inches (147.3 x 39.4 x 70.1 cm)
Item Weight	90 Pounds (40.8 kg)
Maximum TV Size Supported	Up to 65 inches (can physically accommodate up to 70 inches, but 65 inches is recommended for optimal fit as per product title)
Maximum Top Surface Weight Capacity	180 lbs (81.6 kg)
Mounting Type	Floor Mount
Assembly Required	Yes

9. WARRANTY AND SUPPORT

YESHOMY stands behind the quality of its products. While specific warranty details are not provided in this manual, please refer to your purchase documentation or the retailer's website for information regarding warranty coverage. For assistance with missing parts, damaged components, assembly questions, or any other product-related inquiries, please contact YESHOMY customer support. You may also be eligible for a 30-day easy return policy, depending on your

purchase terms.

For the most up-to-date support information, please visit the official YESHOMY store on Amazon:[YESHOMY Store](#)

© 2025 YESHOMY. All rights reserved.

Manual Version: 1.0