



[Manuals.plus](#) /

> [WERHY](#) /

> WERHY Electric Scooter H03/H5/H7PRO User Manual

## WERHY H03/H5/H7PRO

# WERHY Electric Scooter User Manual

Models: H03, H5, H7PRO

## IMPORTANT SAFETY INFORMATION

Read this manual carefully before operating your WERHY Electric Scooter. Failure to follow instructions can result in serious injury or property damage. Always wear a helmet and appropriate safety gear. Observe local laws and regulations regarding electric scooter use.

- Always wear a helmet and protective gear (knee pads, elbow pads).
- Do not ride in wet conditions, heavy rain, or through puddles.
- Avoid riding on uneven surfaces, potholes, or obstacles.
- Do not perform stunts or sudden maneuvers.
- Maintain a safe distance from other vehicles and pedestrians.
- Ensure the scooter is fully charged before each use.
- Regularly inspect the scooter for any damage or loose parts.
- Do not allow children under the recommended age to operate the scooter.
- Adhere to the maximum weight limit of 265 lbs.

## PRODUCT OVERVIEW

The WERHY Electric Scooter is designed for urban commuting and recreational riding, featuring a powerful motor, long-lasting battery, and smart app control.

### Key Features:

- **Motor:** 350W Brushless Motor for speeds up to 19 MPH and 15° incline climbing.
- **Tires:** 8.5-inch Solid Tires for maintenance-free use and better grip.
- **Battery:** High-capacity 187.2Wh battery, offering up to 16 miles range on a full charge (4-5 hours charging time). Features overload protection.
- **Braking System:** Dual Braking System (front electronic brake and rear mechanical drum brake) for reliable stopping power.
- **Lighting System:** Bright LED Headlight and integrated Taillight for enhanced visibility.
- **Portability:** Folding design for easy carrying and storage. Scooter weight: 27.9 lbs.
- **Smart Control:** APP control for speed adjustment, riding information monitoring, and personalized settings.
- **Display:** Smart LED Display showing speed, battery power, and power mode.



Image: WERHY Electric Scooter in use, showcasing its main performance features.

## SETUP

---

Follow these steps to prepare your scooter for its first ride.

1. **Unboxing:** Carefully remove the scooter and all accessories from the packaging.
2. **Unfolding:**
  - Locate the folding mechanism near the base of the handlebar stem.
  - Release the latch and carefully lift the handlebar stem until it locks into place. Ensure it is securely latched.
3. **Handlebar Assembly:**
  - Attach the handlebars to the stem, ensuring all cables are properly connected and not pinched.
  - Tighten any screws or clamps as instructed in the quick start guide (not provided here, refer to included documentation).
4. **Initial Charge:**
  - Before first use, fully charge the scooter's battery. Connect the charger to the charging port and then to a power outlet.

- The charging indicator will show the charging status. A full charge typically takes 4-5 hours.

5. **Tire Check:** Inspect the 8.5-inch solid tires for any visible damage. While solid, ensuring they are free of debris is important.

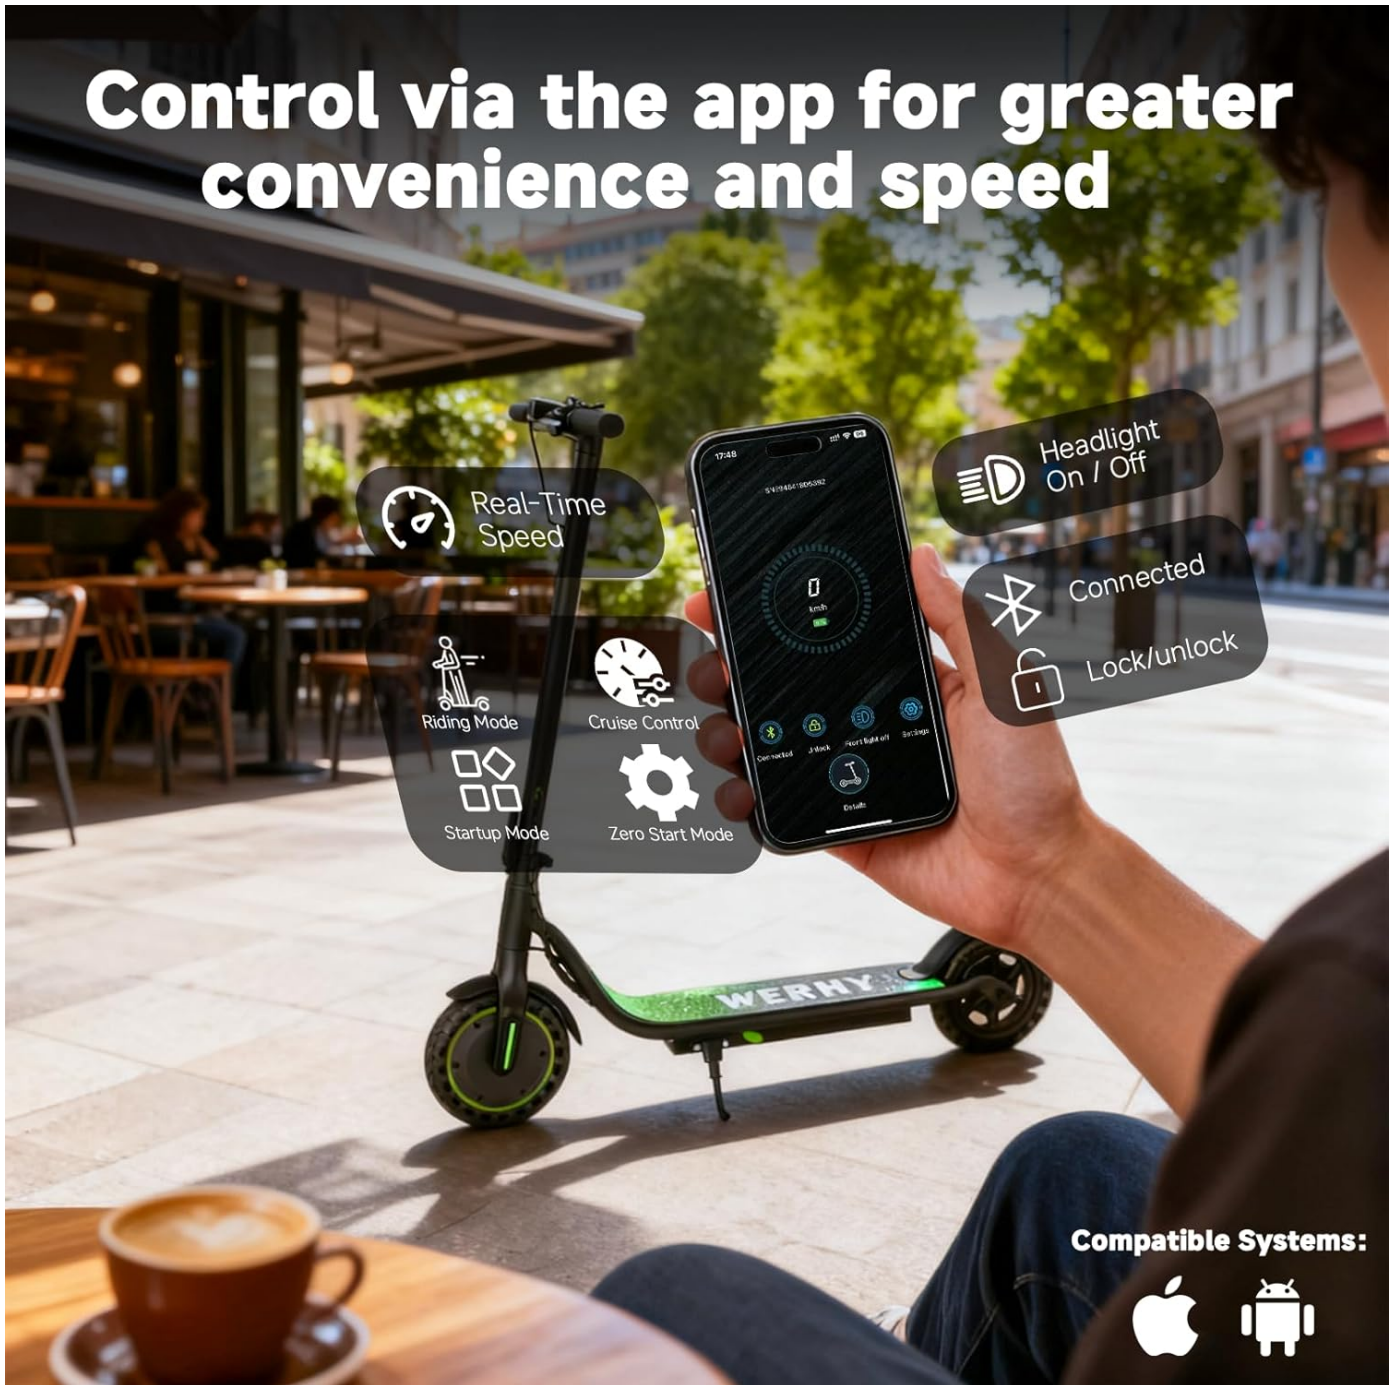


Image: The scooter in its folded state, demonstrating its portability.

## OPERATING INSTRUCTIONS

Learn how to safely operate your WERHY Electric Scooter.

1. **Power On/Off:** Press and hold the power button on the display for a few seconds to turn the scooter on or off.
2. **Speed Modes:** Your scooter features multiple speed modes.
  - Press the power button briefly to cycle through available speed modes (e.g., ECO, D, S).
  - The LED display will indicate the current mode and speed.
3. **Riding:**
  - Place one foot on the deck and push off with the other foot to gain initial momentum.
  - Once moving, gently press the throttle lever to accelerate.

- To brake, use the electronic brake lever on the handlebar and/or the mechanical drum brake.

4. **App Control:** Download the dedicated WERHY app to unlock additional features.

- Connect your scooter via Bluetooth.
- The app allows you to monitor real-time speed, adjust settings like cruise control, startup mode, and digital lock.
- You can also control the headlight and view battery status.

5. **Cruise Control:** To activate cruise control, maintain a steady speed for a few seconds. The scooter will beep, and the cruise control indicator will light up on the display. To deactivate, press the brake or throttle.



Image: The scooter's LED display and controls on the handlebar.

# Smart LED Display

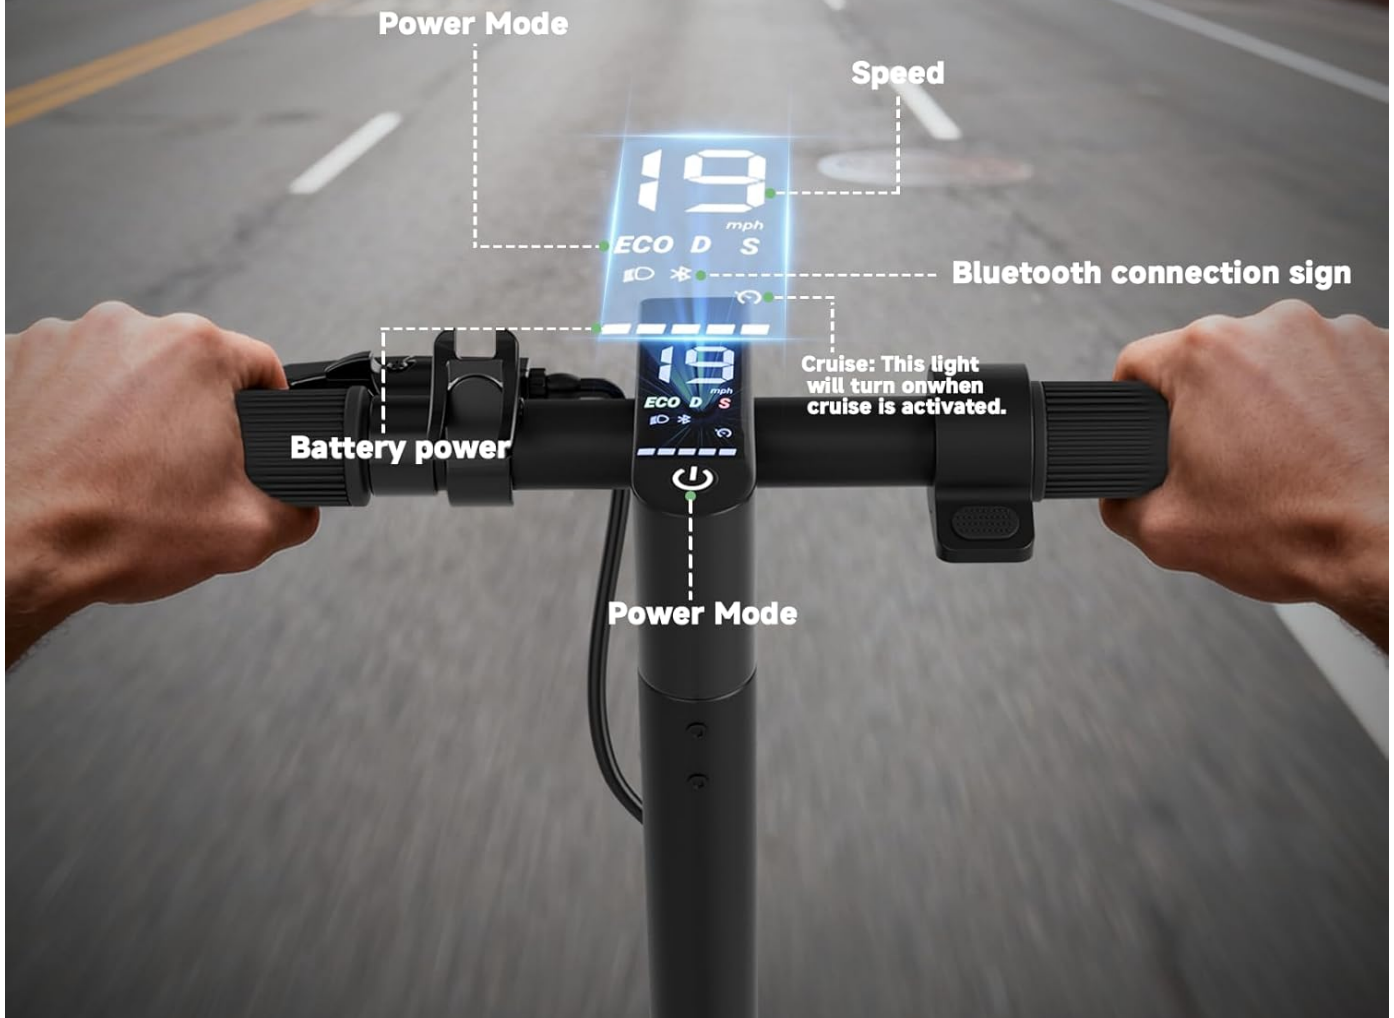


Image: Smartphone app interface for controlling the scooter.

## MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your scooter.

- **Cleaning:** Wipe down the scooter with a damp cloth after use. Do not use high-pressure water or immerse the scooter in water.
- **Battery Care:**
  - Charge the battery regularly, even if not in use, to maintain its health.
  - Avoid completely draining the battery.
  - Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Brake Inspection:** Periodically check the brake levers and cables for proper function and wear. Adjust if necessary.
- **Fastener Check:** Ensure all screws and bolts are tight before each ride.
- **Tire Condition:** Although solid, inspect tires for cuts, cracks, or embedded debris.

# Brushless Motor

More Durable, Stable, and Powerful

**19MPH**  
Top Speed



**15%**  
Uphill climbing



**350W**  
Brushless Motor



Image: Close-up of the dual braking system.

## TROUBLESHOOTING

Common issues and their potential solutions.

| Problem                    | Possible Cause  | Solution   |
|----------------------------|---|--|
| Scooter does not power on. | Low battery; loose connections.                               | Charge the battery fully. Check all cable connections.   |
| Reduced speed or range.    | Low battery; riding uphill; heavy load; incorrect speed mode. | Ensure battery is fully charged. Select Sport mode for maximum speed. Reduce load.             |
| Handlebar feels loose.     | Loose handlebar screws or folding mechanism.                  | Tighten all handlebar screws and ensure the folding mechanism is securely latched.             |
| App connectivity issues.   | Bluetooth off; app not updated; scooter not in pairing mode.  | Ensure Bluetooth is enabled on your phone. Restart the app and scooter. Check for app updates. |

If you encounter issues not listed here, please contact WERHY customer support.

## SPECIFICATIONS

| Feature                 | Detail  |
|-------------------------|---|
| Brand                   | WERHY   |
| Model Name              | H03/H5/H7PRO  |
| Motor Power             | 350W  |
| Top Speed               | Up to 19 MPH  |
| Maximum Distance Range  | Up to 16 Miles (Note: Product specifications list 15 Miles) |
| Battery Charge Time     | 4-5 Hours   |
| Weight Limit            | 265 Pounds  |
| Wheel Size              | 8.5 Inches  |
| Wheel Type              | Solid   |
| Brake Style             | Dual Braking System (Electronic Front, Mechanical Rear)     |
| Frame Material          | Aluminum  |
| Special Feature         | Cruise Control, Smart APP Control                           |
| Age Range (Description) | Adult   |
| Included Components     | Electric Scooter  |



**19 MPH**  
Top Speed



**15 Miles**  
Range



**15%**  
Uphill climbing



**350<sup>w</sup>**  
Brushless Motor



**APP** smart control



Image: Detailed view of the scooter's brushless motor and solid tire.

# Battery with overload protection for longer Battery Life



Overload Protection




Range 15Miles



Fast charging 4-5hours

# 36V

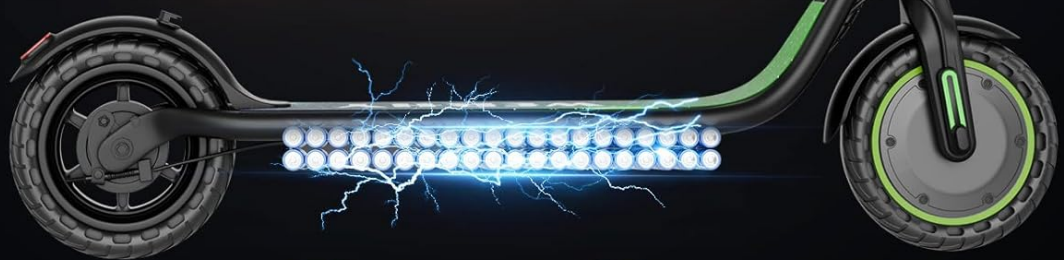

WERHY  
Electric Scooter

100%

<5hr

Image: Illustration of the scooter's battery capacity and charging features.

## WARRANTY AND SUPPORT

WERHY is committed to providing high-quality products. Your electric scooter comes with a limited warranty.

- **Warranty Period:** 12 months or 180 days for different parts. Please refer to the specific warranty details provided with your product for exact coverage.
- **Contact Support:** For any questions, issues, or warranty claims, please contact WERHY customer service. Refer to the contact information provided in your product packaging or on the official WERHY website.