

Manuals.plus /

› Hanzim /

› Hanzim 8oz Popcorn Machine Cart Instruction Manual

Hanzim W2841P272024

Hanzim 8oz Popcorn Machine Cart Instruction Manual

MODEL: W2841P272024

Important Safety Instructions

Please read all instructions carefully before operating the Hanzim 8oz Popcorn Machine Cart. Retain this manual for future reference.

- Always ensure the popcorn machine is placed on a stable, level surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only accessories recommended by the manufacturer.
- Do not use outdoors.
- Avoid contact with moving parts.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

Product Overview

The Hanzim 8oz Popcorn Machine Cart (Model W2841P272024) is designed for efficient popcorn production, suitable for both home and commercial environments. It features an 8-ounce stainless steel kettle, a heated deck, and a convenient cart design for portability.







Image: The Hanzim 8oz Popcorn Machine Cart, showcasing its classic design with a black finish and gold accents, mounted on a wheeled cart.

Key Components:

- **8oz Stainless Steel Kettle:** For popping corn.
- **Heated Deck:** Keeps popcorn warm after popping.
- **Old Maids Drawer:** Collects unpopped kernels for easy disposal.
- **Dual Switches:** Independent control for spotlight/warmer and agitator/pot heater.
- **Tempered Glass Panels:** Encloses the popping chamber.
- **Service Cart with Wheels:** Provides portability and includes a storage cabinet.



Image: Detailed view of the popcorn machine highlighting features such as the popcorn tray, sturdy handle, interior light, and storage bin.

Setup Instructions

1. **Unpacking:** Carefully remove all components from the packaging. Verify all parts are present according to the packing list.
2. **Assembly:** Assemble the cart according to the provided assembly guide (not included in this manual, refer to separate assembly instructions). This process typically involves attaching the wheels, legs, and the main popcorn machine unit to the cart base. The assembly may take approximately one hour.
3. **Placement:** Position the assembled popcorn machine cart on a flat, stable surface. Ensure adequate clearance around the unit for ventilation and safe operation. The cart's 14-inch bicycle-style tires allow for easy transport.
4. **Countertop Option:** The main popcorn machine unit can be detached from the cart for countertop use. Ensure the countertop is sturdy and can support the weight of the machine.



Image: The popcorn machine unit separated from its cart, demonstrating its capability for countertop placement.

- 5. Initial Cleaning:** Before first use, wipe down all interior surfaces, including the kettle, with a damp cloth. Ensure all parts are dry before plugging in the unit.
- 6. Power Connection:** Plug the power cord into a grounded electrical outlet.

Operating Instructions

This popcorn machine is designed to produce up to 3 gallons (32 cups) of popcorn per batch using its 8oz kettle.



Image: Visual representation of the popcorn machine's high capacity, showing an 8oz stainless steel kettle and a yield of 32 cups per batch.

1. Preheating the Kettle:

- Ensure the kettle is securely attached inside the popping chamber.
- Turn on the "Pot Heater" switch (often labeled "pop" or with a kettle icon). Allow the kettle to preheat for 3-5 minutes.

Convenient 2-Switch Control

Perfect popcorn at your fingertips



Image: Close-up of the control panel showing the 'light' (warmer) and 'pop' (pot heater/agitator) switches for convenient operation.

2. Adding Ingredients:

- Add 1 tablespoon of popcorn oil to the preheated kettle.
- Add 1/2 cup (8oz) of popcorn kernels to the kettle.
- Close the kettle lid.

3. Popping Process:

- The agitator will stir the kernels as they pop.
- Once popping slows significantly (approximately 2-3 minutes), turn off the "Pot Heater" switch.
- Carefully tilt the kettle to release all popped corn into the main chamber.

4. Keeping Popcorn Warm:

- Turn on the "Light" switch (often labeled "warmer" or with a light bulb icon) to activate the heated deck and interior light, keeping the popcorn warm and visible.

5. Serving:

- Open the front door and scoop out the popcorn.
- Season to taste.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and longevity of your popcorn machine.

1. Before Cleaning:

- Ensure the machine is unplugged from the power outlet.
- Allow the machine, especially the kettle, to cool completely before handling.

2. Cleaning the Kettle:

- Carefully remove the kettle from its mounting brackets.
- Wipe the interior and exterior of the kettle with a damp cloth and mild detergent. Avoid abrasive cleaners.
- Rinse thoroughly with a damp cloth and dry completely before reattaching.

3. Cleaning the Interior Chamber:

- Remove the old maids drawer located at the bottom of the chamber. Dispose of any unpopped kernels and debris.
- Wipe down the tempered glass panels and the heated deck with a damp cloth. For stubborn oil residue, use a mild, food-safe degreaser.
- Ensure all surfaces are dry before next use.

4. Exterior Cleaning:

- Wipe the exterior of the machine and cart with a soft, damp cloth.
- Do not use harsh chemicals or abrasive materials that could damage the finish.

Troubleshooting

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power switch off; circuit breaker tripped.	Ensure power cord is securely plugged into a working outlet. Check main power switch. Reset circuit breaker if necessary.
Kettle not heating.	"Pot Heater" switch off; kettle not properly connected.	Ensure "Pot Heater" switch is on. Verify kettle is correctly seated and connected to its power contacts.
Popcorn not popping or burning.	Insufficient preheating; old kernels; incorrect oil/kernel ratio; kettle too hot.	Allow kettle to preheat for 3-5 minutes. Use fresh popcorn kernels. Follow recommended oil and kernel measurements. Do not leave kettle heated for extended periods without ingredients.
Excessive unpopped kernels.	Insufficient oil; old kernels; kettle not hot enough.	Ensure proper oil amount. Use fresh kernels. Allow adequate preheating time for the kettle.

Specifications

Feature	Detail
Brand	Hanzim
Model Number	W2841P272024
Color	Black
Capacity	8 ounces (kettle), up to 32 cups (3 gallons) per batch
Special Feature	Non-Stick Kettle, Heated Deck, Old Maids Drawer, Portable Cart
Material	Stainless Steel, Tempered Glass
Product Dimensions (L x W x H)	20.47" x 14.76" x 47.44"
Item Weight	23 Pounds
Power	480W
Included Components	Wheels, Popcorn Machine Unit, Kettle, Old Maids Drawer



Image: Diagram illustrating the dimensions of the Hanzim Popcorn Machine Cart.

Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Hanzim website. Protection plans may be available for extended coverage; please consult your retailer for details.

For general inquiries, you may visit the Hanzim Store on Amazon.