

[Manuals.plus](#) /

› [Lynnoland](#) /

› Lynnoland Farmhouse Gold Chandelier Light Fixture (Model L240046P5) Instruction Manual

Lynnoland L240046P5

Lynnoland Farmhouse Gold Chandelier Light Fixture (Model L240046P5) Instruction Manual

Model: L240046P5

1. INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Lynnoland Farmhouse Gold Chandelier Light Fixture, Model L240046P5. Please read this manual thoroughly before beginning installation and retain it for future reference.



Image 1.1: Lynnloland Farmhouse Gold Chandelier Light Fixture, Model L240046P5.

2. SAFETY INFORMATION

WARNING: Risk of electric shock. Disconnect power at the circuit breaker or fuse box before installation or servicing. Consult a qualified electrician if you are unsure about the installation process.

- Read all instructions carefully before installation.
- All wiring must be in accordance with national and local electrical codes.
- Ensure the mounting surface can support the weight of the fixture.
- Do not connect this fixture to an ungrounded electrical system.
- Use only the specified bulb type and wattage (E26 base, max 40 watts per bulb).
- Do not touch the bulbs directly with bare hands during operation or immediately after turning off, as they can be hot.
- Keep flammable materials away from the light fixture.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation. If any parts are missing or damaged, contact customer service.

- Chandelier Fixture with Rattan & Linen Shade
- Mounting Hardware (Canopy, Mounting Plate, Screws, Wire Nuts)
- Adjustable Chain
- Instruction Manual
- *Note: Bulbs are not included.*

Premium Rattan Chandelier

– Durable & Green



100%

natural material



Handwoven

rattan shade



More friendly

to the environment



100% Natural

Abaca Rattan

Image 3.1: Detail of the chandelier's natural rattan and metal construction.

4. PRODUCT SPECIFICATIONS

Feature	Specification
---------	---------------

Brand	Lynnoland
Model Number	L240046P5
Dimensions (L x W x H)	18.8" x 18.8" x 52" (Adjustable Height)
Material	Linen, Metal, Rattan
Color	Gold (Fixture), Linen (Shade)
Number of Lights	5
Bulb Base	E26
Max Wattage per Bulb	40 Watts
Voltage	120 Volts
Power Source	Corded Electric
Mounting Type	Ceiling Mount
Assembly Required	Yes
Item Weight	7.58 pounds

Size Comparison

20 inch larger size, wider lighting



Image 4.1: Chandelier dimensions and adjustable chain feature.

5. ASSEMBLY AND INSTALLATION

Before you begin, ensure the power is turned off at the circuit breaker. It is recommended to have two people for installation.

Tools Required (Not Included):

- Phillips Head Screwdriver
- Wire Strippers
- Pliers
- Ladder
- Electrical Tape

Installation Steps:

1. **Turn Off Power:** Locate the circuit breaker controlling the light fixture's power supply and turn it off. Verify power is off using a voltage tester.

2. **Prepare Mounting Plate:** Attach the mounting plate to the junction box in the ceiling using the provided screws. Ensure it is securely fastened.
3. **Adjust Chain Length:** Determine the desired hanging height for your chandelier. Use pliers to open and remove excess chain links from the adjustable chain. Ensure the electrical wire is threaded through the chain and canopy.
4. **Wire Connections:**
 - Connect the fixture's ground wire (usually bare copper or green) to the house's ground wire and the mounting plate's ground screw.
 - Connect the fixture's hot wire (usually black) to the house's hot wire (black) using a wire nut.
 - Connect the fixture's neutral wire (usually white) to the house's neutral wire (white) using a wire nut.
 - Secure all wire connections with electrical tape.
5. **Secure Canopy:** Carefully push the wires into the junction box. Raise the canopy to the ceiling, aligning the screws on the mounting plate with the holes in the canopy. Secure the canopy with the decorative nuts or screws.
6. **Install Bulbs:** Screw five E26 base bulbs (not included, max 40W each) into the sockets.
7. **Restore Power:** Turn the power back on at the circuit breaker.

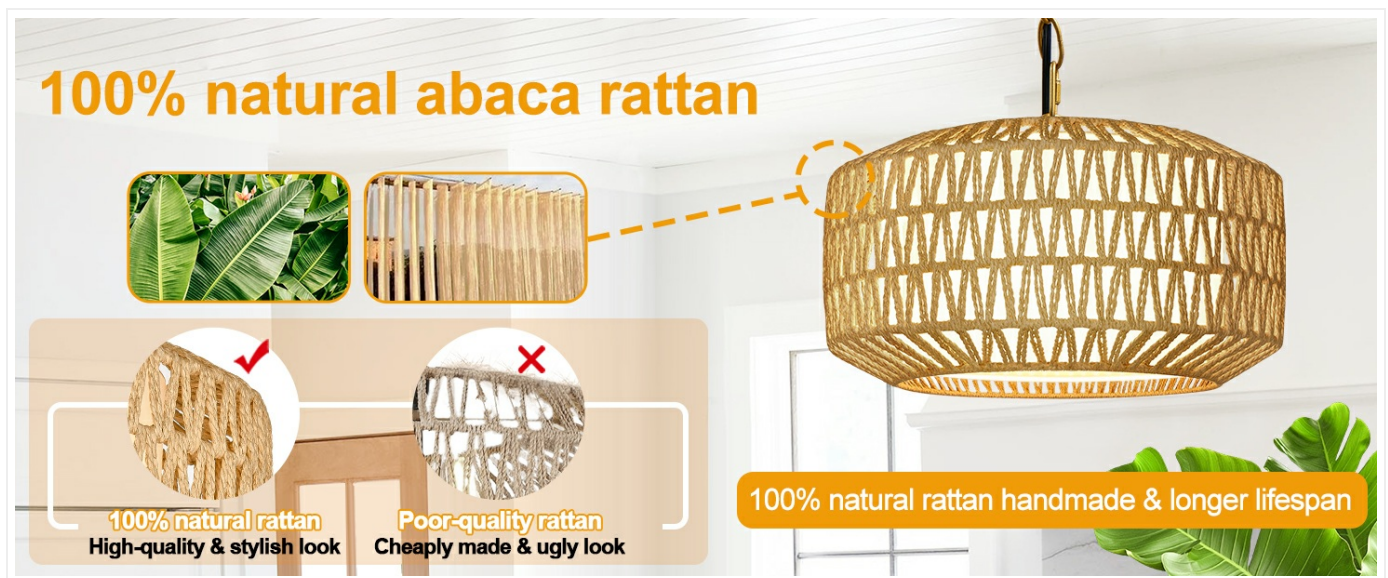


Image 5.1: General wiring and mounting diagram for ceiling light fixtures.

6. OPERATION

Once installed and power is restored, operate the chandelier using your standard wall switch. If using dimmable bulbs and a compatible dimmer switch (not included), you can adjust the light intensity.

- **Turning On/Off:** Use the wall switch connected to the fixture.
- **Dimming (Optional):** If dimmable bulbs and a dimmer switch are installed, adjust the dimmer switch to control brightness.

7. CARE AND MAINTENANCE

Regular care will help maintain the appearance and functionality of your chandelier.

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or rattan.
- **Bulb Replacement:** Ensure power is off and bulbs have cooled before replacing. Unscrew old bulbs and screw in new E26 base bulbs (max 40W).
- **Rattan Care:** The rattan lampshade is hand-woven. Minor imperfections are normal. Avoid excessive moisture or direct sunlight to preserve the rattan's integrity.

8. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

- **Light does not turn on:**
 - Check if the power is on at the circuit breaker.
 - Ensure bulbs are screwed in correctly and are not faulty.
 - Verify all wire connections are secure.
- **Flickering light:**
 - Ensure bulbs are fully tightened.
 - Check if bulbs are compatible with your dimmer switch (if applicable).
 - Inspect wire connections for looseness.
- **Fixture is loose:**
 - Ensure the mounting plate and canopy screws are securely tightened.

9. CUSTOMER SUPPORT

For any questions, missing parts, or issues not covered in this manual, please contact Lynnloland customer service. You can typically reach the seller through the "Contact Seller" option on the platform where you purchased the product. Please provide your model number (L240046P5) and a detailed description of the issue for prompt assistance.

Customer satisfaction is a top priority.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question