

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FOHERE](#) /

› [FOHERE Countertop Dishwasher Model TDQR01 User Manual](#)

FOHERE TDQR01

FOHERE Countertop Dishwasher Model TDQR01 User Manual

Model: TDQR01 | Brand: FOHERE

[Overview](#) [Safety Information](#) [What's in the Box](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#)
[Specifications](#) [Support](#)

1. PRODUCT OVERVIEW

The FOHERE Countertop Dishwasher Model TDQR01 is a compact and portable appliance designed for efficient dish cleaning in small living spaces such as apartments, RVs, and dorms. It offers flexible water supply options, multiple wash programs, and an integrated drying system for convenience.



Image 1.1: FOHERE Countertop Dishwasher Model TDQR01. This image shows the front view of the white countertop dishwasher with its door slightly ajar, revealing dishes inside.

2. SAFETY INFORMATION

Please read all instructions carefully before using the appliance to ensure safe operation and prevent damage. Keep this manual for future reference.

- Ensure the dishwasher is placed on a stable, level surface.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep children away from the appliance during operation.
- Use only detergents specifically designed for dishwashers.
- Do not open the door during a wash cycle, especially during high-temperature phases.
- Unplug the dishwasher from the power outlet before cleaning or maintenance.
- Do not attempt to repair or modify the appliance yourself. Contact qualified service personnel.

3. WHAT'S IN THE Box

Verify that all components are present upon unpacking:

- FOHERE Countertop Dishwasher Unit
- Cutlery Basket
- Inlet Hose
- Drain Hose
- Water Cup (for manual tank filling)
- Fruit Basket
- Fine Filter (2 included)
- User Manual (this document)



Image 3.1: Included Components. This image displays the dishwasher unit alongside its accessories: a water cup, fruit basket, fine filters, inlet hose, drain hose, and cutlery basket.

4. SETUP

4.1 Placement

Place the dishwasher on a flat, stable, and heat-resistant surface. Ensure there is adequate space around the unit for ventilation and door opening. The dimensions of the unit are approximately 15.5"D x 16.2"W x 17.8"H.



Image 4.1: Dishwasher Dimensions. This image shows the FOHERE countertop dishwasher with its width (16.2"), depth (15.5"), and height (17.8") clearly labeled.

4.2 Water Supply Options

The dishwasher offers two methods for water supply:

1. Built-in 5L Water Tank (Portable Operation):

For portable use without a direct faucet connection, fill the built-in 5-liter water tank. Use the provided water cup to pour water into the designated opening on top of the dishwasher. The unit will emit a sound (Di, Di, Di) when the tank is full.

2. Direct Faucet Connection:

Connect the included inlet hose to a standard kitchen faucet using the appropriate adapter. Ensure all connections are secure to prevent leaks. Once connected, open the water tap.



Tank Model

Fill 3 cups of water into tank,
Di,Di,Di will be sound if
tank is full



Tap Model

Connect the machine to the
tap and open the water tap



Image 4.2: Water Supply Methods. This image illustrates both the 'Tank Model' where water is poured into the top reservoir and the 'Tap Model' showing the connection of an inlet hose to a faucet.



Image 4.3: Detailed Water Supply. This image provides a closer look at filling the water tank manually and connecting the dishwasher to a tap.

4.3 Drain Hose Installation

Connect the drain hose to the designated outlet on the back of the dishwasher. Route the drain hose to a sink or drain bucket, ensuring it is securely positioned to prevent dislodgement during operation.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The control panel is located on the top front of the dishwasher. It features touch controls for power, program selection, delay start, and start/pause.

5+1 Washing Programs



Image 5.1: Control Panel and Programs. This image shows the dishwasher's control panel with icons for Dry, Normal, Quick, ECO, Baby Care, Fruit, Mode, Start/Pause, and Power. It also illustrates the different wash programs.

5 Programs & Drying & Delay Function



Image 5.2: Programs and Delay Function. This image highlights the control panel with its various program selections and the delay function.

5.2 Loading Dishes

Arrange dishes in the basket, ensuring they do not block the spray arms. The dishwasher can accommodate up to 4 full place settings, including 12" plates (when angled), 5 bowls, 4 cups, and 7 utensils. For optimal cleaning, avoid overcrowding.

Perfect for Daily Use by 2-3 People

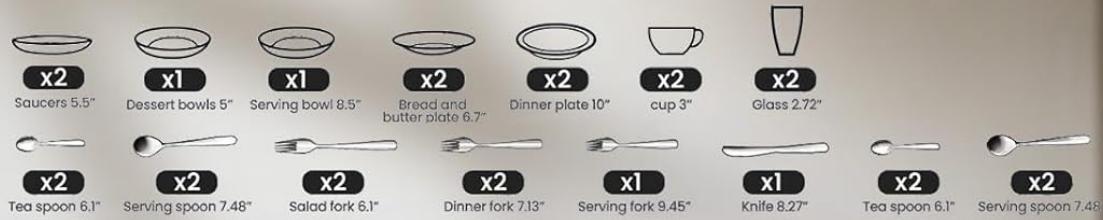


Image 5.3: Loading Capacity. This image demonstrates the internal capacity of the dishwasher, showing various dishes and cutlery arranged inside, along with an illustration of typical place settings it can hold.

5.3 Detergent Usage

The dishwasher is compatible with pods, powder, or liquid detergents. Add the appropriate amount of detergent to the dispenser before starting a cycle. **Note:** Do not use detergent for the Fruit cycle.

5.4 Wash Programs

Select the desired wash program using the "Mode" button on the control panel:

- **Normal:** For everyday dishes with typical soil levels. (Approx. 69 minutes, 154°F)

- **Quick:** A rapid wash cycle for lightly soiled dishes. (Approx. 29 minutes, 144°F)
- **ECO:** Energy-efficient program for standard loads. (Approx. 59 minutes, 154°F)
- **Baby Care:** High-temperature wash (167°F) for deep cleaning baby bottles and items. (Approx. 89 minutes)
- **Fruit:** Gentle rinsing cycle for fruits and vegetables without detergent. (Approx. 19 minutes)

The dishwasher features dual 360° spray arms with 14 high-pressure jets for thorough cleaning.

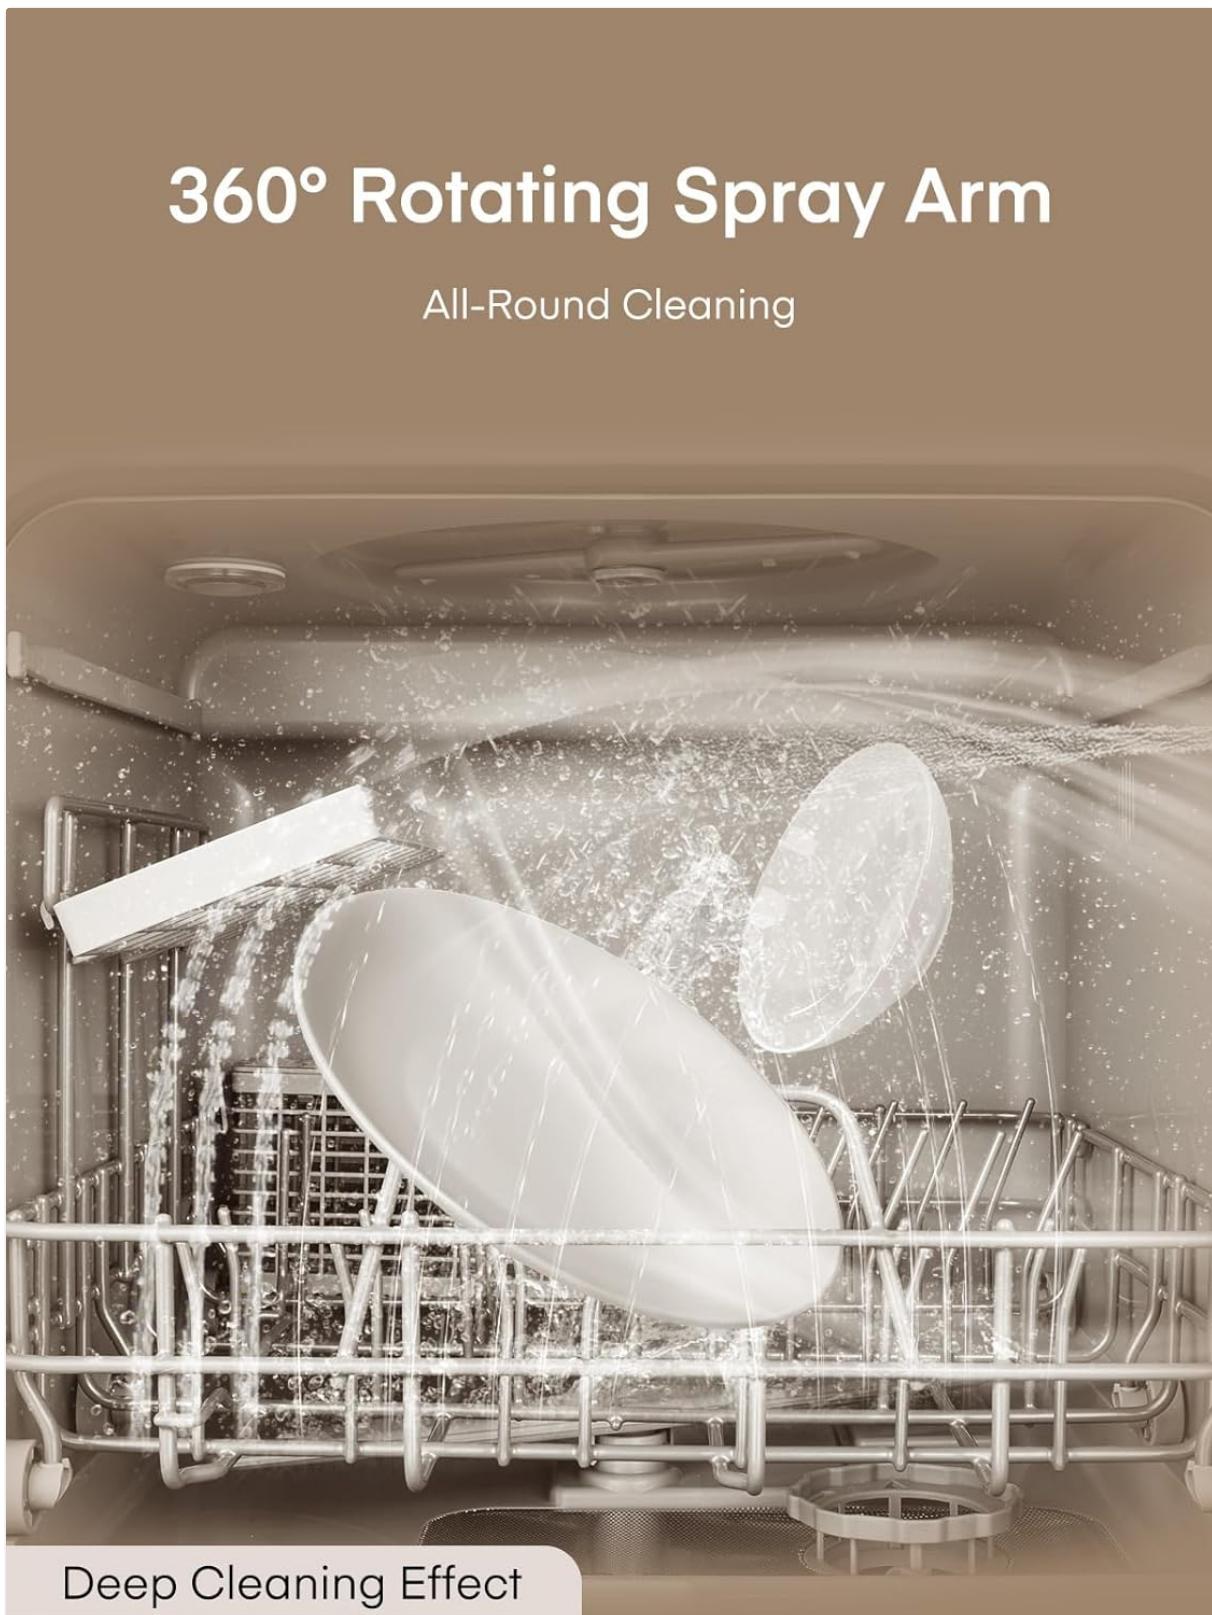


Image 5.4: 360° Rotating Spray Arm. This image shows the interior of the dishwasher with water jets actively spraying, highlighting the 360-degree rotating spray arm for comprehensive cleaning.

5.5 Delay Start Function

The delay start function allows you to postpone the start of a wash cycle by 1 to 24 hours. Press the "Mode" button for 3 seconds to activate and adjust the delay timer.



Image 5.5: Delayed Wash Function. This image illustrates the delay start feature, showing a timer set for 6 hours, emphasizing energy and time savings.

5.6 Drying and Ventilation

After a wash cycle, the dishwasher automatically initiates a 60-minute PTC hot air drying process. Additionally, a 72-hour auto ventilation system activates to keep dishes fresh and odor-free.

Hot Air Drying and Storage

72-hour ventilation and 1-hour hot drying ensure dishes dry and odor-free.



Image 5.6: Hot Air Drying and Storage. This image shows the dishwasher with a red glow inside, indicating the hot air drying function, and mentions the 72-hour ventilation feature.

6. MAINTENANCE


6.1 Cleaning the Filter System

Regular cleaning of the filter system is crucial for optimal performance. The filter is easily removable:

1. Rotate the filter set anticlockwise to disassemble it.
2. Rinse the filter components under running water to remove food particles.

3. Reassemble the filter set by rotating clockwise until secure.

Filtering System Easy to Clean

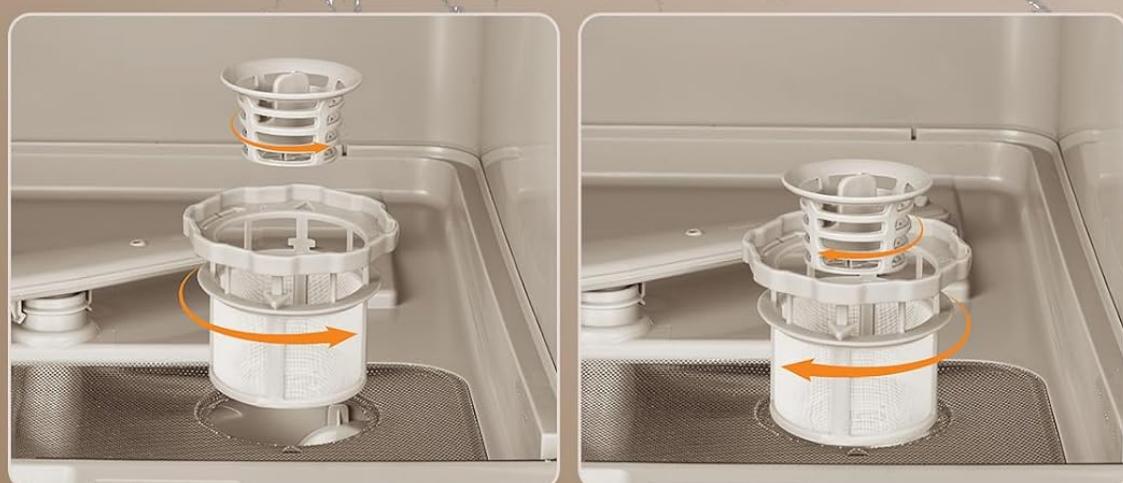

Rotate anticlockwise to disassemble the filter set

After cleanning, Rotate clockwise

Image 6.1: Filtering System Easy to Clean. This image demonstrates the process of disassembling and reassembling the dishwasher's filter for cleaning.

6.2 General Cleaning

Wipe the exterior of the dishwasher with a soft, damp cloth. For the interior, periodically run a cleaning cycle with a dishwasher cleaner or a cup of white vinegar to remove mineral buildup and odors.

7. TROUBLESHOOTING

Refer to the table below for common issues and their potential solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; No water supply.	Check power connection; Ensure door is latched; Verify water tank is full or faucet is open.
Dishes are not clean	Improper loading; Clogged spray arms; Insufficient detergent; Clogged filter.	Reload dishes correctly; Clean spray arm nozzles; Add appropriate detergent; Clean filter system.
Water not draining	Clogged drain hose; Clogged filter.	Check and clear drain hose; Clean filter system.
Dishwasher leaks	Loose hose connections; Damaged door seal.	Tighten hose connections; Inspect and replace door seal if damaged.
Unpleasant odor	Food residue in filter or interior; Infrequent cleaning.	Clean filter and interior thoroughly; Run a cleaning cycle.


8. SPECIFICATIONS

Feature	Detail
Model Name	TDQR01
Brand	FOHERE
Installation Type	Countertop
Product Dimensions (D x W x H)	15.5" x 16.2" x 17.8" (39.4 cm x 41.1 cm x 45.2 cm)
Item Weight	34.1 Pounds (15.47 kg)
Capacity	5 Liters (Built-in Water Tank)
Voltage	120 Volts
Annual Energy Consumption	150 Kilowatt Hours
Wash Programs	Normal, Quick, ECO, Baby Care, Fruit
Special Features	Delay Start (1-24h), 360° Dual Spray, 167° High-Temp Wash (Baby Care), PTC Hot Air Drying (60 min), Auto Ventilation (72h)
Controls Type	Touch
Material	Stainless Steel (Interior), Polyethylene (PE) (Basket)
Noise Level	50 dB

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the contact information provided with your purchase documentation or visit the official FOHERE website. Keep your purchase receipt as proof of purchase.

Related Documents - TDQR01

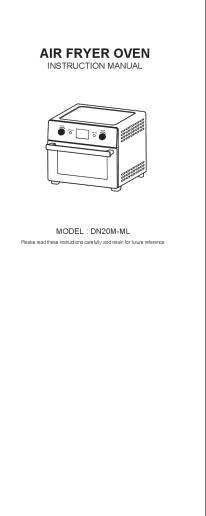	<p><u>NOVETE Compact Countertop Dishwasher TDQR01 User Manual</u></p> <p>This user manual provides comprehensive instructions for the NOVETE Compact Countertop Dishwasher, Model TDQR01. It covers important safety instructions, safeguards, installation, technical specifications, operating instructions, cleaning and maintenance, error codes, and troubleshooting.</p>
	<p><u>NOVETE Compact Countertop Dishwasher TDQR01 User Manual</u></p> <p>User manual for the NOVETE Compact Countertop Dishwasher, Model TDQR01. Provides detailed instructions on safety, installation, operation, cleaning, maintenance, troubleshooting, and error codes for optimal use.</p>
	<p><u>Novete Compact Countertop Dishwasher TDQR01 User Manual</u></p> <p>Comprehensive user manual for the Novete Compact Countertop Dishwasher, Model TDQR01. Includes safety instructions, installation guides, operating procedures, maintenance tips, troubleshooting, and error codes.</p>
	<p><u>HAVA Compact Countertop Dishwasher TDQR01 User Manual</u></p> <p>This user manual provides comprehensive instructions for the HAVA Compact Countertop Dishwasher, Model TDQR01. It covers important safety instructions, safeguards, installation, technical specifications, operating instructions, cleaning and maintenance, error codes, and troubleshooting.</p>
	<p><u>Foheré Electric Kettle Instruction Manual - Safety, Usage, and Maintenance Guide</u></p> <p>This comprehensive instruction manual for the Foheré electric kettle provides essential safety guidelines, operating instructions, temperature settings, and cleaning and maintenance procedures. Learn how to safely use and care for your appliance.</p>
	<p><u>FOHERE DN20M-ML Air Fryer Oven Instruction Manual</u></p> <p>User manual for the FOHERE DN20M-ML Air Fryer Oven, detailing setup, operation, safety, maintenance, and troubleshooting for household use.</p>



[\[pdf\]](#)

Constructional Data Report Standard Gil Diaz 325706 4840803 ETL Countertop Dishwasher With Delay Start No Hookup Needed 5 1 Wash Programs 360° Dual Spray 167° High temp 5l Built in Tank Portable For Apartments Rvs Small Homes FOHERE fhbr1042 TDQR01FOHERE TDQR01325706 etl secure img1 ag wfcdn dm document eb006208 2b91 4fc8 a7c6 c9dd1210516c etl ||| AUTHORIZATION TO MARK This authorizes the application of the Certification Mark s shown below to t ... , TSJR01, TSQR01, TSJ05, TSQ05, TSJR05, TSQR05, TSJ03, TSQ03, TSJR03, TSQR03, TDJ01, TDQ01, TDJR01, **TDQR01**, TDJ05, TDQ05, TDJR05, TDQR05, TDJ03, TDQ03, TDJR03, TDQR03, TZJ01, TZQ01, TZJR01, TZQR01, TZ...

lang:en **score:16** filesize: 133.43 K page_count: 1 document date: 2022-05-17