

ZTE Blade A76

ZTE Blade A76 5G Smartphone User Manual

Model: Blade A76

INTRODUCTION

This manual provides essential information for the proper use and maintenance of your ZTE Blade A76 5G smartphone. Please read this guide thoroughly before operating your device to ensure optimal performance and longevity. Keep this manual for future reference.

PACKAGE CONTENTS

Upon opening the package, verify that all items are present and in good condition:

- ZTE Blade A76 5G Smartphone
- USB Cable (Type-A to Type-C)
- Protective Case
- Screen Protector
- User Manual (this document)

DEVICE OVERVIEW

Familiarize yourself with the physical components and design of your ZTE Blade A76 5G.



Image: Multiple views of the ZTE Blade A76 5G, showcasing the front display, side buttons, top and bottom ports, and the rear camera module.



Image: Close-up view of the rear of the ZTE Blade A76 5G, highlighting the circular camera module with its dual lenses and LED flash.

SETUP

1. SIM Card and Storage Card Installation

Your ZTE Blade A76 5G supports dual SIM cards and does not feature a microSD card slot for expansion. Use the provided SIM ejector tool to open the SIM tray. Insert your Nano-SIM cards into the designated slots. Ensure the tray is fully inserted to prevent dust and moisture ingress.

2. Initial Power On

Press and hold the Power button (located on the right side of the device) until the ZTE logo appears. Follow the on-screen prompts to complete the initial setup process.

3. Basic Setup

During the initial setup, you will be guided through connecting to a Wi-Fi network, setting up your Google account, and configuring basic security features like screen lock.

OPERATING INSTRUCTIONS

Display and Navigation

The device features a 6.75-inch HD+ IPS LCD with a 120Hz refresh rate for smooth scrolling. Navigate the interface using touch gestures: tap to select, swipe to scroll, pinch to zoom.

Camera Usage

Your phone is equipped with a 50 MP main rear camera and an 8 MP front camera. Open the Camera app to capture photos and videos. The rear camera supports video recording up to 4K at 30 frames per second.

Doppia fotocamera AI da 50MP

Cattura foto dettagliate e accattivanti con la doppia fotocamera AI da 50MP, che offre maggiore nitidezza e dettagli.



*L'immagine è solo di riferimento.

Image: A sample photograph taken with the ZTE Blade A76 5G camera, showing a golden retriever dog with soap bubbles, demonstrating image clarity.

Connectivity

- **5G Network:** The device supports 5G connectivity for faster data speeds. Ensure your SIM card and

plan support 5G.

- **Wi-Fi:** Connect to wireless networks via Settings > Network & internet > Wi-Fi.
- **Bluetooth 5.2:** Pair with Bluetooth devices like headphones or speakers via Settings > Connected devices > Bluetooth.
- **NFC:** (Near Field Communication) For contactless payments and quick pairing, enable NFC in Settings > Connected devices > Connection preferences. Availability may vary by region.
- **USB-C:** Use the USB-C port for charging and data transfer.
- **3.5mm Headphone Jack:** Connect wired headphones for audio.

Security Features

Your device offers multiple security options:

- **Side-Mounted Fingerprint Scanner:** Register your fingerprints in Settings > Security & privacy > Device unlock.
- **Facial Recognition:** Set up face unlock for convenient access in the same security settings.



Image: Illustrative image showing icons for fingerprint and facial recognition, representing the biometric security features of the smartphone.

Battery Management

The 5000 mAh battery provides extended usage. To optimize battery life:

- Adjust screen brightness.
- Enable Battery Saver mode.
- Close unused apps running in the background.
- Use the included 18W USB-C charger for fast charging.

MAINTENANCE

Software Updates

Regularly check for system updates to ensure your device has the latest features and security patches. Go to Settings > System > System update.

Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of the phone. Avoid harsh chemicals or abrasive materials. The device has an IP54 splash resistance rating, but it is not fully waterproof; avoid submerging it in liquids.

Storage Management

Your device comes with 128 GB of internal storage. Regularly review and delete unnecessary files, apps, and media to free up space and maintain performance. You can check storage usage in Settings > Storage.

TROUBLESHOOTING

Common Issues

- **Device not turning on:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Apps crashing or freezing:** Close the app and reopen it. If the issue persists, clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache).
- **Poor network signal:** Check your SIM card installation. Move to an area with better network coverage.
- **Battery draining quickly:** Refer to the Battery Management section for tips.

Factory Reset

If you experience persistent software issues, a factory reset may resolve them. This will erase all data on your phone. Back up important data before proceeding. Go to Settings > System > Reset options > Erase all data (factory reset).

SPECIFICATIONS

| Feature | Specification |
|------------------|---|
| Model Name | Blade A76 |
| Operating System | Android 14 |
| Processor | Mediatek Dimensity 920 |
| RAM | 4 GB (expandable dynamically up to 10 GB) |
| Internal Storage | 128 GB |
| Display | 6.75-inch HD+ IPS LCD, 720 x 1612 pixels, 120Hz refresh rate, 262 ppi |
| Rear Camera | 50 MP (f/1.8) + 2 MP Depth Sensor |
| Front Camera | 8 MP |
| Video Recording | Up to 4K@30fps |

| | |
|----------------------|---|
| Battery Capacity | 5000 mAh |
| Charging | 18W USB-C Fast Charging |
| Connectivity | 5G, Wi-Fi, Bluetooth 5.2, NFC (region dependent), GPS |
| SIM Card Slots | Dual SIM (Nano) |
| Biometric Security | Side-mounted Fingerprint Sensor, Facial Recognition |
| Water Resistance | IP54 Splash Resistant |
| Dimensions (Approx.) | 6.7 inches (display size) |
| Weight | 203 Grams |

WARRANTY INFORMATION

Your ZTE Blade A76 5G smartphone is covered by a limited manufacturer's warranty. The duration and terms of the warranty may vary by region and local laws. Please refer to the warranty card included in your product packaging or visit the official ZTE website for detailed information regarding warranty coverage, terms, and conditions. Keep your proof of purchase for warranty claims.

SUPPORT

For further assistance, technical support, or service inquiries, please contact ZTE customer service. You can find contact information on the official ZTE website or through the support section of your device's settings. Ensure you have your device's model number and serial number ready when contacting support.