

[Manuals.plus](#) /

› [Owala](#) /

› Owala FreeSip Sway Stainless Steel Water Bottle - 30 oz - Lightly Toasted - Instruction Manual

Owala C07362

Owala FreeSip Sway Stainless Steel Water Bottle - 30 oz - Lightly Toasted

Instruction Manual

INTRODUCTION

The Owala FreeSip Sway is an insulated stainless steel water bottle designed for daily hydration. It features a unique 2-in-1 FreeSip spout, allowing for both sipping through a built-in straw and swigging directly from the spout. This 30-ounce model is crafted from durable, BPA-free materials and includes triple-layer insulation to keep beverages cold for extended periods. Its design incorporates a sturdy bucket handle for easy portability and a tapered shape for compatibility with most cup holders.



Image: The Owala FreeSip Sway 30 oz water bottle in Lightly Toasted color, showcasing its sleek design.

SETUP

1. **Unpack:** Carefully remove all packaging materials from your Owala FreeSip Sway water bottle.
2. **Initial Cleaning:** Before first use, hand wash the bottle body with warm, soapy water. The lid is dishwasher safe (top rack recommended) and can be easily disassembled for thorough cleaning. Rinse all components thoroughly.
3. **Assemble:** Ensure the straw is securely inserted into the lid's sipping mechanism. Reassemble the lid components if they were separated for cleaning.

Your Owala FreeSip Sway is now ready for use.

OPERATING INSTRUCTIONS

Filling the Bottle

- Twist the lid counter-clockwise to remove it from the bottle.
- Fill the bottle with your desired cold beverage. The wide-mouth opening allows for easy addition of ice cubes.

- Twist the lid clockwise until securely tightened to prevent leaks.

Using the FreeSip Spout

 


Image: A detailed view of the FreeSip spout, illustrating the built-in straw for sipping and the wider opening for swigging.

- Press the button on the front of the lid to release the spout cover.
- **Sip:** For upright drinking, use the built-in straw.
- **Swig:** For a larger gulp, tilt the bottle back and drink from the wider opening.
- Close the spout cover by pushing it down until it clicks into place.

Leak-Proof Lock

 


Image: The leak-proof lock mechanism on the lid, demonstrating how to slide the tab to secure the spout cover.

- To prevent accidental opening and leaks, slide the lock tab located near the spout button.
- Ensure the spout cover is fully closed before engaging the lock.

Carrying and Compatibility

 


Image: The comfortable bucket handle, designed for easy carrying and transport.

- Use the ergonomic bucket handle for comfortable carrying.
- The tapered base is designed to fit most standard cup holders.

 


Image: A view of the bottle's base and side, emphasizing its triple-layer insulation and compatibility with cup holders.

MAINTENANCE AND CLEANING

Cleaning Instructions

- **Bottle Body:** Hand wash the stainless steel bottle body with warm, soapy water. Do not place the bottle body in the dishwasher to preserve its insulation properties and finish.
- **Lid:** The lid is dishwasher safe (top rack only). For thorough cleaning, the lid can be easily disassembled. Remove the straw and any other detachable parts before washing.
- **Straw:** Clean the straw with a straw brush and warm, soapy water.
- Rinse all components thoroughly after washing and allow them to air dry completely before reassembly.

Important Notes

- Do not use abrasive cleaners or scrubbers on any part of the bottle.
- Not for use with hot liquids. This bottle is designed for cold beverages only.
- Ensure all parts are dry before storing to prevent mold or odors.

TROUBLESHOOTING

- **Leakage:** If the bottle leaks, ensure the lid is securely tightened and the spout cover is fully closed and locked. Check that the silicone gasket inside the lid is properly seated and free from debris.

- **Reduced Insulation:** If your beverage is not staying cold for the expected duration, ensure the lid is tightly sealed and the bottle has not been exposed to extreme heat, which can affect the vacuum insulation.
- **Difficulty Sipping:** If you experience difficulty sipping through the straw, check that the straw is properly inserted and not obstructed. Ensure the spout cover is fully open.

SPECIFICATIONS

Feature	Detail
Brand	Owala
Model Name	Owala FreeSip Sway
Model Number	C07362
Capacity	30 Fluid Ounces
Material	Stainless Steel
Color	Lightly Toasted
Insulation	Triple-layer, keeps drinks cold up to 24 hours
Spout Type	FreeSip (2-in-1: sip and swig)
Lid Features	Push-button, leak-proof, locking mechanism
Handle	Ergonomic bucket handle
Dimensions (W x H)	4.13"W x 10.51"H
Weight	0.48 Kilograms
Care Instructions	Hand wash cup, lid is dishwasher safe
Safety	BPA, lead, and phthalate-free

 


Image: A visual comparison of the 30 oz and 40 oz FreeSip Sway bottles, detailing their dimensions.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the official Owala website or contact Owala customer service directly. Keep your purchase receipt as proof of purchase.

Website: www.owalalife.com

Manufacturer: BlenderBottle