

[Manuals.plus](#) /

› [Frigidaire](#) /

› Frigidaire 10 Cu. Ft. Upright Convertible Fridge/Freezer User Manual

Frigidaire EFRF10606COM

Frigidaire 10 Cu. Ft. Upright Convertible Fridge/Freezer User Manual

Model: EFRF10606COM

1. PRODUCT OVERVIEW

The Frigidaire 10 Cu. Ft. Upright Convertible Fridge/Freezer is a versatile appliance designed to meet the diverse storage needs of busy households. Its unique convertible feature allows seamless switching between freezer and refrigerator modes, providing flexible storage solutions. With a generous 10 cubic feet capacity, it offers ample space for groceries, bulk purchases, and prepared meals, ensuring your food stays fresh and organized.

Key Features:

- **Convertible Functionality:** Easily switch between freezer and refrigerator modes with a single click to adapt to your changing storage needs.
- **Large Capacity:** Generous 10 cu. ft. capacity provides ample space for all your food storage needs.
- **Frost-Free Operation:** Advanced technology eliminates the need for manual defrosting, even when converting modes.
- **Precise Temperature Control:** Electronic controls allow for effortless adjustment and maintenance of optimal temperatures.
- **Organized Storage:** Features four spill-proof shelves, one crisper drawer, and four door bins for efficient organization.
- **Reversible Door:** Door hinges can be reversed to open from either the left or right side, offering flexible placement options.



Figure 1: Front view of the Frigidaire 10 Cu. Ft. Upright Convertible Fridge/Freezer.

2. SETUP GUIDE

2.1 Unpacking

- Carefully remove all packaging materials, including tape and protective films.
- Inspect the appliance for any shipping damage. Report any damage immediately to your retailer.
- Ensure all included accessories, such as shelving, are present.

2.2 Placement

- Place the appliance on a flat, stable surface capable of supporting its weight (approximately 100 pounds) when fully loaded.
- Allow at least 4 inches (10 cm) of space around the sides, back, and top for proper air circulation and cooling efficiency.
- Avoid direct sunlight or heat sources (e.g., ovens, radiators) to prevent increased energy consumption.
- This freestanding unit is suitable for various locations including kitchens, garages, basements, or utility rooms.

2.3 Power Connection

- Ensure the power outlet is a standard 110 Volt, 3-prong grounded outlet.
- Do not use extension cords or ungrounded adapters.
- Plug the appliance directly into a dedicated wall outlet.

2.4 Door Reversal (Optional)

- The door hinges are reversible. Refer to the detailed instructions in the full product manual for steps on how to change the door swing direction if desired.

2.5 Initial Cleaning

- Before first use, clean the interior and exterior surfaces with a mild detergent and warm water.
- Wipe dry thoroughly with a soft cloth.

3. OPERATING INSTRUCTIONS

3.1 Converting Modes (Fridge/Freezer)

- This appliance can function as either a refrigerator or a freezer.
- To switch modes, locate the electronic controls, typically on the top front of the unit.
- Follow the on-screen prompts or button indicators to select your desired mode (refrigerator or freezer). The unit will adjust its temperature settings automatically.

3.2 Temperature Control

- The electronic controls allow for precise temperature adjustments.
- In refrigerator mode, typical temperatures range from 34°F to 40°F (1°C to 4°C).
- In freezer mode, typical temperatures range from -10°F to 0°F (-23°C to -18°C).
- Adjust the temperature setting based on your storage needs and ambient conditions.

3.3 Organizing Contents

- Utilize the four spill-proof shelves to arrange items efficiently. Shelves can be adjusted or removed to accommodate larger items.
- The crisper drawer is ideal for storing fruits and vegetables in refrigerator mode.
- The four door bins provide convenient storage for bottles, jars, and smaller items.
- The interior LED light illuminates the contents for easy viewing.



Figure 2: Interior layout with adjustable shelves and crisper drawer.

4. CARE AND MAINTENANCE

4.1 Cleaning

- **Interior:** Clean the interior regularly with a solution of mild soap and warm water. Remove shelves and bins for thorough cleaning. Rinse and dry completely before returning them.
- **Exterior:** Wipe the exterior with a soft cloth and mild detergent. For the platinum finish, use a non-abrasive cleaner specifically designed for stainless steel if needed.
- **Door Gasket:** Clean the door gasket regularly to ensure a tight seal.

4.2 Frost-Free Operation

- This appliance features frost-free technology, which automatically prevents ice buildup. Therefore, manual defrosting is generally not required.
- Ensure the door is always closed properly to maintain efficiency and prevent frost formation.

4.3 Power Outage

- In case of a power outage, keep the appliance door closed to maintain internal temperature for as long as possible.
- Food can remain frozen for several hours if the door is not opened frequently.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply; power cord unplugged; circuit breaker tripped.	Check power connection; reset circuit breaker.
Temperature is not cold enough.	Door not closed properly; frequent door openings; temperature setting too high; excessive food load.	Ensure door is sealed; reduce door openings; adjust temperature setting; allow space for air circulation.
Unusual noises.	Appliance not level; items vibrating inside; normal operating sounds (e.g., refrigerant flow).	Level the appliance; rearrange items; normal sounds are expected.
Excessive frost buildup (in freezer mode).	Door left ajar; warm/humid air entering frequently.	Ensure door is fully closed; minimize door openings.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Frigidaire
Model Number	EFRF10606COM
Capacity	10 Cubic Feet
Dimensions (D x W x H)	22.44 x 21.26 x 60 inches
Item Weight	100 Pounds
Installation Type	Freestanding
Color	Platinum
Voltage	110 Volts
Shelves	4 (Spill-proof)

Feature	Detail
Crisper Drawers	1
Door Bins	4
Door Hinges	Reversible
Defrost System	Frost-Free
Special Features	Low Noise, Interior LED Light
Annual Energy Consumption	200 Kilowatt Hours Per Year

7. WARRANTY AND SUPPORT

7.1 Warranty Information

For detailed warranty information, please refer to the warranty card included with your product or visit the official Frigidaire website. Keep your proof of purchase for warranty claims.

7.2 Customer Support

If you encounter any issues or have questions regarding your Frigidaire appliance, please contact Frigidaire Customer Support. Contact details can typically be found on the official Frigidaire website or in the documentation provided with your product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FDSYQS9V>

More documents and user manuals: <https://manuals.plus/>