

[Manuals.plus](#) /

› [Haute Decor](#) /

› Haute Decor 9 Foot Queensbury Fir Christmas Tree with 2700 8-Function LED Lights Instruction Manual

Haute Decor DCCT0905

Haute Decor 9 Foot Queensbury Fir Christmas Tree with 2700 8-Function LED Lights Instruction Manual

Model: DCCT0905

INTRODUCTION

Thank you for choosing the Haute Decor 9 Foot Queensbury Fir Christmas Tree. This manual provides essential information for the safe and proper assembly, operation, and maintenance of your pre-lit artificial Christmas tree. Please read these instructions carefully before setup and retain them for future reference.

This tree features 2700 cluster 8-function LED lights, Easy-Shape branches with memory wire for convenient shaping, and Instant Light technology for simplified assembly.





Image: The Haute Decor 9 Foot Queensbury Fir Christmas Tree illuminated with warm white LED lights, showcasing its full, natural appearance.

SAFETY INFORMATION

- For indoor use only. Do not use this product outdoors.
- Always unplug the tree from the power outlet before assembling, disassembling, or performing any maintenance.
- Do not overload electrical outlets. Ensure the power source meets the tree's electrical requirements.
- Keep children and pets away from the tree during assembly and ensure all parts are securely connected.
- Do not place the tree near heat sources, open flames, or flammable materials.

- Inspect the power cord and lights for any damage before each use. Do not use if damaged.
- Do not attempt to modify or repair the lighting system. Contact customer support if issues arise.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Tree Sections (typically 3-4 sections, labeled A, B, C, etc., from bottom to top)
- Metal Tree Stand
- Foot Pedal for Light Control
- Instruction Manual (this document)

SETUP INSTRUCTIONS

1. **Assemble the Tree Stand:** Open the metal tree stand and ensure it is stable and locked into position. Place it on a flat, level surface.
2. **Insert Bottom Section:** Carefully insert the bottom tree section (usually labeled 'A') into the assembled tree stand. Tighten the thumb screws on the stand to secure the pole.
3. **Connect Middle Sections:** Insert the next tree section (labeled 'B') into the top of section 'A'. Due to Instant Light technology, the lights should illuminate automatically as sections connect. Continue with subsequent sections (e.g., 'C', 'D') until all sections are assembled.





Image: The Haute Decor Queensbury Fir Christmas Tree assembled but before branches are fully shaped, showing the dense foliage.

4. **Connect Power:** Locate the power cord extending from the base of the tree. Connect the foot pedal to the power cord, then plug the foot pedal into a standard electrical outlet.
5. **Shape the Branches:** Begin shaping the branches from the bottom section upwards. The Easy-Shape branches with memory wire allow for minimal effort. Gently spread out each branch and individual tips to fill any gaps and achieve a full, natural appearance. Ensure all tips are fanned out evenly.

OPERATING THE LED LIGHTS

Your Haute Decor Queensbury Fir Christmas Tree features 2700 cluster LED lights with 8 distinct functions, controlled by a convenient foot pedal.



8 Light Modes & Color Changing

- | | | |
|-------------------------|---|--|
| 1. Steady Warm White | 2. Steady Multicolor | 3. Alternating Warm White & Multicolor |
| 4. Twinkle Warm White | 5. Twinkle Multicolor | 6. Slow Fade Warm White |
| 7. Slow Fade Multicolor | 8. Light Display (cycles all functions) | |



Image: A graphic displaying the 8 light modes available, showing the tree with warm white lights on the left and multicolor lights on the right.

Light Functions:

- **Steady Warm White:** Classic warm white illumination.
- **Steady Multicolor:** Vibrant multicolor illumination.
- **Twinkle Warm White:** Warm white lights with a twinkling effect.
- **Twinkle Multicolor:** Multicolor lights with a twinkling effect.
- **Slow Fade Warm White:** Warm white lights slowly fade in and out.
- **Slow Fade Multicolor:** Multicolor lights slowly fade in and out.
- **Alternating Warm White & Multicolor:** Lights switch between warm white and multicolor.
- **Light Display:** Cycles through all available functions.
- **OFF:** Turns the lights off.

Using the Foot Pedal:

To cycle through the light functions, simply tap the foot pedal. Each tap will advance to the next function in the sequence. To turn the lights off, continue tapping until the 'OFF' setting is reached.

MAINTENANCE AND STORAGE

Cleaning:

To clean the tree, gently wipe the branches with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners, as these may damage the finish or lights.

Storage:

1. Unplug the tree from the power outlet.
2. Carefully remove all ornaments and decorations.
3. Disassemble the tree sections in reverse order of assembly (top section first).
4. Gently compress the branches of each section. The memory wire will help retain their shape for easier reassembly next season.
5. Store the tree sections and stand in their original packaging or a suitable storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Power cord not plugged in. Foot pedal not connected or faulty. Tree sections not fully connected. Blown fuse in the plug (if applicable).	Ensure the power cord is securely plugged into a working outlet. Verify the foot pedal is correctly connected to the tree's power cord. Check that all tree sections are firmly seated, allowing Instant Light technology to activate. Inspect and replace the fuse if necessary (refer to plug instructions).
Some lights are out.	Loose bulb or connection. Damaged LED string.	Check for any loose bulbs and gently push them into their sockets. The tree uses a shunt system, so if one bulb goes out, others should remain lit. If a section is out, check connections between sections. If the issue persists, contact customer support.
Tree is wobbly.	Tree stand not fully open or tightened. Uneven surface.	Ensure the tree stand is fully extended and the thumb screws are securely tightened around the pole. Place the tree on a flat, stable surface.

SPECIFICATIONS

- **Model:** DCCT0905
- **Height:** 9 feet (108 inches / 274.3 cm)
- **Diameter:** 50 inches (at widest point)
- **Number of Tips:** 3,327 (52% PE, 48% PVC)
- **Light Type:** 2700 Cluster LED Lights
- **Light Functions:** 8 (Steady Warm White, Steady Multicolor, Twinkle Warm White, Twinkle Multicolor, Slow Fade Warm White, Slow Fade Multicolor, Alternating Warm White & Multicolor, Light Display, OFF)
- **Control:** Foot Pedal
- **Material:** Polyethylene, Polyvinyl Chloride, Metal Stand
- **Item Weight:** 57 pounds
- **Lowest Branches from Floor:** 10 inches
- **Pole Diameter:** 1.25 inches



Image: A diagram illustrating the dimensions of the Haute Decor Queensbury Fir Christmas Tree, including height (108 inches), diameter (50 inches), and height of lowest branches (10 inches).

CUSTOMER SUPPORT

For any questions, missing parts, or assistance with your Haute Decor Christmas tree, please contact our customer support team. Refer to your purchase documentation for specific contact details or visit the Haute Decor brand store on Amazon:

[Visit the Haute Decor Store on Amazon](#)

Please have your model number (DCCT0905) and purchase information ready when contacting support.

© 2025 Haute Decor. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question