

GOURMETmaxx 16525

GOURMETmaxx Mr. Magic Power Pro Blender 400W L-Set

Instruction Manual

1. INTRODUCTION

Thank you for choosing the GOURMETmaxx Mr. Magic Power Pro Blender. This versatile appliance is designed to simplify your kitchen tasks, allowing you to prepare a wide range of delicious and healthy recipes quickly and efficiently. From creamy smoothies and milkshakes to fruit purees, cocktails, cold sauces, aromatic pestos, and dips, the Mr. Magic Power Pro Blender with its L-Accessory Kit offers endless culinary possibilities.

Equipped with a powerful 400W motor and a robust stainless steel cross blade, this blender achieves fine, homogeneous consistencies in seconds. Its compact design fits perfectly into almost any kitchen. Please read this instruction manual carefully before first use to ensure safe and optimal operation of your appliance.



Image: The GOURMETmaxx Mr. Magic Power Pro Blender ready for use with fresh fruits and a prepared green smoothie.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before using the appliance.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth only.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Blades are sharp. Handle with care.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- **Caution: This blender is not suitable for crushing ice cubes.**

3. PACKAGE CONTENTS

Your GOURMETmaxx Mr. Magic Power Pro Blender L-Set includes the following components:

- 1x Motor Base (400W)
- 1x Cross Blade Attachment (stainless steel)
- 1x 350 ml Blender Cup
- 2x 500 ml Blender Cups
- 2x To-Go Lids (leak-proof)
- 1x Fresh-Keeping Lid (for storage)
- 1x Sprinkling Lid (for dry ingredients like nuts or spices)

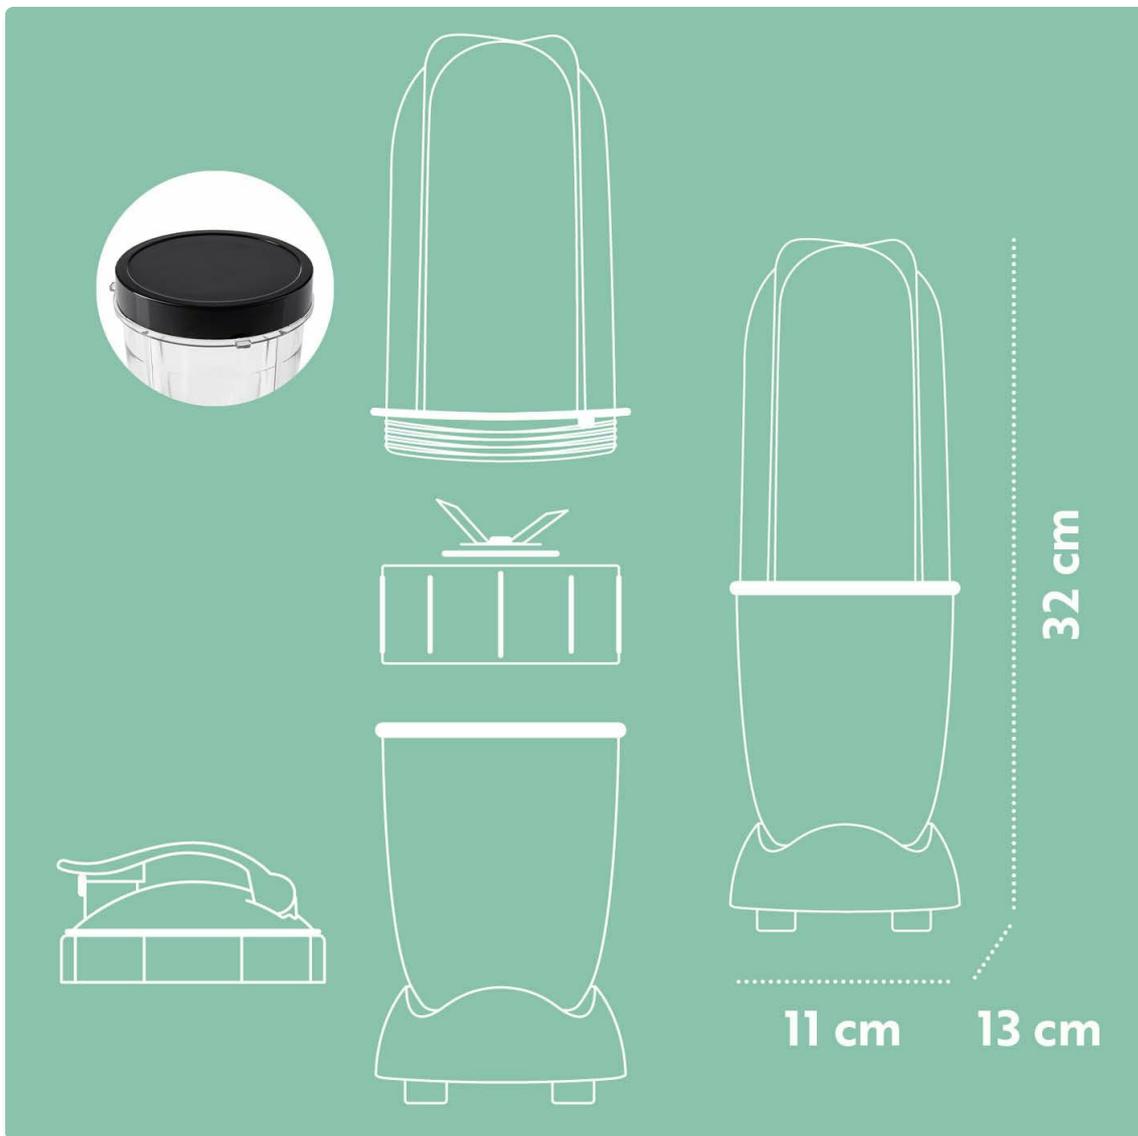


Image: Exploded view diagram illustrating the various components included in the L-Set.

4. SETUP AND ASSEMBLY

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash all blender cups, lids, and blade attachments in warm, soapy water. Rinse thoroughly and dry. The motor base should only be wiped with a damp cloth.
3. **Prepare Ingredients:** Add your desired ingredients into one of the blender cups. Do not overfill; ensure ingredients do not exceed the MAX fill line.
4. **Attach Blade:** Securely screw the cross blade attachment onto the open end of the blender cup. Ensure it is tightened completely to prevent leaks.
5. **Place on Base:** Invert the assembled cup (with blade attached) and place it onto the motor base. Align the tabs on the cup with the slots on the motor base.
6. **Secure:** Gently press down and twist the cup clockwise until it locks into place. The blender will not operate unless the cup is correctly secured.

5. OPERATING INSTRUCTIONS

The GOURMETmaxx Mr. Magic Power Pro Blender is designed for simple, one-touch operation.

1. **Connect Power:** Plug the motor base into a suitable electrical outlet (230V).
2. **Start Blending:** Once the cup is securely locked onto the motor base, the blender will start automatically. For continuous blending, ensure the cup is twisted fully into the locked position. For pulse blending, simply press down on the cup and release.
3. **Blending Time:** Blend ingredients until the desired consistency is achieved. For optimal motor life, avoid continuous blending for more than 1 minute at a time. If blending for longer, allow the motor to rest for a few minutes between cycles.
4. **Stop Blending:** To stop blending, twist the cup counter-clockwise to unlock it from the motor base, or simply lift the cup off the base if using pulse function.

Tips for Best Results:

- For smoothies, add liquids first, then soft ingredients, and finally harder ingredients.
- Do not use with hot liquids. Allow hot ingredients to cool before blending.
- The blender is ideal for chopping nuts, herbs, and spices using the cross blade and sprinkling lid.
- Remember, this appliance is not suitable for crushing ice cubes.



Image: Fresh fruits being blended to a smooth consistency.



Image: Examples of various preparations possible with the blender, including smoothies, soups, and dips.



Image: Demonstrating the use of the sprinkling lid for dry ingredients like grated cheese.



Image: Highlighting the portability of the blender cups with To-Go lids.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your blender.

- **Always unplug** the appliance before cleaning.
- **Motor Base:** Wipe the motor base with a damp cloth. Never immerse it in water or any other liquid.
- **Blender Cups, Lids, and Blade Attachments:** These parts are dishwasher safe. Alternatively, they can be washed by hand in warm, soapy water. Rinse thoroughly and dry immediately.
- **Blade Care:** Handle the blade attachment with extreme care as the blades are very sharp.
- **Storage:** Store the blender and its accessories in a clean, dry place when not in use.

7. TROUBLESHOOTING

If you encounter any issues with your GOURMETmaxx Mr. Magic Power Pro Blender, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; cup not properly secured; power outage.	Ensure the power cord is securely plugged into a working outlet. Make sure the blender cup is twisted and locked firmly onto the motor base. Check your household's power supply.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients are too large or hard.	Add more liquid. Reduce the amount of ingredients. Cut larger ingredients into smaller pieces. Avoid blending hard items like ice cubes.
Leakage from the cup.	Blade attachment not tightened; cup overfilled; damaged seal.	Ensure the cross blade attachment is securely screwed onto the cup. Do not exceed the MAX fill line. Check the rubber seal on the blade attachment for any damage.
Burning smell or loud noise.	Overheating; motor overload.	Unplug the blender immediately and let it cool down for at least 15-20 minutes. Reduce the load by removing some ingredients or adding more liquid. Do not operate continuously for more than 1 minute. If the problem persists, contact customer service.

If the problem persists after trying these solutions, please contact GOURMETmaxx customer support.

8. TECHNICAL SPECIFICATIONS

Brand:	GOURMETmaxx
Model Number:	16525
Power:	400 Watts
Voltage:	230 Volts
Capacity:	350 ml and 500 ml Blender Cups
Dimensions (L x W x H):	13 x 11 x 32 cm
Item Weight:	2 Kilograms
Number of Speeds:	8 (functions)
Recommended Uses:	Grinding, Creams, Mixing, Pureeing, Emulsifying

9. WARRANTY AND CUSTOMER SUPPORT

Information regarding specific warranty terms for your GOURMETmaxx Mr. Magic Power Pro Blender may vary by region and retailer. Please refer to the warranty card included with your purchase or contact your point of sale for detailed warranty information.

For technical support, spare parts availability, or any other inquiries, please contact GOURMETmaxx customer service or the retailer from whom you purchased the product. Spare parts availability information was not provided at the time of this manual's creation.

You can often find contact details on the manufacturer's official website or on your purchase receipt.

© 2025 GOURMETmaxx. All rights reserved.
This manual is subject to change without prior notice.