

TABWEE T80(12+128)

TABWEE T80 Android Tablet

USER MANUAL

1. Introduction

Welcome to the user manual for your new TABWEE T80 Android Tablet. This guide provides essential information to help you set up, operate, maintain, and troubleshoot your device. The TABWEE T80 is a high-performance tablet featuring Android 15, Gemini AI 2.0, a 10.5-inch FHD display, 12GB RAM, 128GB ROM (expandable), a 6000mAh battery with fast charging, GPS, Bluetooth 5.0, and 5G WiFi connectivity. Please read this manual thoroughly to ensure optimal performance and longevity of your tablet.

2. Safety Information

To ensure safe and proper operation of your TABWEE T80 tablet, please observe the following precautions:

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the tablet to severe impact.
- Use only manufacturer-approved chargers and accessories.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel.
- Keep the device away from water and other liquids.
- Dispose of batteries and electronic components responsibly according to local regulations.

3. Setup

3.1 Package Contents

Before proceeding, ensure all items are present in the package:

- TABWEE T80 Android Tablet
- USB Charging Cable
- Power Adapter
- User Manual (this document)

3.2 Initial Charging

It is recommended to fully charge the tablet before first use. Connect the USB charging cable to the tablet's charging port and the power adapter, then plug the adapter into a wall outlet. The battery indicator on the screen will show charging status. A full charge typically takes approximately 2-3 hours, but the

device supports fast charging to 50% in about 45 minutes.

3.3 Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side) for a few seconds until the TABWEE logo appears on the screen.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select "Power off" and confirm.
- **To Restart:** From the power options menu, select "Restart."

3.4 Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Accept the terms and conditions.
4. Sign in with your Google account or create a new one.
5. Set up screen lock (PIN, pattern, or password).
6. Review and adjust other settings as prompted.



This image displays the TABWEE T80 Android Tablet. The front view highlights its 10.5-inch FHD display, showcasing key features such as 5G WiFi, 6000mAh battery, 1080P resolution, Android 15, Gemini AI, 12GB RAM, 128GB ROM, and 2TB expandable storage. The back of the tablet, visible behind the front, shows its sleek dark gray finish and the rear camera module.

4. Operating the Tablet

4.1 Basic Navigation

The TABWEE T80 uses a touch-based interface:

- **Tap:** To select an item or open an application.
- **Swipe:** To scroll through pages or lists.
- **Pinch-to-Zoom:** To zoom in or out on images or web pages.
- **Long Press:** To access contextual menus or move icons.

4.2 Connectivity

- **Wi-Fi:** Access high-speed internet via 5G WiFi. Go to Settings > Network & internet > Wi-Fi to connect to available networks.
- **Bluetooth:** Connect to wireless headphones, speakers, or other Bluetooth devices using Bluetooth 5.0. Go to Settings > Connected devices > Connection preferences > Bluetooth.
- **GPS:** The tablet includes GPS for location services and navigation applications.

4.3 Performance and Storage

The TABWEE T80 is equipped with 12GB RAM for smooth multitasking and 128GB of internal storage. Storage can be expanded up to 2TB using a microSD card (not included). The 10.5-inch FHD display features a 120Hz refresh rate, providing fluid visuals for streaming, gaming, and general use.

4.4 Gemini AI 2.0 and Android 15

Leverage the power of Gemini AI 2.0 and the latest Android 15 operating system for enhanced productivity. Features include smart multitasking, real-time voice translation, and personalized file suggestions to streamline your workflow.

4.5 Camera

The tablet features an AI smart camera for capturing photos and videos. Access the camera application from the home screen or app drawer.

4.6 Battery Management

The 6000mAh battery provides extended usage time. To optimize battery life, adjust screen brightness, close unused applications, and enable battery saver mode when needed. Utilize the fast charging feature for quick power-ups.

5. Maintenance

5.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner. Avoid using harsh chemicals or abrasive materials.

5.2 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to Settings > System > System update.

5.3 Battery Care

To prolong battery lifespan:

- Avoid fully discharging the battery frequently.
- Do not leave the tablet charging for extended periods after it reaches 100%.
- Store the tablet in a cool, dry place if not used for a long time.

5.4 Storage Management

Periodically review and delete unnecessary files, apps, and media to free up storage space and maintain optimal performance. You can also move files to an external microSD card.

6. Troubleshooting

This section addresses common issues you might encounter with your TABWEE T80 tablet.

- **Device won't turn on:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Screen is unresponsive:** Try restarting the tablet by holding the power button for about 10-15 seconds until it reboots.
- **Wi-Fi connection issues:** Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Forget the network and reconnect.
- **Slow performance:** Close unused apps, clear cache, free up storage space, and restart the tablet. Consider a factory reset as a last resort (back up data first).
- **Apps crashing:** Ensure apps are updated. Clear the app's cache and data (Settings > Apps > [App Name] > Storage > Clear cache/data). Reinstall the app if necessary.
- **Battery drains quickly:** Reduce screen brightness, disable unnecessary features (Bluetooth, GPS, Wi-Fi when not in use), and close background apps.

If problems persist, contact customer support for further assistance.

7. Specifications

Feature	Specification
Brand	TABWEE
Model Name	T80(12+128)
Operating System	Android 15
Screen Size	10.5 Inches
Max Screen Resolution	1280 x 800 Pixels
RAM	12GB

Feature	Specification
ROM	128GB (Expandable up to 2TB)
Battery Capacity	6000mAh
Connectivity	5G WiFi, Bluetooth 5.0, GPS
Color	Black
Product Dimensions	7.8 x 20 x 0.5 inches
Batteries	1 9V battery required (included)

8. Warranty and Support

For information regarding warranty coverage, please refer to the warranty card included with your purchase or the product listing on the retailer's website. If you require technical support or have questions not covered in this manual, please contact TABWEE customer service through the contact information provided at your point of purchase or on the official TABWEE website.