

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Jesebang](#) /

› [Jesebang YT18 Wireless Earbuds User Manual](#)

## Jesebang YT18

# Jesebang YT18 Wireless Earbuds

User Manual

## INTRODUCTION

Thank you for choosing the Jesebang YT18 Wireless Earbuds. This manual provides detailed instructions to help you set up, operate, and maintain your earbuds for optimal performance. Please read this manual thoroughly before use and retain it for future reference.

## WHAT'S IN THE BOX

The package includes the following items:

- 2 x YT18 Wireless Earbuds
- 1 x Portable Charging Case
- 1 x USB-C Charging Cable
- 3 x Pairs of Silicone Earplugs (S/M/L)
- 1 x User Manual



Image: Contents of the Jesebang YT18 Wireless Earbuds package.

## PRODUCT OVERVIEW

The Jesebang YT18 Wireless Earbuds feature an over-ear design with ear hooks for a secure fit, making them suitable for sports and active use. The charging case includes an LED display to show battery levels.

# 48 Hours Ultra Long Playtime and LED Display



Digital Power  
Display of Earbuds



Digital Power  
Display of Case

Image: Dimensions of the Jesebang YT18 charging case and earbuds.

## GETTING STARTED

### 1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case. Connect the USB-C charging cable to the charging port on the case and to a power source. The LED display on the case will indicate the charging status and battery level.



Image: USB-C charging port and LED display on the charging case.



Image: Battery life indicators for earbuds and charging case.

## 2. Wearing the Earbuds

For optimal sound quality and comfort, choose the correct size silicone earplugs (S, M, L) that fit your ears. The earbuds are designed with flexible ear hooks for a secure fit during physical activity.

1. Pick up the headphones and choose the best fit from the 3 different ear tips (S, M, L).
2. Plug the headphones along the ear canal into the ears.
3. Revolve the ear hooks until they are inserted behind the ears.
4. Adjust the headphones to your comfortable angle.

## Easy to Wear Stably



Image: Instructions for stable wearing of the earbuds.

### 3. Pairing with Your Device

The earbuds feature one-step auto-pairing after the initial setup.

1. Remove the earbuds from the charging case. They will automatically enter pairing mode.
2. On your device (smartphone, tablet, etc.), activate Bluetooth settings.
3. Search for "YT18" in the list of available devices and select it to connect.
4. Once paired, the earbuds will automatically connect to your device when removed from the case.

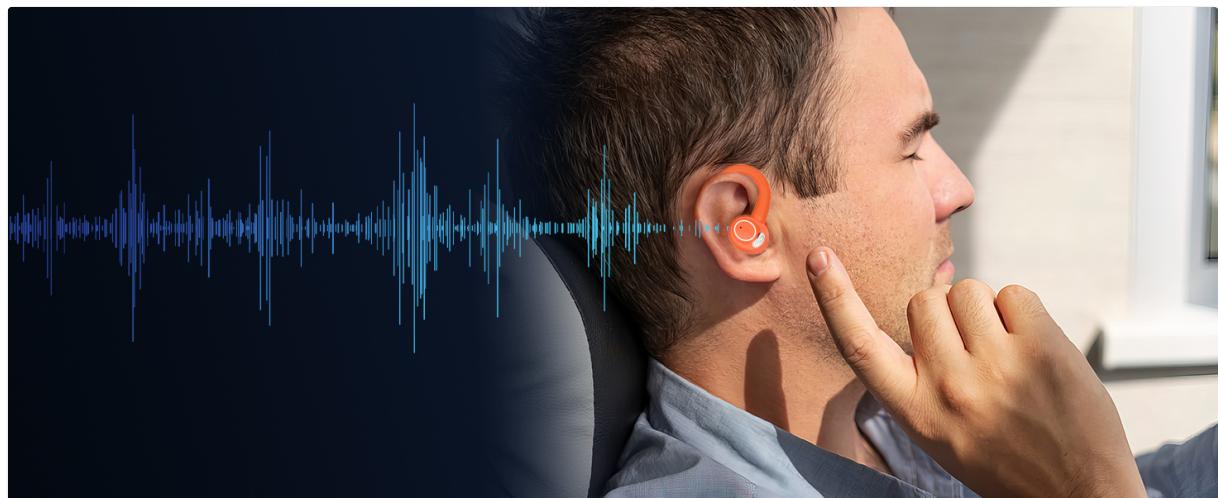


Image: One-step auto-pairing process.

Your browser does not support the video tag.

Video: Demonstrating the features and pairing process of the Jesebang YT18 Wireless Earbuds.

### OPERATING INSTRUCTIONS: TOUCH CONTROLS

The earbuds are equipped with touch sensors for easy control of various functions:

- **Play/Pause:** Tap 2 times
- **Next Song:** Tap and hold for 2 seconds (Right earbud)
- **Previous Song:** Tap and hold for 2 seconds (Left earbud)
- **Volume Up:** Tap 1 time (Right earbud)
- **Volume Down:** Tap 1 time (Left earbud)

- **Answer/End Call:** Tap 1 time
- **Reject Call:** Tap and hold for 2 seconds
- **Activate Voice Assistant (Siri):** Tap 3 times



Image: Touch control functions diagram.

## KEY FEATURES

### Advanced Bluetooth 5.4

The earbuds utilize Bluetooth 5.4 technology for a stable and efficient wireless connection. This technology provides faster transmission speeds and a connection range of up to 15 meters.

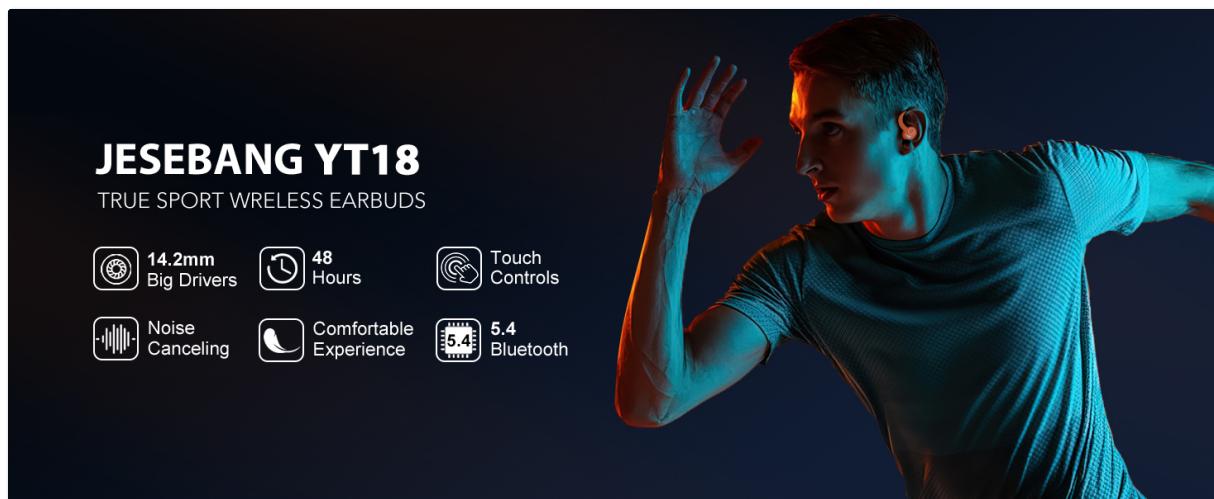


Image: Advanced Bluetooth 5.4 technology.

### High-Quality Audio

Equipped with 14.2mm dynamic drivers, the YT18 earbuds deliver balanced audio with clear highs, mids, and defined low frequencies, enhancing your listening experience.



Image: Internal components for high-quality audio.

### Clear Calls with ENC Noise Cancelling

The earbuds feature 4 ENC (Environmental Noise Cancellation) microphones to filter out ambient noise, ensuring your voice is clear during calls, even in noisy environments.



Image: Dual ENC microphones for noise cancellation.

### Extended Battery Life

Enjoy up to 8 hours of music playback on a single charge. The portable charging case extends the total battery life to up to 48 hours, providing power for extended use.

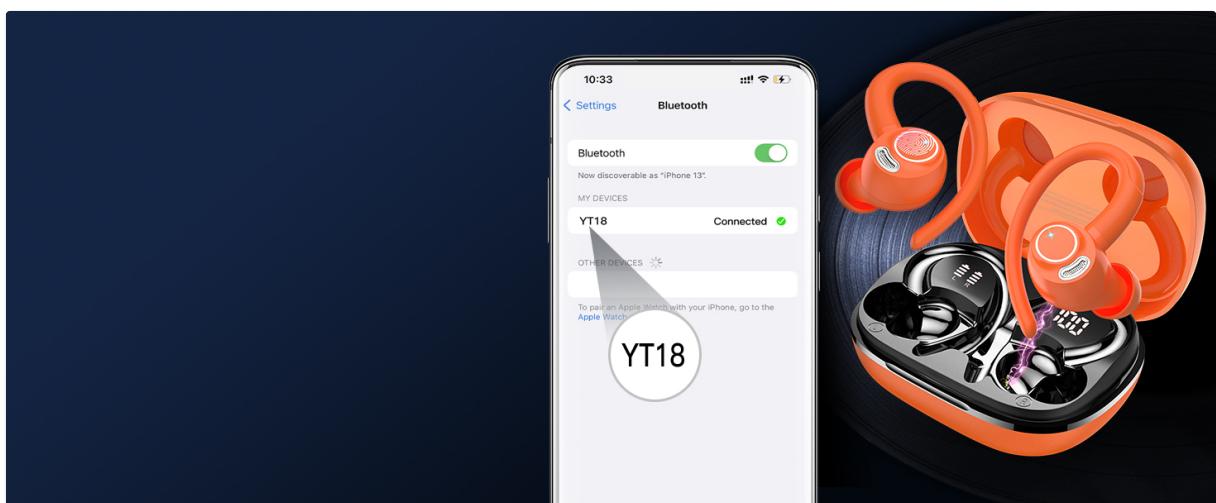


Image: 48 hours ultra-long playtime and LED display.

## IP7 Waterproof Rating

The earbuds feature an IP7 waterproof rating, providing protection against sweat and rain. This makes them suitable for workouts and outdoor activities.



Image: IP7 dust and water resistance for active use.

## SPECIFICATIONS

Feature	Detail
Model Name	YT18
Connectivity Technology	Bluetooth 5.4
Audio Driver Size	14.2 mm
Earbud Battery Life	Up to 8 hours
Total Battery Life (with case)	Up to 48 hours
Charging Time	1.5 hours
Bluetooth Range	Up to 15 meters
Water Resistance Level	IP7 (Waterproof)
Noise Control Features	ENC Noise Cancellation
Control Type	Touch Control
Earpiece Shape	Over-ear
Earbud Weight	6 grams (per earbud)

## TROUBLESHOOTING

If you encounter any issues with your Jesebang YT18 Wireless Earbuds, please refer to the following common solutions:

- **Earbuds not pairing:** Ensure both earbuds are removed from the charging case. Turn off and on your device's Bluetooth, then try pairing again. If issues persist, try resetting the earbuds (refer to manufacturer's specific reset instructions if available, otherwise place back in case and try re-pairing).
- **Only one earbud working:** Place both earbuds back into the charging case, close the lid, wait a few seconds, then remove them. This often re-syncs them.
- **Low volume or poor sound quality:** Check the earbud fit and try different sized ear tips. Ensure the earbuds and your device's volume are turned up. Clean any debris from the earbud speakers.
- **Charging issues:** Ensure the charging cable is securely connected to both the case and the power source. Check if the charging pins on the earbuds and inside the case are clean and free of obstruction.
- **Touch controls unresponsive:** Ensure your fingers are clean and dry. Try restarting the earbuds by placing them in the case and taking them out again.

## CARE AND MAINTENANCE

- Keep the earbuds and charging case clean and dry.
- Wipe the earbuds with a soft, dry cloth. Do not use abrasive cleaners.
- Clean the charging contacts on the earbuds and in the case regularly with a dry cotton swab to ensure proper charging.
- Store the earbuds in the charging case when not in use to protect them and conserve battery.
- Avoid extreme temperatures and direct sunlight.
- While the earbuds are IP7 waterproof, avoid prolonged submersion in water.

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Jesebang customer service through their official channels. Keep your proof of purchase for warranty claims.