

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LEHMANN](#) /

› [LEHMANN LHOSJ-6045 Centrifugal Juicer Instruction Manual](#)

## LEHMANN LHOSJ-6045

# LEHMANN LHOSJ-6045 Centrifugal Juicer

Instruction Manual

## INTRODUCTION

---

Thank you for purchasing the LEHMANN LHOSJ-6045 Centrifugal Juicer. This manual provides important information on how to safely and effectively operate and maintain your new juicer. Please read these instructions thoroughly before first use and keep them for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not immerse the motor base in water or other liquids.
- Ensure the appliance is switched off and unplugged before assembling, disassembling, or cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid contact with moving parts.
- Do not use outdoors.
- Always ensure the juicer cover is properly locked in place before the motor is switched on.
- Do not put fingers or other objects into the feed chute while the appliance is operating. If food becomes lodged, use the food pusher provided.
- This appliance is for household use only.
- Keep children away from the appliance during operation.

## PARTS IDENTIFICATION

---

Familiarize yourself with the components of your LEHMANN LHOSJ-6045 Centrifugal Juicer:

1. Food Pusher
2. Transparent Cover with Feed Chute
3. Filter Basket (Stainless Steel)
4. Juicer Base with Motor Unit
5. Pulp Container (1.5L capacity)
6. Juice Container (450ml capacity)
7. Locking Clamp
8. Speed Control Dial



**Image:** Exploded view showing all detachable parts of the juicer for easy identification and assembly.

## SETUP AND ASSEMBLY

Before first use, wash all detachable parts (food pusher, cover, filter basket, pulp container, juice container) in warm

soapy water, rinse thoroughly, and dry. Wipe the motor base with a damp cloth.

1. Place the motor base on a stable, flat, and dry surface.
2. Insert the filter basket securely onto the motor base. Ensure it clicks into place.
3. Place the transparent cover over the filter basket and align the feed chute with the opening on the base.
4. Attach the locking clamp to secure the cover to the motor base. Ensure it is firmly locked.
5. Position the pulp container under the pulp spout.
6. Place the juice container under the juice spout.
7. Insert the food pusher into the feed chute.



**Image:** The LEHMANN juicer fully assembled and ready for use, showing the main unit, pulp container, and juice container.

## Preparing Fruits and Vegetables

- Wash all fruits and vegetables thoroughly.
- Peel fruits with thick or inedible skins (e.g., oranges, pineapples, melons).
- Remove large seeds or pits (e.g., peaches, plums, cherries).
- Cut larger items into pieces that fit easily into the 65mm wide feed chute.



**Image:** A hand demonstrating how to feed prepared carrots into the juicer's wide feed chute.

## Juicing Process

1. Ensure the juicer is correctly assembled and the juice and pulp containers are in place.
2. Plug the appliance into a power outlet.
3. Turn the speed control dial to the desired setting:
  - **Speed I (Low):** For softer fruits and vegetables (e.g., tomatoes, grapes, berries).
  - **Speed II (High):** For harder fruits and vegetables (e.g., carrots, apples, celery).
4. Gradually feed the prepared ingredients into the feed chute using the food pusher. Do not force ingredients

down.

5. The fresh juice will flow into the juice container, and the pulp will collect in the pulp container.
6. Once juicing is complete, turn the speed control dial to '0' (off) and unplug the appliance.



**Image:** Close-up of fresh juice being extracted and flowing into the designated juice container.



**Image:** A hand carefully removing the filled juice container from the juicer after the juicing process.

## **MAINTENANCE AND CLEANING**

---

Regular cleaning ensures optimal performance and extends the life of your juicer. Always unplug the appliance before cleaning.

### **Disassembly for Cleaning**

1. Turn the speed control dial to '0' and unplug the juicer.
2. Remove the food pusher.
3. Unlock the locking clamp and remove the transparent cover.
4. Carefully lift out the filter basket.
5. Remove the pulp container and empty it.
6. Remove the juice container.

## Cleaning Instructions

- **Motor Base:** Wipe with a damp cloth. Do not immerse in water.
- **Detachable Parts:** Wash the food pusher, cover, filter basket, pulp container, and juice container in warm, soapy water. Rinse thoroughly. Most components are dishwasher safe (refer to product specifications for confirmation).
- **Filter Basket:** Use a brush to clean the fine mesh of the filter basket to remove any stubborn pulp residue. This is crucial for efficient juicing.
- Dry all parts completely before reassembling or storing.



**Image:** A close-up view of the stainless steel filter basket, showing accumulated pulp after juicing, highlighting the area that requires thorough cleaning.

## TROUBLESHOOTING

If you encounter issues with your juicer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; safety lock not engaged; power outage.	Check power cord; ensure locking clamp is securely fastened; check power supply.
Motor stops during operation.	Overload protection activated; too much pressure on food pusher; filter basket clogged.	Unplug, wait 15-20 minutes for motor to cool; reduce pressure; clean filter basket.
Low juice yield or wet pulp.	Filter basket clogged; incorrect speed setting for ingredients.	Clean filter basket thoroughly; use higher speed for harder produce.
Excessive vibration or noise.	Filter basket not properly seated; appliance on an uneven surface.	Reassemble filter basket correctly; place juicer on a stable, flat surface.

## PRODUCT SPECIFICATIONS

Feature	Detail
Brand	LEHMANN
Model Number	LHOSJ-6045
Power	600 Watts
Voltage	230 Volts
Speeds	2 (Low/High)
Pulp Container Capacity	1.5 Liters
Juice Container Capacity	450 Milliliters
Feed Chute Diameter	65mm
Material	Stainless Steel, Plastic
Color	Stainless Steel and Black
Dimensions (L x W x H)	17.5 x 28 x 29.6 cm
Weight	2.14 Kilograms
Special Features	Easy to clean, Quiet motor, Overheat protection
Care Instructions	Dishwasher safe parts

  
**LEHMANN**  
HOME



**Image:** Diagram illustrating the dimensions (length, width, height) of the LEHMANN LHOSJ-6045 Centrifugal Juicer.

## WARRANTY AND CUSTOMER SUPPORT

### Warranty Information

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the official LEHMANN website for detailed warranty terms and conditions. Keep your proof of purchase for warranty claims.

### Customer Support

For any questions, technical assistance, or if you require spare parts, please contact LEHMANN customer support. Contact details can typically be found on the manufacturer's website or in the packaging materials.

**Website:** [Visit the LEHMANN Store](#)

