



Manuals.plus /

› T4TREAM /

› T4TREAM Fluted 7 Drawers Dresser User Manual

T4TREAM ILSC7DRSC-DWT

T4TREAM Fluted 7 Drawers Dresser User Manual

Brand: T4TREAM

Model: ILSC7DRSC-DWT

INTRODUCTION

Thank you for choosing the T4TREAM Fluted 7 Drawers Dresser. This modern dresser, featuring elegant fluted fronts and gold accents, is designed to enhance your bedroom or living room with both style and practical storage. This manual provides essential information for safe assembly, operation, and maintenance of your new furniture. Please read it thoroughly before beginning assembly and retain it for future reference.



Image: The T4TREAM Fluted 7 Drawers Dresser in Dark Walnut, showcasing its elegant design and gold accents within a bedroom environment.

SAFETY INFORMATION

To ensure safe use of your dresser, please adhere to the following guidelines:

- **Tip-Over Prevention:** Furniture tip-overs can cause serious or fatal injuries. Always secure this dresser to the wall using the provided anti-tip kit. Never allow children to climb or hang on drawers, doors, or shelves.
- **Weight Distribution:** Distribute weight evenly across drawers. Place heavier items in lower drawers to improve stability.
- **Assembly:** Assemble the dresser on a soft, clean surface to prevent scratches. Ensure all hardware is securely tightened before use. Periodically check and re-tighten all connections.
- **Supervision:** Keep small parts and packaging materials away from children during assembly.
- **Placement:** Place the dresser on a level surface. Avoid placing it near heat sources or in direct sunlight to prevent material degradation.

PARTS LIST

Before beginning assembly, verify that all components listed below are present. If any parts are missing or damaged, please contact customer support.

Part	Description	Quantity
A	Top Panel	1
B	Side Panels	2
C	Bottom Panel	1
D	Back Panel	1
E	Drawer Fronts (Fluted)	7
F	Drawer Sides/Backs	Various
G	Drawer Bottoms	7
H	Gold Metallic Handles	7
I	Legs (Gold Accents)	5
J	Drawer Slides (Pairs)	7
K	Hardware Pack (Screws, Dowels, Anti-tip Kit)	1

ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. Two people are recommended for assembly.

Step 1: Assemble the Main Frame

1. Attach side panels (B) to the bottom panel (C) using the designated hardware from pack (K). Ensure cam locks are fully tightened.
2. Secure the back panel (D) into the grooves of the assembled frame.
3. Attach the top panel (A) to the assembled frame.

Keep Your Bedroom Neat and Organized



Image: An illustration of the dresser's internal structure, highlighting the curved profile design and fluted fronts of the drawers, along with gold accents and the natural oak finish of the top surface.

Step 2: Attach Legs

1. Carefully turn the dresser frame upside down.
2. Attach the five gold accent legs (I) to the pre-drilled holes on the bottom of the dresser using the provided screws. Ensure they are firmly secured.



Image: A detailed view of the dresser's golden legs, showcasing their design and attachment point to the main frame.

Step 3: Assemble Drawers

1. For each drawer, connect the drawer sides and back (F) to the fluted drawer front (E).
2. Slide the drawer bottom (G) into the designated grooves.
3. Attach the gold metallic handles (H) to the front of each drawer.
4. Install the drawer slides (J) to the sides of each drawer and the corresponding internal frame of the dresser. Ensure the slides are flush with the outside edge and use the oblong hole for attachment if available, as this can help with proper alignment and smooth operation.



Image: A close-up view of an open drawer, highlighting the gold metallic handle, the fluted panel texture, and the Hi-Q sliding rail mechanism.

Step 4: Install Drawers and Anti-Tip Kit

1. Carefully insert each assembled drawer into its respective slot in the dresser frame.
2. Attach the anti-tip kit to the back of the dresser and securely fasten it to a wall stud according to the instructions provided with the kit. This is a critical safety step.

OPERATING INSTRUCTIONS

Your T4TREAM dresser is designed for smooth and efficient storage.

- **Drawer Operation:** The drawers are equipped with smooth-gliding mechanisms for quiet and effortless opening and closing. Pull or push the gold metallic handles gently to operate.
- **Storage Capacity:** The dresser features 4 generously sized drawers and 3 smaller drawers. Utilize the larger

drawers for bulkier items like clothing and the smaller ones for accessories or personal items.

- **Weight Limit:** Do not overload drawers. The top surface can support a flat-screen TV, but ensure the weight does not exceed the dresser's structural capacity.

MAINTENANCE AND CARE

Proper care will ensure the longevity and beauty of your dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Immediately blot any spills with a clean, dry cloth to prevent staining or water damage.
- **Sunlight and Heat:** Avoid prolonged exposure to direct sunlight or extreme heat, which can cause fading, warping, or cracking of the wood finish.
- **Hardware:** Periodically check all screws and fasteners and tighten them as needed to maintain structural integrity.

TROUBLESHOOTING

If you encounter any issues with your dresser, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
Drawers do not open/close smoothly or fall out.	Drawer slides are misaligned or not properly installed.	Ensure drawer slides are installed correctly and are flush with the outside edge of the drawer opening. Verify that the correct screw holes (e.g., oblong holes) were used for optimal alignment. Re-tighten all screws on the slides.
Dresser wobbles or is unstable.	Uneven floor or loose connections.	Ensure the dresser is on a level surface. Check and tighten all assembly hardware. If necessary, use shims under the legs to level the unit.
Missing parts or damaged components.	Packaging error or shipping damage.	Do not proceed with assembly. Contact T4TREAM customer support immediately with your purchase details.

SPECIFICATIONS

Feature	Detail
Brand	T4TREAM
Model Name	ILSC7DRSC-DWT
Product Dimensions	15.75"D x 54"W x 32"H
Color	Dark Walnut
Number of Drawers	7 (4 large, 3 small)
Special Feature	Soft Close
Assembly Required	Yes
Item Weight	125 Pounds
Country of Origin	China

Product Weight: 135lbs



Image: Detailed diagram showing the overall dimensions of the dresser (54"W x 32"H x 15.7"D) and the internal

dimensions of both large and small drawers.

WARRANTY AND SUPPORT

T4TREAM stands behind the quality of its products. For information regarding warranty coverage, replacement parts, or technical assistance, please contact our customer support team.

Customer Support: Refer to your purchase documentation or the T4TREAM official website for contact details.

Online Resources: Visit the T4TREAM Store on Amazon for additional product information and support.