



[Manuals.plus](#) /

> [Korser](#) /

> Korser 360° Swivel Rocker Recliner with Massage and Heating (Model: Gee-2016)

Korser Gee-2016

Korser 360° Swivel Rocker Recliner Instruction Manual

MODEL: GEE-2016



Image: Korser 360° Swivel Rocker Recliner in beige fabric.

Introduction	Safety Information	Package Contents	Setup Instructions	Operating Instructions
	Maintenance	Troubleshooting	Specifications	Warranty & Support

1. Introduction

This manual provides essential instructions for the safe and efficient use of your Korser 360° Swivel Rocker Recliner. This recliner is designed to offer comfort and relaxation with its swivel, rocking, reclining, massage, and heating functions. Please read this manual thoroughly before assembly and operation, and retain it for future reference.

2. Safety Information

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- Always follow assembly instructions carefully.
- Do not exceed the maximum weight recommendation of **385 pounds**.
- Keep children and pets away from the moving parts of the recliner, especially during recline or rock functions.
- Ensure the power cord is not pinched or damaged. Do not operate the recliner if the cord is compromised.
- Avoid placing liquids directly on the fabric without using the cup holders to prevent spills and potential electrical hazards.
- Do not stand on the footrest or armrests.
- Unplug the recliner from the power outlet before cleaning or performing any maintenance.

3. Package Contents

Your Korser recliner is shipped in a single box for convenience. Please verify that all components are present before beginning assembly:

- Recliner Base (with swivel mechanism)
- Backrest
- Left Armrest (with cup holder and pockets)
- Right Armrest (with cup holder and pockets)
- Seat Cushion
- Power Adapter
- Massage/Heating Remote Control
- Instruction Manual (this document)

4. Setup Instructions

Follow these steps to assemble your recliner. It is recommended to have two people for easier assembly.

1. **Step 1: Install the Spring Seat**

Carefully remove all components from the packaging. Locate the spring seat and position it correctly onto the recliner base.

2. **Step 2: Pull Out the Folding Armrests**

The armrests are designed to fold for compact shipping. Gently pull out the folding armrest sections from the main body of the chair until they lock into place. Ensure they are securely extended.



Image: Visual guide for extending the folding armrests.

3. Step 3: Install the Armrests and Cup Holders

Attach the left and right armrests to the chair base. Ensure the cup holders are properly inserted into their designated slots on the armrests.



Image: Illustration of attaching armrests and placing cup holders.

4. Step 4: Install the Backrest

Slide the backrest onto the metal brackets located on the rear of the seat base. Apply firm, even pressure until it clicks securely into place. Connect any electrical cables for the massage and heating functions as indicated in the detailed instructions provided in the box.



Image: Guide for attaching the backrest to the chair base.

5. Step 5: Connect Power

Plug the power adapter into the recliner's power input, then plug the adapter into a standard electrical outlet.

Your recliner is now ready for use.

5. Operating Instructions

Your Korser recliner offers multiple functions for enhanced comfort:

- **360° Swivel Function:** The chair base allows for a full 360-degree rotation, enabling you to easily change your viewing angle or direction without moving the entire chair.
- **Rocking Function:** The recliner features a gentle 30° rocking motion for soothing relaxation.
- **Reclining Function:** To recline, locate the manual pull-ring mechanism, typically on the side of the chair. Pull the ring to release the footrest, then lean back to achieve your desired recline angle, up to 160° for a near-flat lying position. To return to an upright position, push down on the footrest with your legs and lean forward.



Image: The recliner demonstrating its adjustable recline and rocking functions.

- **Massage and Heating Functions:** Use the provided remote control to activate and customize the massage and heating features. The recliner has 8 vibration massage points targeting the back, waist, thighs, and legs. The waist area also features a soothing heating function.

Massage and Heating



Image: Diagram illustrating the massage and heating zones of the recliner.

Your browser does not support the video tag.

Video: A demonstration of the Korser Recliner Chair's features, including its massage and heating functions, and overall comfort.

- **Convenient Storage:** The recliner is equipped with two cup holders on the armrests and multiple pockets (two front, two side) for storing items like remote controls, magazines, or personal devices.



Image: Close-up of the recliner's integrated cup holders and side storage pockets.

6. Maintenance

Proper care will extend the life and appearance of your recliner:

- **Cleaning:** The chenille fabric is soft and skin-friendly. For general cleaning, use a soft brush or vacuum cleaner to remove dust and debris. For spills, blot immediately with a clean, dry cloth. For stubborn stains, use a mild fabric cleaner following the product's instructions, testing on an inconspicuous area first.
- **Mechanism Care:** Periodically check all bolts and screws to ensure they are tight. Do not overtighten.
- **Electrical Components:** Keep all electrical components, including the power cord and remote, dry and free from damage.

7. Troubleshooting

If you encounter issues with your recliner, refer to the following common solutions:

- **Recliner Not Reclining/Footrest Not Extending:** Ensure the manual pull-ring is fully engaged. Check for any obstructions under the footrest.

- **Massage/Heating Not Working:** Verify that the power adapter is securely plugged into both the recliner and the wall outlet. Check the remote control for battery issues (if applicable) or ensure it is properly connected.
- **Unstable or Wobbly:** Ensure all assembly bolts are tightened. Check that the recliner is placed on a flat, even surface.
- **Armrest Pads Detaching:** Some users have reported issues with armrest zippers or Velcro not staying affixed. Ensure the armrest pads are correctly positioned and secured. If issues persist, contact customer support.
- **Difficulty with Assembly:** If instructions are unclear, refer to the provided diagrams or contact the professional after-sales team for assistance.

8. Specifications

Brand	Korser
Model Number	Gee-2016-BEIGE
Color	Beige
Product Dimensions	22.8"D x 20.8"W x 40.9"H
Item Weight	95 pounds
Maximum Load Capacity	385 pounds
Material	Chenille Fabric
Room Type	Bedroom, Living Room, Office, Nursery Room
Reclining Position Count	2 (up to 160° flat lying)
Special Features	360° Swivel, 30° Rocking, 8-Point Vibration Massage, Lumbar Heating, Cup Holders, Side Pockets

9. Warranty and Support

For any questions regarding assembly, operation, or product issues, please contact our professional after-sales team. Refer to your purchase documentation for specific warranty details.

Additional protection plans may be available for purchase. Please check with your retailer for options such as 2-Year or 3-Year Protection Plans.

Visit the official [Korser Store](#) for more information and products.