

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Beeasy](#) /

> [Beeasy Kids Digital Watch AW04 User Manual](#)

Beeasy AW04

Beeasy Kids Digital Watch AW04 User Manual

Model: AW04

INTRODUCTION

Thank you for choosing the Beeasy Kids Digital Watch AW04. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your watch. Please read this manual carefully to ensure proper use and to maximize the lifespan of your product.

PRODUCT OVERVIEW

The Beeasy Kids Digital Watch AW04 is designed for children aged 3-15, featuring a durable silicone strap and a clear digital display. It includes multiple functions to assist with daily activities and sports.

Key Features:

- **50M Water Resistance:** Suitable for swimming, showering, and rain.
- **Multi-functional Display:** Includes dual time, date, alarm, stopwatch, and LED backlight.
- **Durable Construction:** Reinforced acrylic crystal case and soft silicone strap.
- **Adjustable Strap:** Designed for comfortable fit on various wrist sizes.

Watch Components:

The watch typically features four buttons: MODE, LIGHT, ST/STP (Start/Stop), and REST (Reset).

Multi-functional Kids Digital Watch

digital watch for kids under 15 ages



Image: The Beeasy Kids Digital Watch showcasing its various functions including dual time, stopwatch, date, alarm, and LED backlight.



Lightweight & Tough

Reinforced acrylic crystal case



Gentle on Skin

Super flexible, all-day comfort.



Easy & Secure Fit

Let parents simply secure the watch for their child

Image: A close-up view of the watch, emphasizing its lightweight and tough design, gentle-on-skin silicone strap, and secure tang buckle for an easy and secure fit.

SETUP

Setting Time and Date:

Follow these steps to set the time and date on your Beeasy Kids Digital Watch:

1. In normal time display mode, press the **ST/STP** key to switch between 12-hour and 24-hour formats.
2. To enter setting mode, press and hold the **REST** key for approximately three seconds. The 'Seconds' display will begin flashing.
3. While the 'Seconds' are flashing, press the **ST/STP** key to reset the seconds to zero (0-30 seconds resets to 0; 30-60 seconds resets to 0 and adds 1 minute).
4. Press the **MODE** key. The 'Hour' display will flash. Press the **ST/STP** key to adjust the hour. Long press the **ST/STP** key for quick increment.
5. Press the **MODE** key again. The 'Minute' display will flash. Press the **ST/STP** key to adjust the minute.
6. Press the **MODE** key again. The 'Year' display will flash. Press the **ST/STP** key to adjust the year.
7. Press the **MODE** key again. The 'Month' display will flash. Press the **ST/STP** key to adjust the month.
8. Press the **MODE** key again. The 'Date' display will flash. Press the **ST/STP** key to adjust the date.
9. Once all settings are complete, press the **REST** key to save the changes and exit the setting mode.

Your browser does not support the video tag.

Video: This video demonstrates the step-by-step process of setting the time and date on your Beeasy Kids Digital Watch.

OPERATING INSTRUCTIONS

Switching Display Modes:

Press the **MODE** button to cycle through different display modes: Time, Alarm, and Stopwatch.

Using the Alarm:

In Alarm mode (indicated by 'AL' on the display), press the **ST/STP** button to turn the alarm ON or OFF. To set the alarm time, press and hold the **REST** button until the hour flashes, then use **ST/STP** to adjust. Press **MODE** to switch to minutes and adjust similarly. Press **REST** to save.

Using the Stopwatch:

In Stopwatch mode (indicated by 'ST' on the display), press the **ST/STP** button to start or stop the timer. Press the **REST** button to reset the stopwatch to zero.

Activating the LED Backlight:

Press the **LIGHT** button to illuminate the display for better visibility in low-light conditions. The backlight will remain on for a few seconds.



Image: Comparison of the watch display in daylight and with the LED backlight activated, demonstrating enhanced readability in the dark.

WATER RESISTANCE GUIDELINES

The Beesy Kids Digital Watch AW04 features 50M (5ATM) water resistance, making it suitable for daily use, hand washing, rain, showering, and swimming. However, it is important to follow these guidelines to maintain its water resistance:

- **Do not press any buttons while the watch is submerged in water.** Pressing buttons underwater can compromise the seals and allow water to enter the watch.
- Avoid exposing the watch to extreme water temperatures (very hot or very cold), as this can also affect the watch's seals and shorten its lifespan.
- After exposure to chlorinated or saltwater, rinse the watch with fresh water and dry it thoroughly.



Image: A child wearing the Beesy Kids Digital Watch while swimming, demonstrating its 50M water resistance for various water activities.

MAINTENANCE

Proper care will help extend the life of your Beesy Kids Digital Watch:

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Replacement:** When the display becomes dim or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a professional watch technician to ensure the water resistance is maintained.
- **Avoid Chemicals:** Do not expose the watch to strong chemicals, solvents, or detergents, as these can damage the watch case, strap, or internal components.

TROUBLESHOOTING

If you encounter issues with your watch, please refer to the following common problems and solutions:

- **Display is blank or dim:** This usually indicates a low battery. Replace the battery as described in the Maintenance section.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model does not have a specific lock). Try pressing the buttons firmly. If the issue persists, a battery replacement might be needed, or there could be an internal fault.
- **Time is incorrect:** Re-set the time and date following the instructions in the Setup section. If the time consistently loses accuracy, the battery may be weak or the movement may require service.
- **Water inside the watch:** If you notice condensation or water droplets inside the watch, stop using it immediately and take it to a professional watch repair service. This indicates a breach in the water resistance.

If these steps do not resolve the issue, please contact Beeasy customer support for further assistance.

SPECIFICATIONS

Model Name:	AW04
Brand:	Beeasy
Display Type:	Digital
Watch Movement Type:	Japanese Quartz
Water Resistance Depth:	50 Meters (5ATM)
Case Material:	Resin
Crystal Material:	Resin
Band Material Type:	Silicone
Clasp Type:	Tang Buckle
Item Weight:	32 Grams
Additional Features:	Alarm, Chronograph (Stopwatch), Light Up (LED Backlight), Lightweight, Scratch-Resistant

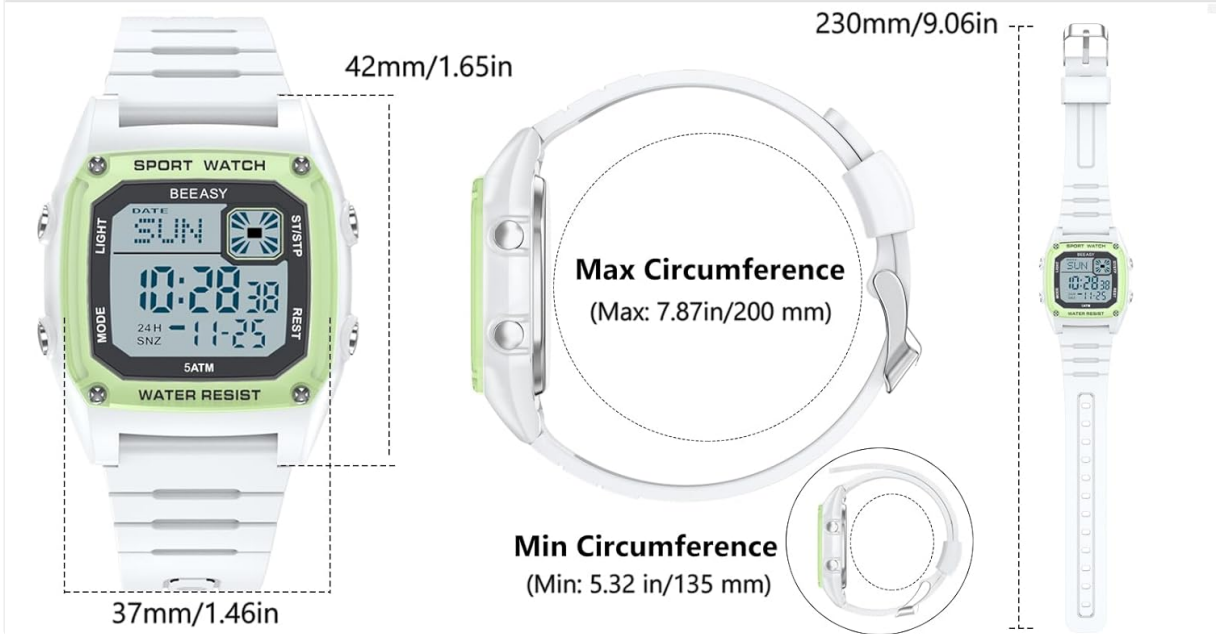


Image: A technical diagram illustrating the physical dimensions of the watch, including case width (37mm/1.46in), length (42mm/1.65in), and strap circumference (Min: 135mm/5.32in, Max: 200mm/7.87in).

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Beesy customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

You can typically find support contact details on the official Beesy website or through the retailer where the watch was purchased.