

[Manuals.plus](#) /

> [onn.](#) /

> onn. Surf 11 Tablet Pro (2024 Model) User Manual

onn. Surf 11 Tablet Pro (2024 Model)

onn. Surf 11 Tablet Pro (2024 Model) User Manual

Model: Surf 11 Tablet Pro (2024 Model)

1. Introduction

This manual provides essential information for setting up, operating, and maintaining your onn. Surf 11 Tablet Pro (2024 Model). Please read it thoroughly to ensure proper use and to maximize your device's performance.



Image 1.1: Front view of the onn. Surf 11 Tablet Pro, displaying the home screen with various app icons.

2. What's in the Box

Verify that all items are present in the package:

- onn. Surf 11 Tablet Pro (2024 Model)
- Charging Adapter
- USB-C Charging Cable

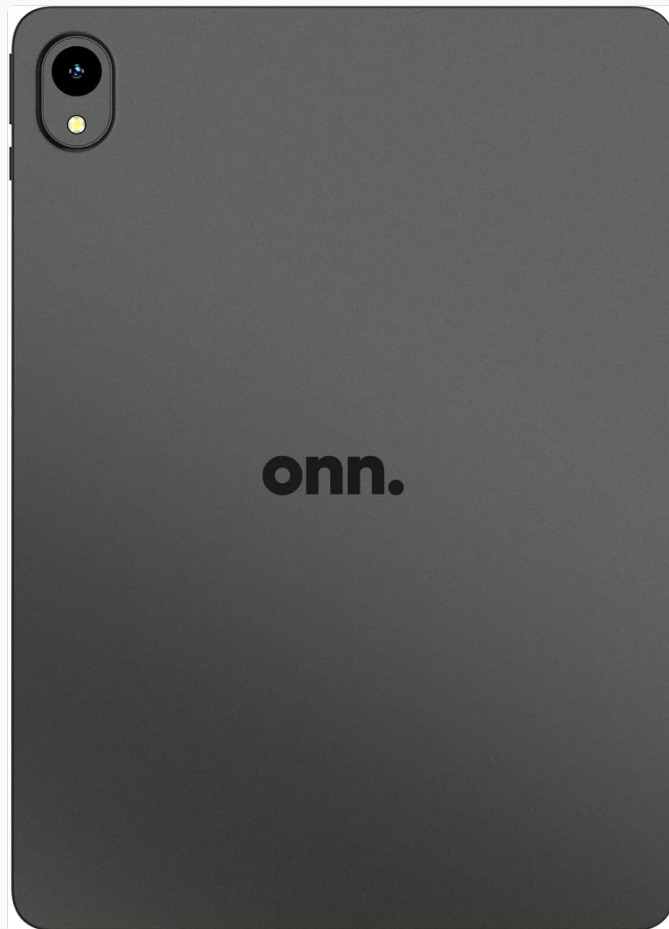


Image 2.1: Back view of the onn. Surf 11 Tablet Pro, showing the camera module and the 'onn.' logo.

3. Initial Setup

3.1. Charging the Tablet

1. Connect the USB-C charging cable to the tablet's USB-C port.
2. Plug the charging adapter into a standard wall outlet.
3. Allow the tablet to charge until the battery indicator shows a full charge. This may take several hours for the initial charge.

3.2. Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the onn. logo appears on the screen.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select "Power off" and confirm.
- **To Restart:** Press and hold the Power button until the power options menu appears. Select "Restart" and confirm.

3.3. Initial Configuration

Upon first power-on, follow the on-screen prompts to complete the initial setup:

1. Select your preferred language.

2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one.
4. Review and accept the terms and conditions.
5. Set up screen lock (PIN, pattern, or password).

4. Operating the Tablet

4.1. Navigating the Interface

The onn. Surf 11 Tablet Pro runs on Android 14. Navigation is primarily touch-based:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through lists, switch between home screens, or access notification/quick settings panels.
- **Pinch-to-Zoom:** Enlarge or reduce content on the screen.
- **Long Press:** Access contextual menus or move app icons.



Image 4.1: Front view of the onn. Surf 11 Tablet Pro, displaying the home screen with Google search bar and various Google applications.

4.2. Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Internet**.
2. Toggle Wi-Fi to **On**.
3. Select your desired Wi-Fi network from the list.
4. Enter the network password if prompted, then tap **Connect**.

4.3. Installing Applications

Applications can be downloaded and installed from the Google Play Store:

1. Open the **Play Store** app.
2. Search for the desired application.
3. Tap **Install** on the app's page.
4. Follow any on-screen instructions to complete the installation.

5. Key Features

The onn. Surf 11 Tablet Pro (2024 Model) offers a range of features designed for enhanced user experience:

- **Operating System:** Android 14 for a modern and intuitive interface.
- **Display:** 11-inch LCD touchscreen with 1840 x 1280 resolution for clear visuals.
- **Processor:** Qualcomm 2.8GHz Octa-Core Processor for smooth performance.
- **Memory (RAM):** 4GB RAM for efficient multitasking.
- **Storage:** 64GB Universal Flash Storage, expandable via memory card reader.
- **Battery Life:** Up to 16 hours of battery life for extended use.
- **Cameras:** 5MP front-facing camera and 5MP rear-facing camera for photos and video calls.
- **Audio:** Four Speakers with DTS:X Ultra Audio for immersive sound.
- **Charging:** Supports 20W charging for quicker power replenishment.

6. Maintenance

6.1. Cleaning Your Tablet

To clean your tablet, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid harsh chemicals or abrasive materials.

6.2. Software Updates

Regularly check for and install software updates to ensure optimal performance and security:

1. Go to **Settings > System > System update**.
2. Follow the on-screen instructions to check for and install any available updates.

6.3. Battery Care

To prolong battery life:

- Avoid extreme temperatures.
- Do not leave the tablet fully charged or fully discharged for extended periods.
- Use the provided charger for optimal charging.

7. Troubleshooting

This section addresses common issues you might encounter with your tablet.

Problem	Solution
Tablet does not power on.	Ensure the tablet is charged. Connect to the charger and wait a few minutes before attempting to power on again.
Screen is unresponsive.	Perform a force restart by holding the Power button for approximately 10-15 seconds.
Cannot connect to Wi-Fi.	Check if Wi-Fi is enabled in Settings. Ensure the Wi-Fi password is correct. Restart your Wi-Fi router.
Apps are crashing or freezing.	Clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). If the issue persists, uninstall and reinstall the app.

Problem	Solution
Battery drains quickly.	Reduce screen brightness, close unused apps, disable unnecessary background processes, and check battery usage in Settings to identify power-hungry apps.

8. Specifications

Feature	Detail
Model Name	Surf 11" Tablet Pro (2024 Model)
Operating System	Android 14
Screen Size	11 Inches
Screen Resolution	1840 x 1280 Pixels
Processor	Qualcomm 2.8GHz Octa-Core
RAM	4GB
Internal Storage	64GB (Expandable)
Rear Camera	5 MP
Front Camera	5 MP
Battery Life (Average)	Up to 16 Hours
Wireless Connectivity	Bluetooth, Wi-Fi
Audio	Four Speakers with DTS:X Ultra Audio
Charging	20W
Dimensions (LxWxH)	7.8 x 5.5 x 1.2 inches
Item Weight	9.6 ounces

9. Warranty and Support

For warranty information and technical support, please refer to the documentation included with your renewed product or visit the official onn. support website. As this product is an Amazon Renewed item, specific warranty details may be provided by the seller or Amazon Renewed program. Please check your purchase details for specific warranty coverage.

