

[Manuals.plus](#) /

> [Ainfox](#) /

> Ainfox Hammock Camping Chair with Footrest - Instruction Manual

Ainfox RH2HKK-1

Ainfox Hammock Camping Chair with Footrest - Instruction Manual

Model: RH2HKK-1 | Brand: Ainfox

IMPORTANT SAFETY INFORMATION

WARNING: Maximum weight capacity 400 lbs. Securely anchor hammock to stable supports. Always ensure the chair's locking mechanism is engaged before use. Failure to do so may result in injury.

PACKAGE CONTENTS

Verify that all components are present before assembly. The package should contain:

- Foldable Chair Frame
- Hammock Chair Fabric Seat
- Detachable Footrest
- Footrest Tubes (Left and Right)
- Carry Bag



Image: Overview of the chair's components, including the carry bag, folded frame, hammock seat, and footrest parts.

SETUP AND ASSEMBLY

Follow these steps to assemble your Ainfox Hammock Camping Chair:

1. **Open the Frame:** Extend the foldable frame until it is fully open. Ensure the red locking mechanism is securely engaged. Pull the chair tube upward and confirm the red buckle is under the protruding iron block to lock it in place. Refer to the image for correct and incorrect locking positions.
2. **Insert the Seat:** Carefully hang the hammock chair fabric seat onto the top posts of the opened frame. Ensure all attachment points are secure.

3. **Attach the Footrest:** Assemble the footrest by connecting the left (L) and right (R) footrest tubes to the footrest fabric. Then, insert the assembled footrest into the designated slots on the main chair frame. Ensure it clicks into place securely.



Image: Visual guide for chair assembly, illustrating the frame opening, seat attachment, and footrest installation.



Image: Close-up of the locking mechanism, highlighting the correct and incorrect ways to secure the chair frame.

Video: An official installation guide demonstrating the assembly process for the Ainfox Hammock Camping Chair, including

frame setup, seat attachment, and footrest installation.

OPERATING INSTRUCTIONS

Adjusting Recline Position

The hammock camping chair features an adjustable recline position. To adjust, locate the strap mechanism on the side of the chair. Loosen or tighten the strap to achieve your desired recline angle. Ensure the strap is securely fastened after adjustment.



Image: Illustration of the recline adjustment strap and its function.

Image: The chair demonstrating its adjustable backrest angle.

Using the Footrest

The footrest is detachable for versatile use. To attach, align the footrest tubes with the corresponding holes on the chair frame and push until they lock. To detach, press the release buttons (if present) or pull firmly to disengage. Ensure the footrest is securely attached before placing weight on it.



Image: The detachable footrest feature, showing how it can be removed or attached.

Storage and Portability

To fold the chair for storage or transport, first detach the footrest. Then, disengage the locking mechanism on the main frame and collapse the frame. Place all components into the provided carry bag.



Image: The chair folded and stored in its carry bag for easy transport.

MAINTENANCE

To ensure the longevity of your Ainfox Hammock Camping Chair, follow these maintenance guidelines:

- **Cleaning:** Wipe down the fabric with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely before folding and storing.
- **Storage:** Store the chair in its carry bag in a dry, cool place away from direct sunlight when not in use. This prevents material degradation and extends product life.
- **Inspection:** Periodically inspect the frame, fabric, and locking mechanisms for any signs of wear, damage, or loose parts. Address any issues promptly.

TROUBLESHOOTING

If you encounter issues with your Ainfox Hammock Camping Chair, consider the following:

- **Chair does not lock securely:** Ensure the red buckle is fully engaged under the protruding iron block. Refer to the assembly instructions and images for correct locking.
- **Footrest feels unstable:** Verify that both footrest tubes are fully inserted and locked into the main frame. Check for any obstructions.
- **Difficulty folding/unfolding:** Ensure all locking mechanisms are disengaged before attempting to fold, and that the frame is fully extended before engaging locks.

If problems persist, please contact customer service for assistance.

SPECIFICATIONS

Brand	Ainfox
Model Name	Hammock Camping Chair
Item Model Number	RH2HKK-1
Color	Beige
Size	Twin Pack
Product Dimensions	55"D x 35.5"W x 42"H
Item Weight	16.8 pounds
Maximum Weight Recommendation	400 Pounds
Material	Polyester, Memory Foam (Fill)
Special Features	Cup Holders, Detachable Foot Rest, Adjustable Recline
Indoor/Outdoor Usage	Indoor, Outdoor



Image: Detailed dimensions of the chair and its carry bag.



Image: Key features including the cup holder, side pocket, and padded headrest.

WARRANTY AND SUPPORT

Ainfox provides professional after-sales support. If you encounter any problems with your product, please contact our customer service team. We aim to reply to your email within 24 hours.

For further assistance, please visit the official Ainfox store: [Ainfox Store](#).