

**Mova S2**

# Mova S2 Cordless Stick Vacuum User Manual

Model: S2

Brand: Mova

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Mova S2 Cordless Stick Vacuum. Retain this manual for future reference.

- This appliance is intended for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filters in place.
- Turn off the appliance before connecting or disconnecting the motorized brush head or other accessories.
- Use only the charger supplied by the manufacturer to recharge the appliance.
- Do not handle the charger or appliance with wet hands.
- If the charging cable is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- The battery pack must be removed from the appliance before it is scrapped. The appliance must be disconnected from the supply mains when removing the battery. The battery is to be disposed of safely.

## 2. PRODUCT OVERVIEW

### 2.1 Package Contents

- Main Unit (Handheld Vacuum)
- Extension Wand

- Motorized Floor Brush
- Crevice Tool
- 2-in-1 Brush Tool
- Wall Mount Dock
- Charger
- HEPA Filter (pre-installed)
- Sponge Filter
- User Manual

## 2.2 Component Identification

Familiarize yourself with the various parts of your Mova S2 vacuum cleaner:



This image displays all components of the Mova S2 Cordless Stick Vacuum. From left to right, top to bottom: a round sponge filter, a round HEPA filter, a wall mount dock, a charger, a 2-in-1 brush tool, a crevice tool, the main unit (handheld vacuum) with dustbin, an extension wand, and the motorized floor brush. The main unit is also shown in various assembled configurations, including as a handheld vacuum and as a full stick vacuum.

- **Main Unit:** Contains the motor, dustbin, and control panel.
- **Extension Wand:** Connects the main unit to the floor brush or other attachments for extended reach.
- **Motorized Floor Brush:** Designed for efficient cleaning of various floor types, including carpets and hard floors, with a tangle-free design.

- **Crevice Tool:** Ideal for cleaning tight spaces, corners, and edges.
- **2-in-1 Brush Tool:** Combines a soft brush for delicate surfaces and an upholstery tool for furniture.
- **Filters:** The 4-layer filter system, including a HEPA filter, ensures 99.9% filtration efficiency.

## 3. SETUP AND ASSEMBLY

---

### 3.1 Charging the Battery

1. Ensure the vacuum is turned off.
2. Connect the charger to the charging port on the main unit.
3. Plug the charger into a power outlet. The battery indicator lights will illuminate to show charging status.
4. A full charge takes approximately 4 hours. The indicator will show a full charge when complete.

### 3.2 Assembling the Vacuum Cleaner

The Mova S2 features a compact folding design for easy storage and versatile assembly options.

1. **For Stick Vacuum Configuration:**
  - a. Insert the extension wand into the main unit until it clicks securely.
  - b. Attach the motorized floor brush to the other end of the extension wand until it clicks.
2. **For Handheld Vacuum Configuration:**
  - a. Attach desired accessory (crevice tool or 2-in-1 brush tool) directly to the main unit until it clicks.
3. **Wall Mount Installation (Optional):**
  - a. Choose a suitable location near a power outlet.
  - b. Secure the wall mount dock to the wall using the provided screws and anchors.
  - c. The vacuum can be stored on the dock for convenient charging and access.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Powering On/Off

- To turn on the vacuum, press the power button located on the main unit.
- To turn off the vacuum, press the power button again.

### 4.2 Suction Modes

The Mova S2 offers multiple suction modes to adapt to different cleaning needs:

- **Standard Mode:** Suitable for everyday cleaning and lighter debris. Provides over 60 minutes of runtime with the roller brush.
- **Max Mode:** Provides strong cleaning with 150AW suction power and 25,000Pa suction pressure for stubborn dirt and deep cleaning.
- **Auto Mode:** The vacuum automatically adjusts suction power based on the detected floor type and debris level.

Press the mode selection button on the main unit to cycle through the available suction modes.

### 4.3 Using Attachments

- **Motorized Floor Brush:** Use for all floor types, including hard floors and carpets. The tangle-free design helps prevent hair from wrapping around the brush.
- **Crevice Tool:** Attach directly to the main unit or extension wand for cleaning narrow gaps, corners, and car interiors.
- **2-in-1 Brush Tool:** Use the brush for dusting delicate surfaces like keyboards or shelves. Slide the brush back to use the upholstery tool for fabric surfaces.

## 5. MAINTENANCE AND CARE

---

Regular maintenance ensures optimal performance and extends the lifespan of your Mova S2 vacuum cleaner.

### 5.1 Emptying the Dust Bin

1. Ensure the vacuum is turned off.
2. Locate the dustbin release button on the main unit.
3. Press the button to open the dustbin flap and empty contents into a trash can.
4. Close the dustbin flap securely until it clicks.

### 5.2 Cleaning the Filters

The filters should be cleaned regularly to maintain suction power and filtration efficiency. It is recommended to clean them after every 3-5 uses.



This image shows the Mova S2's main unit with its dustbin and filters. The round HEPA filter and sponge filter are displayed separately, indicating they are removable for cleaning. The dustbin is transparent, allowing visibility of collected debris.

1. Turn off the vacuum and detach the dustbin from the main unit.
2. Remove the HEPA filter and sponge filter from the dustbin.
3. Tap the filters gently to remove loose dust. For a deeper clean, rinse the filters under cold running water.
4. Allow the filters to air dry completely for at least 24 hours before reinserting them. Do not use a dryer or heat to dry.
5. Reassemble the filters and dustbin, then reattach to the main unit.

### 5.3 Cleaning the Roller Brush

Periodically check the roller brush for tangled hair or debris.

1. Turn off the vacuum and detach the motorized floor brush.
2. Locate the brush release tab or cover on the side of the floor brush. Open it to remove the roller brush.
3. Use scissors or a cleaning tool to cut and remove any tangled hair or fibers from the brush.
4. Reinsert the roller brush and close the cover securely.

## 5.4 Battery Care

- Always use the original charger provided.
- Do not expose the battery to extreme temperatures.
- If the vacuum will not be used for an extended period, charge the battery fully before storage and recharge every 3-6 months.

## 6. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged Battery not properly installed	Charge the battery fully Ensure battery is securely clicked into place
Low suction power	Dustbin is full Filters are clogged Brush roll is obstructed Hose/wand is blocked	Empty the dustbin Clean or replace filters Remove obstructions from brush roll Check and clear any blockages in the hose or wand
Brush roll not spinning	Obstruction in brush roll Brush roll not properly installed	Remove any obstructions Ensure brush roll is correctly inserted and secured
Short runtime	Battery not fully charged Using Max mode continuously Aging battery	Ensure battery is fully charged Use Standard or Auto mode for longer cleaning sessions Contact customer support for battery replacement options

## 7. SPECIFICATIONS

- **Model:** Mova S2
- **Form Factor:** Stick
- **Suction Power:** 150AW
- **Suction Pressure:** 25,000Pa
- **Motor:** 460W Brushless Motor
- **Filter Efficiency:** 99.9% (4-layer filter system with HEPA)
- **Battery Type:** Lithium-Ion
- **Voltage:** 250 Volts
- **Wattage:** 250 watts
- **Charging Time:** Approximately 4 hours
- **Runtime:** Over 60 minutes (with roller brush in Standard mode)
- **Item Weight:** 0.5 Kilograms (main unit)
- **Special Features:** Foldable design, tangle-free roller brush, cordless operation

- **Surface Recommendation:** All floors

## 8. WARRANTY AND SUPPORT

The Mova S2 Cordless Stick Vacuum comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, warranty claims, or replacement parts, please contact Mova customer service through the details provided on your purchase receipt or the official Mova website.

Please have your model number (S2) and purchase date ready when contacting support.

### Related Documents - S2

 MOVA S4 Detect Cordless Stick Vacuum User Manual	<p><a href="#"><u>MOVA S4 Detect Cordless Stick Vacuum User Manual</u></a></p> <p>This user manual provides comprehensive instructions for the MOVA S4 Detect Cordless Stick Vacuum. It covers safety guidelines, product features, installation, operation, maintenance, troubleshooting, and specifications to ensure safe and efficient use.</p>
 MOVA J30 Cordless Stick Vacuum User Manual	<p><a href="#"><u>MOVA J30 Cordless Stick Vacuum User Manual</u></a></p> <p>User manual for the MOVA J30 Cordless Stick Vacuum, providing detailed instructions on setup, usage, maintenance, and troubleshooting for optimal performance.</p>
 MOVA S2 Cordless Stick Vacuum User Manual	<p><a href="#"><u>MOVA S2 Cordless Stick Vacuum User Manual</u></a></p> <p>This user manual provides comprehensive instructions, safety guidelines, maintenance tips, and troubleshooting for the MOVA S2 Cordless Stick Vacuum, designed for efficient home cleaning.</p>
 MOVA S5 Sense Cordless Stick Vacuum User Manual	<p><a href="#"><u>MOVA S5 Sense Cordless Stick Vacuum User Manual   Dreame Trading</u></a></p> <p>User manual for the MOVA S5 Sense Cordless Stick Vacuum. Provides comprehensive guidance on setup, operation, maintenance, and troubleshooting. Learn how to use your MOVA vacuum effectively for efficient home cleaning.</p>

<b>MOVA I10</b> スティック型コードレス掃除機 取扱説明書	<p><a href="#"><u>MOVA I10 Stick Cordless Vacuum Cleaner Instruction Manual</u></a></p> <p>Comprehensive instruction manual for the MOVA I10 stick cordless vacuum cleaner, covering safety information, product introduction, setup, charging, usage, maintenance, troubleshooting, specifications, and warranty. Learn how to operate and care for your MOVA I10 for optimal performance.</p>
  	<p><a href="#"><u>MOVA S2 Cordless Stick Vacuum User Manual</u></a></p> <p>This user manual provides comprehensive instructions for the MOVA S2 Cordless Stick Vacuum, covering product overview, safety guidelines, operation, maintenance, specifications, and troubleshooting. Learn how to effectively use and care for your MOVA S2 vacuum cleaner.</p>