

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Brightown](#) /

› [Brightown 4.9FT Merry Christmas Sign with Polar Bear - Instruction Manual \(Model JT-DC120V1000-F\)](#)

Brightown JT-DC120V1000-F

Brightown 4.9FT Merry Christmas Sign with Polar Bear - Instruction Manual

Model: JT-DC120V1000-F

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Brightown 4.9FT Merry Christmas Sign with Polar Bear. Please read these instructions thoroughly before assembly and operation, and retain them for future reference.



Figure 1: The Brightown Merry Christmas Sign with Polar Bear illuminated in an outdoor setting.

2. SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, observe the following precautions:

- Outdoor use only.
- Unplug the decoration during heavy rain or thunderstorms.
- Always follow the installation instructions carefully.
- Keep the product away from flammable materials.
- Do not allow children to play on or near the display.
- Ensure all electrical connections are secure and protected from moisture.
- Do not attempt to modify the product or its components.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon opening the package:

- Merry Christmas Sign with Polar Bear (pre-lit with 459 LED warm white lights)

- Metal frame components
- Assembly hardware (screws, pins, etc.)
- Ground stakes (for outdoor installation)
- Power adapter with certified plug
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly is designed to be straightforward and requires no special tools. Follow these steps:

1. Carefully unpack all components and lay them out on a clean, flat surface.
2. Connect the various sections of the Merry Christmas sign and the Polar Bear figure using the provided assembly hardware. Ensure all connections are secure.
3. Attach the metal frame for stability.
4. For outdoor use, insert the ground stakes into the designated points on the frame to secure the sign firmly in the ground.
5. Connect the power adapter to the sign's power input.

2D Shape Design Product Details



Figure 2: Illustration of the 2D shape design and the metal structure for fixation, highlighting the assembly points.



Figure 3: Product dimensions (59 inches wide, 27.5 inches high) and close-ups of the premium polyester fabric, metal structure, and blinking lights.

Assembly Demonstration Video

Video 1: A demonstration of assembling a similar lighted Christmas sign. While the figures may vary, the general assembly process for connecting sections and securing the frame is applicable.

5. OPERATION

Operating your Brightown Merry Christmas Sign is simple:

1. Once assembled and securely placed, plug the certified power adapter into a standard electrical outlet.
2. The 459 warm white LED lights will illuminate, creating a festive display.
3. To turn off the sign, simply unplug the power adapter from the outlet.



Figure 4: Visual comparison of the sign's appearance during daylight (unplugged) and at night (illuminated).

Product in Use Video

Video 2: A short video showcasing a lighted Merry Christmas sign in various outdoor settings, demonstrating its visual impact when illuminated.

6. MAINTENANCE

Proper maintenance ensures the longevity of your Christmas sign:

- **Cleaning:** Gently wipe the surface with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the product is unplugged before cleaning.
- **Storage:** When not in use, disassemble the sign if necessary and store it in its original packaging or a protective container in a cool, dry place away from direct sunlight. This helps prevent damage to the fabric and electrical components.
- **Inspection:** Periodically check the power cord, plug, and LED lights for any signs of wear or damage. If any damage is found, discontinue use and contact customer support.

7. TROUBLESHOOTING

If you encounter issues with your Brightown Merry Christmas Sign, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lights do not turn on.	Power adapter not plugged in, faulty outlet, damaged cord/lights.	Ensure the power adapter is fully plugged into a working outlet. Check for visible damage to the cord or lights. If damaged, discontinue use.
Lights flicker or are dim.	Loose connection, power fluctuation, damaged LED.	Check all connections. Ensure the power source is stable. While individual LEDs are durable, if flickering persists, contact support.
Sign is unstable outdoors.	Insufficiently secured ground stakes.	Ensure all ground stakes are fully inserted into the ground. If the ground is too soft, consider additional anchoring.

8. SPECIFICATIONS

Key technical details for your Brightown Merry Christmas Sign:

- **Model Number:** JT-DC120V1000-F
- **Dimensions (L x W x H):** 3 x 2 x 1 inches (packaged, actual display size is approx. 59 x 27.5 inches)
- **Item Weight:** 1 pounds (16 ounces)
- **Brand:** Brightown
- **Manufacturer:** CHANGZHOU JUTAI ELECTRONIC CO LTD
- **Material:** Polyvinyl Chloride (PVC), Metal Frame
- **Light Color:** Warm White
- **Number of Light Sources:** 459 LEDs
- **Recommended Uses:** Christmas decorations, party decorations, home decorations, door decorations,

garden decorations, Christmas tree decorations.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Brightown customer service directly. Keep your purchase receipt for any warranty claims.