

VK5028

Generic VK5028 Rose Stimulator User Manual

Model: VK5028

1. INTRODUCTION

Thank you for purchasing the Generic VK5028 Rose Stimulator. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your device. Please read this manual thoroughly before first use and retain it for future reference.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the device:

- **Material Safety:** The device is made of silicone. If you have known allergies to silicone, consult a healthcare professional before use.
- **Cleaning:** Always clean the device thoroughly before and after each use as described in the "Maintenance" section.
- **Water Resistance:** The device is waterproof. However, ensure the battery compartment is securely sealed before exposing it to water.
- **Battery Use:** Use only the specified battery type (1 AAA battery). Do not mix old and new batteries or different types of batteries. Remove batteries if the device will not be used for an extended period.
- **Storage:** Store the device in a cool, dry place, away from direct sunlight and out of reach of children.
- **Disposal:** Dispose of batteries and the device according to local regulations.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Generic VK5028 Rose Stimulator
- 1 x User Manual (this document)
- *Note: AAA battery is not included and must be purchased separately.*

4. PRODUCT OVERVIEW

The VK5028 Rose Stimulator is a compact, portable device designed for personal use. It features multiple vibration modes and is constructed from body-safe silicone.

Features:

- 10 distinct vibration patterns
- Made from high-quality, body-safe silicone

- Waterproof design for easy cleaning and versatile use
- Compact and portable

Device Components:

Refer to the image below for a visual representation of the device.



Figure 1: Front view of the VK5028 Rose Stimulator, showing the rose-shaped head and control button.

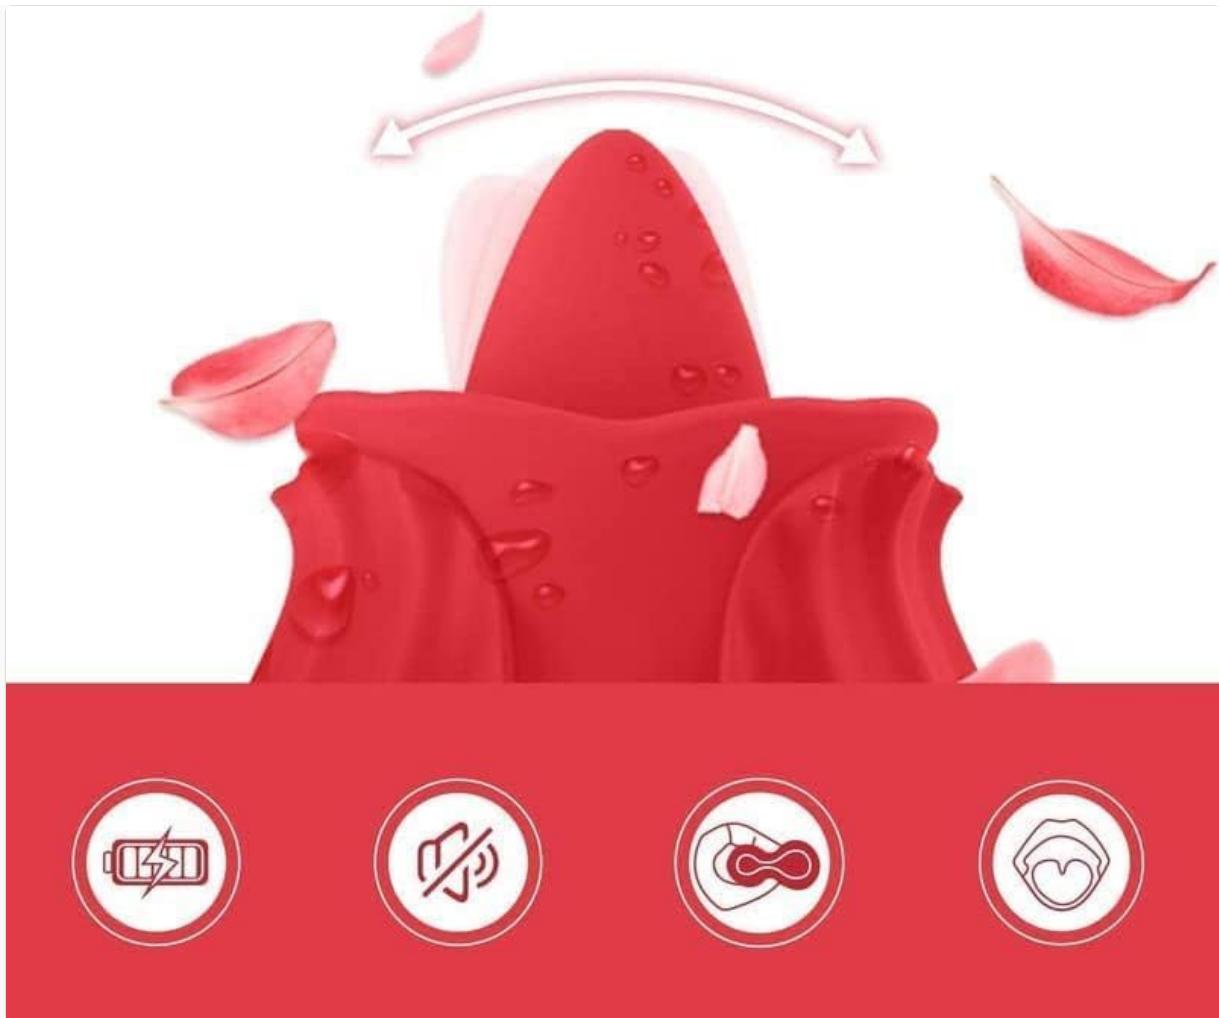


Figure 2: Feature icons indicating battery status, waterproof capability, and multiple modes.

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment cover, typically at the base of the device.
2. Carefully twist or pull to open the cover.
3. Insert one (1) AAA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Securely close the battery compartment cover to maintain the waterproof seal.

5.2 Initial Cleaning

Before first use, clean the device thoroughly according to the instructions in the "Maintenance" section.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- To **Power On**: Press and hold the power button (usually marked with a power symbol or a simple circle) for 2-3 seconds until the device activates.
- To **Power Off**: Press and hold the power button for 2-3 seconds until the device deactivates.

6.2 Mode Selection

The device features 10 distinct vibration patterns.

- While the device is powered on, short press the power button to cycle through the 10 available vibration modes.
- Each short press will advance to the next mode.
- The device will remember the last used mode when powered off and on again.



Figure 3: Illustration of the 10 distinct vibration patterns.

6.3 Usage

Apply the device to the desired area. Experiment with different modes and pressure to find what is most comfortable and pleasurable for you. The device is designed for external use.

7. MAINTENANCE

7.1 Cleaning

To ensure hygiene and prolong the life of your device:

1. Always clean the device before and after each use.
2. Wash the device with warm water and a mild, toy-safe soap.

3. Rinse thoroughly to remove all soap residue.
4. Pat dry with a lint-free cloth or allow to air dry completely before storing.
5. Do not use harsh chemicals, alcohol, or petroleum-based cleaners, as these can damage the silicone material.



Figure 4: The VK5028 Rose Stimulator demonstrating its waterproof design during cleaning.

7.2 Storage

Store the device in a clean, dry, and dust-free environment. Keep it away from extreme temperatures, direct sunlight, and other products made of different materials to prevent potential reactions or damage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is dead or incorrectly installed.	Replace the AAA battery with a new one, ensuring correct polarity.

Problem	Possible Cause	Solution
Vibrations are weak or inconsistent.	Low battery power.	Replace the AAA battery.
Device stops working unexpectedly.	Battery connection issue or battery depletion.	Check battery installation or replace the battery. If the problem persists, contact customer support.

9. SPECIFICATIONS

Model:	VK5028
Brand:	Generic
Material:	Silicone
Color:	Red
Vibration Modes:	10
Power Source:	1 x AAA Battery (not included)
Water Resistance:	Waterproof
Approx. Dimensions:	3.08 inches (height) x 2.29 inches (width)
Approx. Weight:	4.23 ounces

10. WARRANTY AND SUPPORT

Specific warranty information for the Generic VK5028 Rose Stimulator is not provided in the product details. For any product-related inquiries, technical support, or warranty claims, please contact the retailer or manufacturer directly through their official channels.