

[Manuals.plus](#) /

› [RETROSUN](#) /

› RETROSUN KC-806 CD Player Remote Control Replacement User Manual

RETROSUN KC-806

RETROSUN KC-806 CD Player Remote Control Replacement User Manual

Model: KC-806 (FW375)

INTRODUCTION

This manual provides instructions for the RETROSUN KC-806 Remote Control, a replacement unit designed for specific portable and desktop CD players. This remote control is compatible with CD players from brands such as MICOCIOUS, ZYOKATA, SKYANS, Howduoyu, ENVYCLOUD, and Austepax. It operates using infrared technology and requires no programming or pairing.

KC-806 Replacement Remote Control Compatible with MICOCIOUS ZYOKATA SKYANS



Image: The KC-806 remote control, highlighting its compatibility with MICOCIOUS, ZYOKATA, and SKYANS CD players.

SETUP

The RETROSUN KC-806 remote control is designed for immediate use without complex setup procedures. Follow these steps to prepare your remote for operation:

- 1. Install Batteries:** The remote requires two (2) 1.5V AAA batteries. Open the battery compartment cover located on the back of the remote. Insert the batteries, ensuring correct polarity (+ and - terminals match the indicators inside the compartment). Close the battery cover securely.
- 2. No Programming Required:** This remote control is pre-programmed for compatible CD players. No additional programming or pairing steps are necessary. Once batteries are installed, the remote is ready for use.

Requires Two 1.5V AAA Batteries

(Batteries are not included)



NEW ABS

Image: Rear view of the remote control, illustrating the battery compartment and the correct insertion of two AAA batteries.

No programming or pairing needed.
work right out of box after putting batteries!



Image: The remote control positioned next to a screen, emphasizing that no programming or pairing is required for operation.

OPERATING INSTRUCTIONS

The KC-806 remote control provides intuitive access to your CD player's functions. Ensure a clear line of sight between the remote and the CD player's infrared receiver for optimal performance. The remote offers a reliable operating range of up to 8 meters (26 feet) with a 120-degree wide-angle design.

- **Power Button** (): Press to turn the CD player on or off.
- **AUX**: Selects the Auxiliary input mode.
- **USB**: Selects the USB input mode.
- **CD**: Selects the CD playback mode.
- **FM/SH**: Toggles between FM radio mode or performs a search function.
- **Alarm ON/OFF** (): Activates or deactivates the alarm function.
- **Play/Pause** (): Starts or pauses playback.
- **Stop** (■): Stops playback.
- **Previous Track** (): Skips to the beginning of the current track or the previous track.

- **Next Track ()**: Skips to the next track.
- **Volume Up (VOL+)**: Increases the volume level.
- **Volume Down (VOL-)**: Decreases the volume level.
- **Repeat**: Toggles repeat playback modes (e.g., repeat one, repeat all).
- **A-B**: Sets and repeats a specific section of audio.
- **Numeric Buttons (0-9)**: Used for direct track selection or inputting radio frequencies.
- **Clock ()**: Accesses clock settings or display.
- **MODE**: Cycles through different playback or input modes.

Long distance precise control

Strongest signal by Infrared technology, further transmission for multi-angle induction. Precisely control far from 10 meters / 33 feet.



Image: A hand demonstrating the remote control's long-distance and precise infrared control capability.

MAINTENANCE

Proper care and maintenance will ensure the longevity and reliable performance of your RETROSUN KC-806 remote control.

- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace

both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

- **Cleaning:** To clean the remote, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's finish or internal components.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops and Impacts:** The remote is constructed from durable ABS material, but excessive force or drops can cause internal damage. Handle with care.



Image: The remote control, emphasizing its soft plastic buttons and durable ABS material construction.

TROUBLESHOOTING

If you encounter issues with your RETROSUN KC-806 remote control, refer to the following common problems and solutions:

- **Remote is not responding:**
 - Check the batteries. Ensure they are inserted correctly with the proper polarity and are not depleted. Replace with fresh AAA batteries if necessary.

- Ensure there is a clear line of sight between the remote control and the infrared receiver on your CD player. Obstructions can block the signal.
 - Verify that the remote is compatible with your specific CD player model. This remote is designed for MICOCIOUS, ZYOKATA, SKYANS, Howduoyu, ENVYCLOUD, and Austepax portable/desktop CD players.
- **Remote has limited range or intermittent response:**
 - Replace the batteries with new ones. Low battery power can reduce the remote's effective range.
 - Remove any objects that might be blocking the infrared signal path between the remote and the CD player.
 - Ensure you are within the optimal operating range (up to 8 meters / 26 feet).

SPECIFICATIONS

Model Number:	KC-806 (FW375)
Brand:	RETROSUN
Compatible Devices:	MICOCIOUS, ZYOKATA, SKYANS, Howduoyu, ENVYCLOUD, Austepax Portable/Desktop CD Players
Connectivity Technology:	Infrared (IR)
Material:	High-quality ABS
Operating Range:	Up to 8 meters (26 feet)
Power Source:	2 x 1.5V AAA Batteries (not included)
Item Weight:	0.04 Kilograms
Dimensions (Approximate):	Length: 5.51 inches (14 cm) Width: 1.65 inches (4.2 cm) Thickness: 0.67 inches (1.7 cm)



Image: The remote control shown with its approximate length, width, and thickness measurements.

WARRANTY AND SUPPORT

The RETROSUN KC-806 Remote Control comes with a **90-day warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product functions as described under normal use.

For warranty claims, technical assistance, or any questions regarding the operation or compatibility of your remote control, please contact the seller or manufacturer directly through the platform where the purchase was made. Please have your purchase details ready when contacting support.



