

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NBCP](#) /

› [NBCP W15 Retro Game Console Instruction Manual](#)

NBCP W15

NBCP W15 Retro Game Console Instruction Manual

Model: W15

INTRODUCTION

The NBCP W15 Retro Game Console provides access to classic gaming experiences. It comes preloaded with 30 licensed vintage games across various genres, offering a nostalgic entertainment option. The console is designed for straightforward plug-and-play operation, connecting to your display via HDMI. It features a 1.5GHz quad-core processor for responsive gameplay and an optimized Android-based system. Online multiplayer capabilities are supported via WiFi and LAN (RJ45) connections.

Video: An overview of the NBCP W15 Retro Game Console, highlighting its features, included accessories, and ease of use for retro gaming enthusiasts.

WHAT'S IN THE BOX

The package for your NBCP W15 Retro Game Console includes the following items:

- Game console
- Game controller (x2)
- SD card
- HDMI cable
- Power adapter
- User Manual

Image: The packaging contents, showing the console, two wireless controllers, an HDMI cable, a power adapter, and a user manual.

SETUP INSTRUCTIONS

1. **Connect the Console:** Insert the HDMI cable into the HDMI port on the back of the NBCP W15 console and connect the other end to an available HDMI input on your TV, monitor, or projector.



Image: A detailed view of the console's ports, including HD PORT (HDMI), LAN, USB-1, USB-2, AV, and DC power input. A controller diagram is also shown below.

2. **Power Connection:** Connect the power adapter to the DC input port on the console and plug the adapter into a power outlet.
3. **Insert Controller Batteries:** Each wireless controller requires three AAA batteries (not included). Open the battery compartment on the back of each controller and insert the batteries, observing polarity.

2.4G Wireless Controller No Delay



Image: Two wireless controllers and a USB dongle. The controllers are black with standard button layouts.

4. **Connect Wireless Dongle:** Insert the USB wireless dongle (included with controllers) into one of the USB ports on the console. This dongle facilitates communication between the console and the wireless controllers.
5. **Power On:** Turn on your TV/monitor and select the correct HDMI input. Press the power button on the console to start.
6. **Language Selection:** Upon first boot, you may be prompted to select a language. Use the controller to navigate and confirm your selection.
7. **Network Connection (Optional):** For online multiplayer, connect the console to the internet via Wi-Fi or an Ethernet cable (RJ45). Navigate to the network settings in the console's menu to configure your connection.

Video: A user demonstrates the unboxing and initial setup of the NBCP W15 Retro Game Console, including connecting the HDMI cable, power adapter, and wireless controller dongle. The video also shows the language selection screen and the Wi-Fi setup process.

OPERATING INSTRUCTIONS

Basic Navigation

- Use the D-Pad or Left Joystick on the controller to navigate through menus and game selections.

- Press the **A button** (or equivalent action button) to confirm selections.
- Press the **B button** (or equivalent back button) to return to the previous screen.
- The **START** button typically begins a game or pauses gameplay.
- The **SELECT** button may offer in-game options or menu functions depending on the game.

Playing Games

1. From the main menu, navigate to the desired game using the controller.
2. Press the **A button** to launch the game.
3. Follow on-screen prompts to start gameplay.
4. To exit a game, consult the in-game menu or the console's user manual for specific instructions, as this can vary by game.



Image: The NBCP W15 console and two controllers positioned in front of a television displaying a grid of game titles, illustrating the main game selection interface.

GAME LIST

The NBCP W15 Retro Game Console comes preloaded with 30 licensed classic games. A partial list of included games is provided below:

Category 1	Category 2	Category 3
gourmet-sentai-bar-a-yarou	Top Racer	Snow Board Championship

Category 1	Category 2	Category 3
Magic Purple	Eliminator Boat Duel	Gadget Twins
Power Piggs	Top Racer 3000	Squash
Burglar X	Water Margin, the Tales of Clouds and Wind	Street Racer
Skuljagger	Big Karnak	Dragon Master
World Rally	Power Balls	Radical Rex
Thunder Hoop	Hard Times	Second Samurai
World Beach Volley	Top Racer 2	Stone Protectors
Maniac Square	Fancy World	Bang!

Online gaming in different regions

in Britain

in America

Appendix1 :Games List

Legend	Full Throttle -All American Racing	Maniac Square	Fancy World	Eliminator Boat Duel
gourmet-sentai-bar-a-yarou	Top Racer	Snow Board Championship	Magic Purple	Gadget Twins
Power Piggs	Top Racer 3000	Squash	Burglar X	Water Margin, the Tales of Clouds and Wind
Stone Protectors	Mountain Bike Rally	Thunder Hoop	Hard Times	Second Samurai
Street Racer	Bang!	World Rally	Power Balls	Radical Rex
Skuljagger	Big Karnak	Dragon Master	World Beach Volley	Top Racer 2

Image: A visual representation of the game list, including titles like Top Racer, Power Piggs, and Skuljagger. The image also depicts online gaming scenarios in different geographical regions.

ONLINE MULTIPLAYER

The NBCP W15 console supports online multiplayer functionality, allowing users to connect and play with others globally. This feature is enabled through built-in Wi-Fi and an RJ45 Ethernet port.

Connecting Online

- Ensure your console is connected to the internet via Wi-Fi or Ethernet as described in the Setup section.
- Navigate to the "Online Games" or "Multiplayer" section within the console's interface.
- You may need to register an account or log in to access online features.
- Select a game that supports online multiplayer and follow the on-screen instructions to join or host a session.



**Support network battles, goodbye to single-player games
ENJOY RETRO GAMING ONLINE AT HOME!**

G015 already supports real-time online fighting with other gamers through the GlobalMatch platform.



Image: The online gaming interface of the console, displaying categories for different types of online play such as fighting, cooperation, shooting, and sports games.



Image: Two players engaged in a game on the NBCP W15 console, highlighting the multiplayer aspect of the system.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the console and controllers. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the console and accessories in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace controller batteries when performance degrades. Ensure correct battery type (AAA) and polarity.

TROUBLESHOOTING

No Power:

Ensure the power adapter is securely connected to both the console and a working power outlet. Verify the power button on the console is pressed.

No Signal on TV:

Check that the HDMI cable is firmly connected to both the console and the TV. Confirm your TV is set to the correct HDMI input source.

Controllers Not Responding:

Verify that fresh AAA batteries are correctly installed in the controllers. Ensure the USB wireless dongle is plugged into the console. Try turning the controllers off and on using their respective switches.

Game Freezes or Lags:

Restart the console. Ensure the console has adequate ventilation to prevent overheating. If playing online, check your internet connection stability.

SAFETY INFORMATION

Please read and adhere to the following safety guidelines to ensure safe operation and prevent damage to the product or injury to users:

- This product is not suitable for children under 3 years old due to small parts that may present a choking hazard.
- Always use the product under adult supervision, especially with children.
- Avoid exposing the console and accessories to high temperatures, water, or direct sunlight.
- Do not attempt to disassemble or modify the console or controllers. Unauthorized modifications can void the warranty and pose safety risks.
- Use only the included power adapter and cables. Using incompatible accessories can cause damage or electrical hazards.
- Keep the device away from liquids or moisture to prevent electric shock.
- Ensure adequate ventilation around the console during long gaming sessions to prevent overheating.
- Stop use immediately if the device overheats, emits an abnormal smell, or produces smoke. Disconnect from power and contact support.

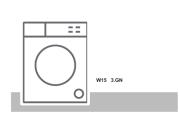
SPECIFICATIONS

Model Number:	W15
Material:	High Density Polyethylene (HDPE)
Memory Storage Capacity:	8 GB
Product Dimensions:	10 x 8 x 10 inches
Item Weight:	1.1 pounds
Processor:	1.5GHz quad-core ARM Cortex-A7 CPU
Connectivity:	HDMI, USB, LAN (RJ45), Wi-Fi
Recommended Age:	24 months and up (with adult supervision)

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the contact details provided with your purchase documentation or visit the official NBCP website. Keep your proof of purchase for warranty claims.

Related Documents - W15

	<p>W15 True Wireless Bluetooth Earphones Instruction Manual - User Guide</p> <p>Comprehensive instruction manual for the W15 True Wireless Bluetooth Earphones, covering setup, operation, touch controls, LED indicators, specifications, and safety warnings.</p>
	<p>Mooas Flat 15W Fast Wireless Charging Nightlight Alarm Clock - Product Specifications</p> <p>Detailed specifications for the Mooas Flat 15W Fast Wireless Charging Nightlight Alarm Clock by Mooas Inc., including material, input power, charging efficiency, maximum power, battery capacity, dimensions, weight, and charging port type.</p>
<p>USER MANUAL</p> <p>Cleanova W15</p> 	<p>Cleanova W15 Robot Vacuum User Manual</p> <p>Comprehensive user manual for the Cleanova W15 robot vacuum cleaner, covering setup, operation, maintenance, and troubleshooting. Learn how to use your robot vacuum for efficient cleaning.</p>
	<p>Tenda W12/W15 Dual Band Gigabit In-Wall Access Point User Guide</p> <p>Comprehensive user guide for Tenda W12 and W15 Dual Band Gigabit In-Wall Access Points, detailing setup, wireless configuration, advanced features, and management tools for optimal network performance. Visit www.tendacn.com for more information.</p>
<p>lord®</p> 	<p>Lord W15 3.GN Práčka Návod na obsluhu</p> <p>Tento návod na obsluhu poskytuje podrobné pokyny pre práčku Lord W15 3.GN, vrátane bezpečnostných informácií, inštalácie, používania a údržby.</p>