

[Manuals.plus](#) /

› [Bunfly](#) /

› Bunfly Cat and Dog Clipper Replacement Blades S1, S2 Instruction Manual

Bunfly S1, S2

Bunfly Cat and Dog Clipper Replacement Blades S1, S2 Instruction Manual

PRODUCT OVERVIEW

These Bunfly replacement blades are designed for use with Bunfly pet clippers, specifically models S1 and S2. They are intended to replace worn or dull blades to maintain optimal grooming performance for cats and dogs. The blades feature a raised design for effective pet hair trimming.



Image: A close-up view of the Bunfly replacement clipper blade, showing the white ceramic cutting blade and the metal stationary blade, along with the internal spring mechanism.

SAFETY INFORMATION

Please read and adhere to the following safety guidelines to prevent injury and ensure proper use of the replacement blades:

- Handle blades carefully to avoid cuts. The cutting edges are sharp.
- Keep blades away from children and pets when not in use to prevent accidental injury.
- Ensure blades are securely attached to the clipper before use. Improper attachment can lead to malfunction or injury.
- Keep the clipper and blades away from water sources to prevent electrical hazards and damage to the product.

INSTALLATION AND REPLACEMENT OF BLADES

Follow these steps to safely replace the blades on your Bunfly pet clipper:

1. **Power Off and Unplug:** Before attempting any blade replacement, ensure your pet clipper is turned

off and unplugged from the power source to prevent accidental activation.

2. **Remove Old Blade:** Gently push the old blade assembly upwards with your thumb until it detaches from the clipper housing. Some models may require pressing a release button.
3. **Clean Clipper Head:** Use a small brush to remove any accumulated hair or debris from the clipper head and the blade attachment area. This ensures a clean fit for the new blade.
4. **Align New Blade:** Take the new Bunfly replacement blade. Align the plastic tab on the back of the blade with the corresponding slot on the clipper's drive lever.
5. **Secure New Blade:** Press the new blade firmly down until it clicks into place. Ensure it is seated securely and does not wobble.
6. **Test Functionality:** Plug in the clipper and turn it on briefly to ensure the blade moves smoothly and correctly. If the blade does not move or makes unusual noises, turn off the clipper and re-check the installation.

OPERATING INSTRUCTIONS

Once the new blades are installed, your clipper is ready for use. Always ensure your pet's fur is clean and dry before grooming. Use appropriate comb attachments for desired hair length. Move the clipper smoothly against the direction of hair growth for an even cut. Avoid pressing too hard against the pet's skin to prevent irritation.

MAINTENANCE

Proper maintenance extends the life of your blades and ensures consistent performance:

- **Cleaning:** After each use, remove the blade and use the cleaning brush (usually provided with the clipper) to brush away all hair and debris from both the blade and the clipper head.
- **Oiling:** Apply a few drops of clipper oil (not included with replacement blades) to the teeth of the blade before and after each use. This lubricates the blades, reduces friction, and prevents rust. Run the clipper for a few seconds to distribute the oil.
- **Storage:** Store the blades and clipper in a clean, dry place, away from moisture and extreme temperatures.

TROUBLESHOOTING

- **Blade Does Not Fit:** Ensure you have purchased the correct replacement blades for your specific Bunfly clipper model (S1 or S2). Check the model number on your clipper and compare it with the product description.
- **Blade Does Not Move or Clipper Stops:**
 - Verify that the blade is installed correctly and securely clicked into place.
 - Check for excessive hair or debris lodged in the blade mechanism or clipper head. Clean thoroughly.
 - Ensure the blades are properly oiled. Lack of lubrication can cause friction and hinder movement.
 - If the issue persists, the clipper's motor may be too weak or damaged, or the blade itself might be defective. Contact customer support if necessary.
- **Blades Become Dull Quickly:** Regular cleaning and oiling are crucial. Ensure you are not grooming excessively dirty or matted fur, which can prematurely dull blades.

SPECIFICATIONS

Brand	Bunfly
Model Compatibility	Bunfly Pet Groomer-S1, S2
Item Weight	0.03 Kilograms (approximately 0.95 ounces)
Package Dimensions	2 x 1 x 0.8 inches
Manufacturer	Bunfly
ASIN	B0FF24JRWf