

[Manuals.plus](#) /

› [Bnegynng](#) /

› Bnegynng Android 15 Tablet 10-inch User Manual

Bnegynng CP31M

Bnegynng Android 15 Tablet 10-inch User Manual

Model: CP31M

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Bnegynng Android 15 Tablet. Please read it thoroughly before using your device and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all items are present in your product packaging:

- Bnegynng Android 15 Tablet (CP31M)
- Protective Leather Case
- Stylus
- USB-C Charging Cable
- Power Adapter
- User Manual (this document)



Image 2.1: Bnegenng Android 15 Tablet with included protective case, USB-C cable, power adapter, and stylus.

3. DEVICE OVERVIEW

Familiarize yourself with the physical components of your tablet.

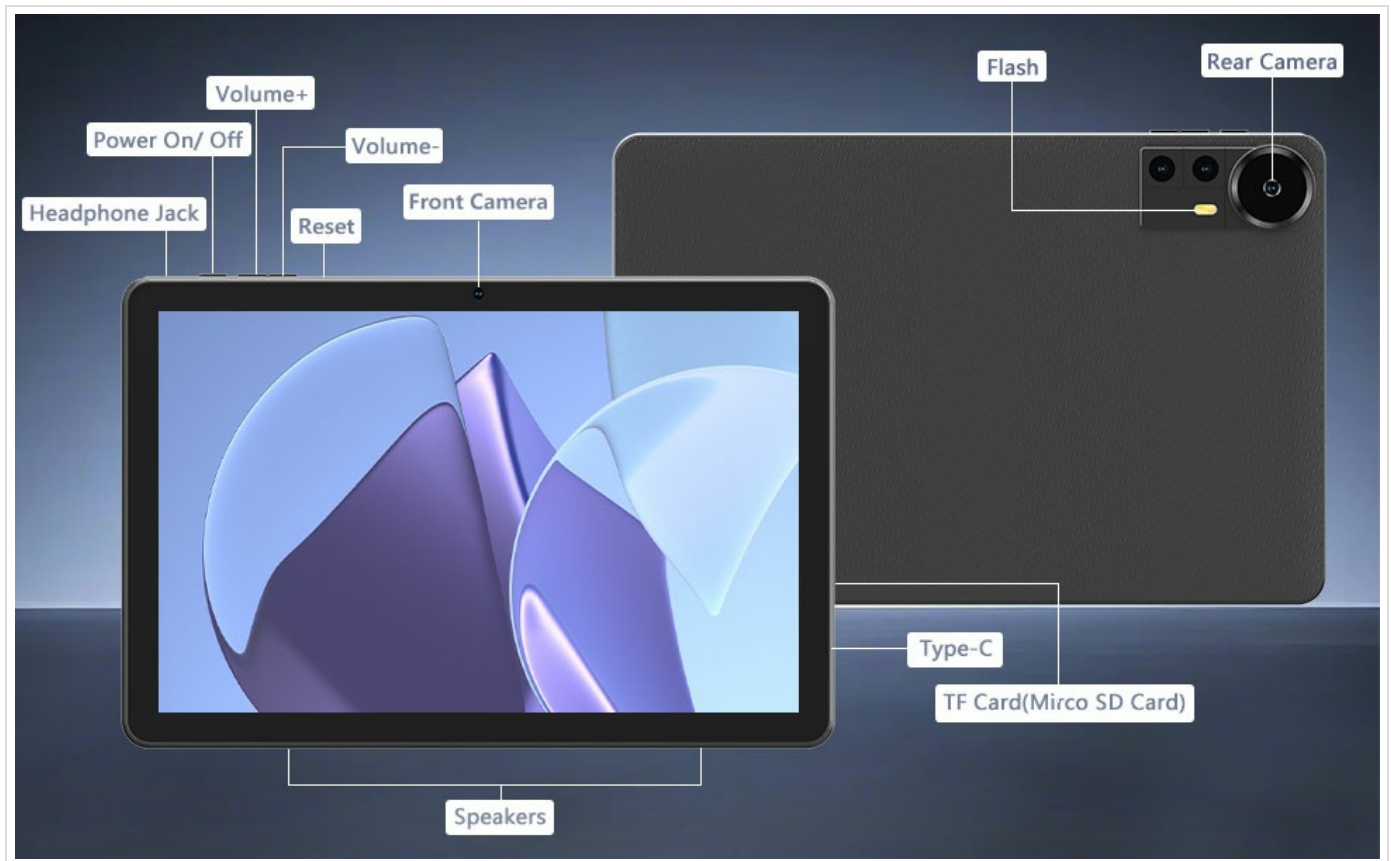


Image 3.1: Front and rear view of the tablet highlighting key features such as the power on/off button, volume controls, headphone jack, reset pinhole, front camera, rear camera, flash, Type-C port, TF card slot, and speakers.

- **Power On/Off Button:** Press and hold to power on/off or restart the device.
- **Volume Buttons:** Adjust the audio volume.
- **Headphone Jack:** Connect 3.5mm audio headphones.
- **Reset Pinhole:** Use a thin pin to reset the device if it becomes unresponsive.
- **Front Camera:** For video calls and selfies.
- **Rear Camera & Flash:** For taking photos and videos.
- **Type-C Port:** For charging and data transfer.
- **TF Card Slot:** Insert a microSD card for expandable storage (up to 2TB).
- **Speakers:** Audio output.

4. INITIAL SETUP

4.1 Charging the Tablet

Before first use, fully charge your tablet. Connect the USB-C cable to the tablet's Type-C port and the power adapter, then plug the adapter into a wall outlet.

Larger Capacity to Store More Resources You Want

20(4+16)GB RAM + 128GB ROM, meet the need of large amount of files, pictures and videos storage.



20GB RAM



128GB RAM



2TB Expandable

Image 4.1: The tablet connected to a charger via its USB-C port, illustrating the charging process.

4.2 Powering On/Off

To power on, press and hold the Power On/Off button until the screen lights up. To power off, press and hold the Power On/Off button, then select "Power off" from the options.

4.3 Initial Configuration

Follow the on-screen prompts to complete the initial setup, including:

- Language selection
- Wi-Fi network connection
- Google account sign-in
- Date and time settings

5. OPERATING INSTRUCTIONS

5.1 Navigating the Android 15 Interface

Your tablet runs on Android 15, offering an intuitive user experience. Use touch gestures for navigation:

- **Tap:** Select an item.
- **Swipe:** Scroll through screens or lists.
- **Pinch-to-Zoom:** Enlarge or reduce content.
- **Long Press:** Access contextual menus or move icons.

5.2 Connecting to Wi-Fi

1. Go to *Settings > Network & internet > Wi-Fi*.
2. Toggle Wi-Fi **On**.
3. Select your desired network and enter the password if prompted.

5.3 Using the Stylus

The included stylus can be used for precise input, drawing, and note-taking. Simply touch the stylus tip to the screen as you would with your finger.

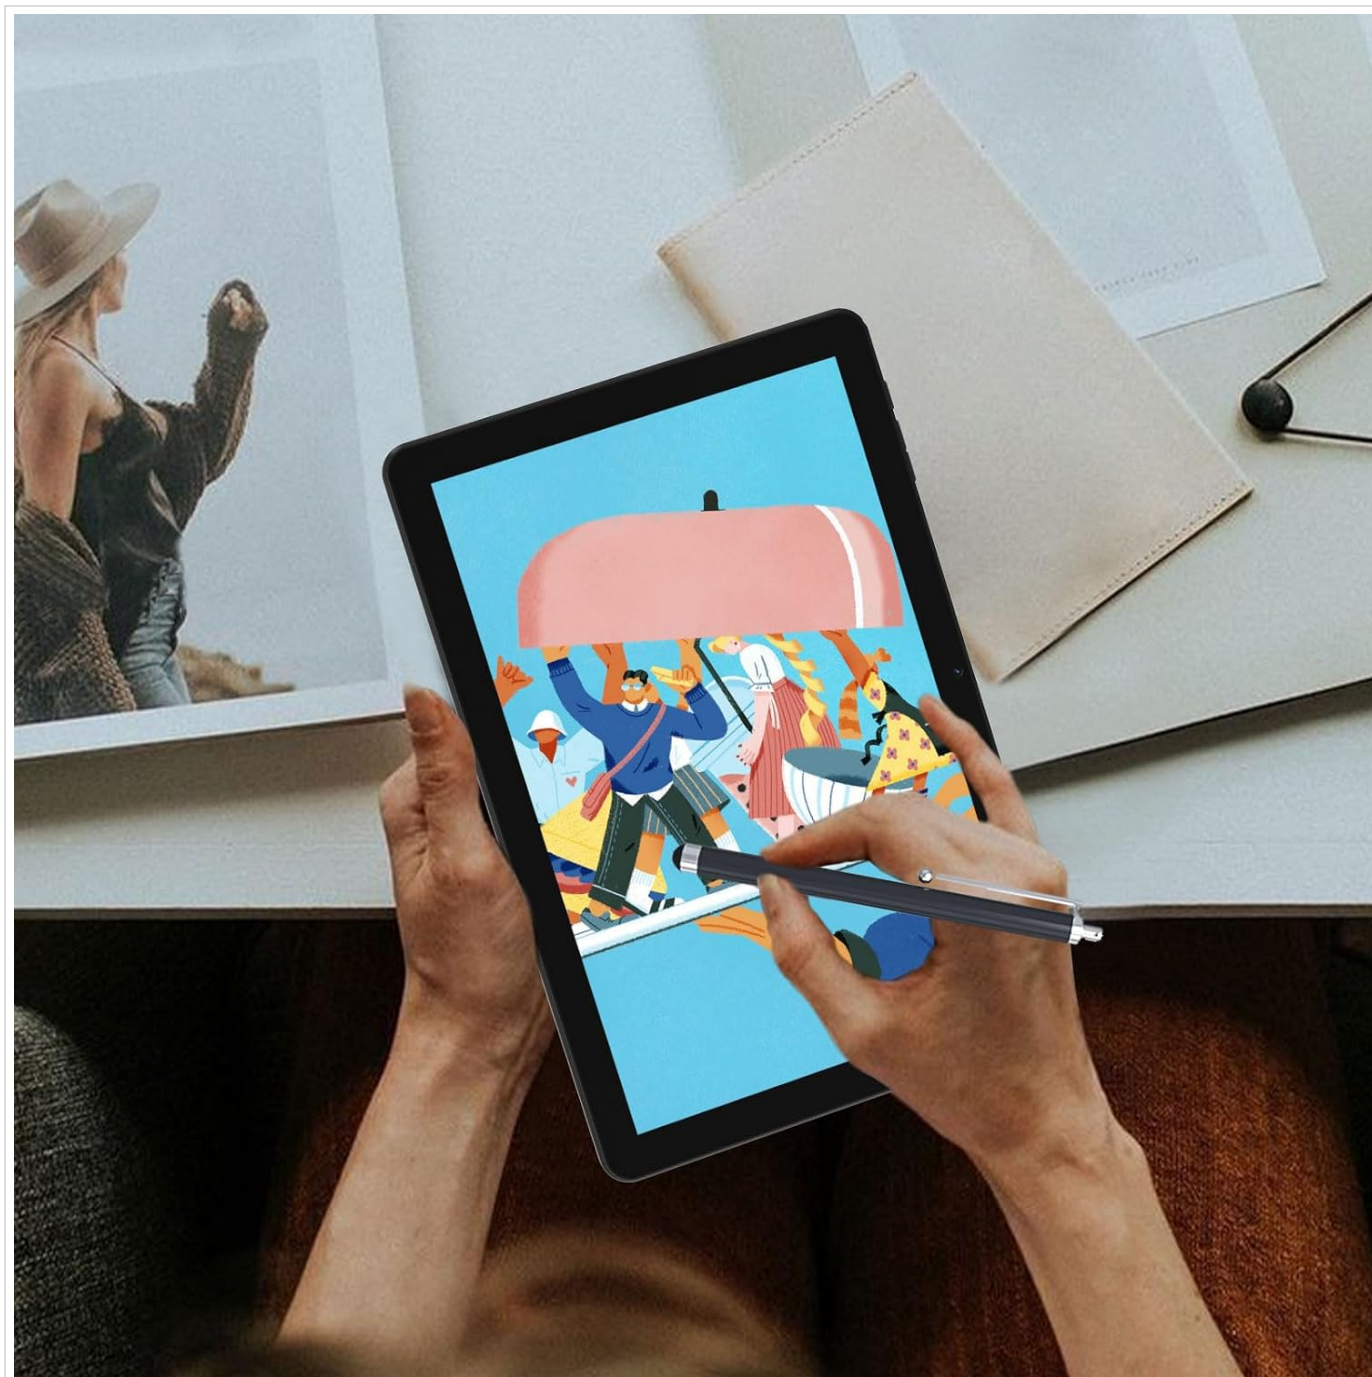


Image 5.1: A user interacting with the tablet screen using the provided stylus for precise input.

5.4 Expanding Storage

Insert a microSD (TF) card into the designated slot to expand storage up to 2TB. Ensure the tablet is powered off before inserting or removing the card.



Image 5.2: Visual representation of the tablet's memory specifications, including 20GB RAM, 128GB internal storage, and support for up to 2TB expandable storage via a TF card.

6. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid extreme temperatures and do not allow the battery to fully discharge frequently.
- **Software Updates:** Regularly check for and install system updates to ensure optimal performance and security.
- **Storage Management:** Periodically clear unnecessary files and apps to maintain performance.

7. TROUBLESHOOTING

Problem	Solution
Tablet does not power on.	Ensure the tablet is fully charged. Press and hold the Power On/Off button for 10-15 seconds. If unresponsive, use a thin pin to press the Reset pinhole.
Wi-Fi connection issues.	Restart the tablet and your Wi-Fi router. Verify the Wi-Fi password. Ensure you are within range of the Wi-Fi signal.
Applications are slow or crashing.	Close background applications. Clear app caches (Settings > Apps > [App Name] > Storage & cache > Clear cache). Restart the tablet. Ensure sufficient free storage space.
Screen is unresponsive.	Restart the tablet. If the issue persists, perform a factory reset (<i>Note: This will erase all data</i>).

8. SPECIFICATIONS

Feature	Detail
Model	CP31M
Operating System	Android 15
Processor	2.0 GHz Quad-Core CPU
RAM	20GB (4GB physical + 16GB virtual)
Internal Storage (ROM)	128GB
Expandable Storage	Up to 2TB via TF (microSD) card
Display	10.1-inch HD IPS (1280x800 pixels)
Wireless Connectivity	5G WiFi 6, Bluetooth 5.0
Battery	6000mAh
Cameras	2MP Front, 8MP Rear with Flash
Dimensions (LxWxH)	10 x 5 x 0.3 inches
Weight	2.33 pounds
Certifications	Widevine L1, Google GMS

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Bnegynng website. If you have any questions, please feel free to contact us, we will give you a satisfactory answer within 24 hours.

10. PRODUCT VIDEOS

Bnegynng Android 15 Tablet Overview

Your browser does not support the video tag.

Video 10.1: An official overview of the Bnegynng Android 15 Tablet, showcasing its design, features, and various color options. This video highlights the tablet's quad-core CPU, vibrant display, and overall aesthetic.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question