

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Invicta](#) /

› [INVICTA Attiva x Digital ACW8105MC-005 Digital Quartz Watch User Manual](#)

Invicta ACW8105MC-005

INVICTA Attiva x Digital ACW8105MC-005 Digital Quartz Watch User Manual

Brand: Invicta | **Model:** ACW8105MC-005

1. PRODUCT OVERVIEW

The INVICTA Attiva x Digital ACW8105MC-005 is a men's digital watch designed for durability and precise timekeeping. It features a 45mm plastic case with a black dial, powered by a reliable quartz movement. This model offers water resistance up to 3 bar, making it suitable for everyday use.

Key features include:

- 45mm plastic case with a black dial.
- Precise quartz movement for accurate timekeeping.
- Water resistance up to 3 bar (30 meters / 100 feet).
- Part of the Attiva x Invicta Digital collection.



Image 1.1: Front view of the INVICTA Attiva x Digital ACW8105MC-005 watch, showcasing its black digital display and robust plastic casing.

2. SETUP

2.1 Initial Inspection

Upon unpacking your watch, carefully inspect it for any visible damage. Remove any protective films from the watch face or case back.

2.2 Setting Time and Date

Digital watches typically have 2-4 buttons for operation. While specific button functions may vary, the general procedure for setting time and date is as follows:

- 1. Enter Setting Mode:** Press and hold the **MODE** button (often located on the bottom left) until the time display starts flashing, indicating you are in setting mode.
- 2. Select Item:** Press the **MODE** button repeatedly to cycle through the settings: seconds, hours, minutes, month, day, year.
- 3. Adjust Value:** Use the **ADJUST** or **SET** button (often top right) to increase or decrease the flashing value.
- 4. Confirm and Exit:** Once all settings are correct, press the **MODE** button again or the **LIGHT** button

(if available) to exit the setting mode.

Note: Refer to the specific button labels on your watch for precise operation.

3. OPERATING INSTRUCTIONS

3.1 Time Display

The watch primarily displays the current time (hours, minutes, seconds). Some models may offer 12-hour or 24-hour format options, which can usually be toggled in the setting mode.

3.2 Alarm Function

To set the alarm:

1. Press the **MODE** button until the alarm display appears (often indicated by "AL" or a bell icon).
2. Press and hold the **ADJUST** button until the alarm time starts flashing.
3. Use the **ADJUST** or **SET** button to set the desired alarm hour and minute.
4. Press **MODE** to confirm and exit.
5. To activate/deactivate the alarm, press the **ADJUST** button while in alarm mode. An alarm icon will typically appear when active.

3.3 Stopwatch Function

To use the stopwatch:

1. Press the **MODE** button until the stopwatch display appears (often indicated by "ST" or "STOP").
2. Press the **START/STOP** button (often top right) to begin timing.
3. Press the **START/STOP** button again to pause/resume timing.
4. Press the **RESET** button (often bottom right) to clear the stopwatch to zero.

3.4 Backlight

If your watch features a backlight, press the **LIGHT** button (usually top left) to illuminate the display in low-light conditions. The backlight typically stays on for a few seconds.

4. MAINTENANCE

4.1 Water Resistance

This watch is water resistant up to 3 bar (30 meters / 100 feet). This rating means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. **It is NOT suitable for showering, swimming, diving, or snorkeling.** Do not operate buttons while the watch is wet or submerged.

4.2 Cleaning

To clean your watch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch case and strap.

4.3 Battery Replacement

The watch is powered by a quartz movement, which requires a battery. When the display becomes dim or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

5. TROUBLESHOOTING

- **Display is blank or dim:**

The battery may be depleted. Replace the battery as described in Section 4.3. If the issue persists after battery replacement, contact support.

- **Time is incorrect:**

The time may need to be reset. Follow the instructions in Section 2.2. Ensure you are setting the correct AM/PM if using a 12-hour format.

- **Buttons are unresponsive:**

Ensure the watch is not in a locked mode (some watches have a button lock feature). If the watch was recently exposed to water, ensure it is completely dry. If the issue persists, a reset (if available) or professional inspection may be required.

- **Alarm does not sound:**

Verify that the alarm function is activated (check for the alarm icon on the display). Ensure the alarm time is set correctly.

6. SPECIFICATIONS

Model Number	ACW8105MC-005
Movement	Quartz
Case Material	Plastic
Dial Color	Black
Case Diameter	45 mm
Water Resistance	3 bar (30 meters / 100 feet)
Manufacturer	Activa x Invicta
Package Dimensions	11.3 x 9.91 x 9.19 cm; 353.8 grams

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This INVICTA Attiva x Digital watch comes with a **2-year Activa x Invicta warranty**. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper use, accidents, unauthorized repairs, or normal wear and tear.

7.2 Customer Support

For warranty claims, technical assistance, or any questions regarding your watch, please refer to the official Invicta website or contact their customer service department. Keep your proof of purchase for warranty validation.

You can often find contact information and FAQs on the official [Invicta Store](#) or their corporate website.

© 2026 Invicta. All rights reserved. This manual is for informational purposes only.