

INVICTA ACW1474-002

INVICTA Activa x Digital ACW1474-002 Women's Watch Instruction Manual

Model: ACW1474-002

INTRODUCTION

This manual provides essential instructions for the proper setup, operation, maintenance, and troubleshooting of your INVICTA Activa x Digital ACW1474-002 digital quartz watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.



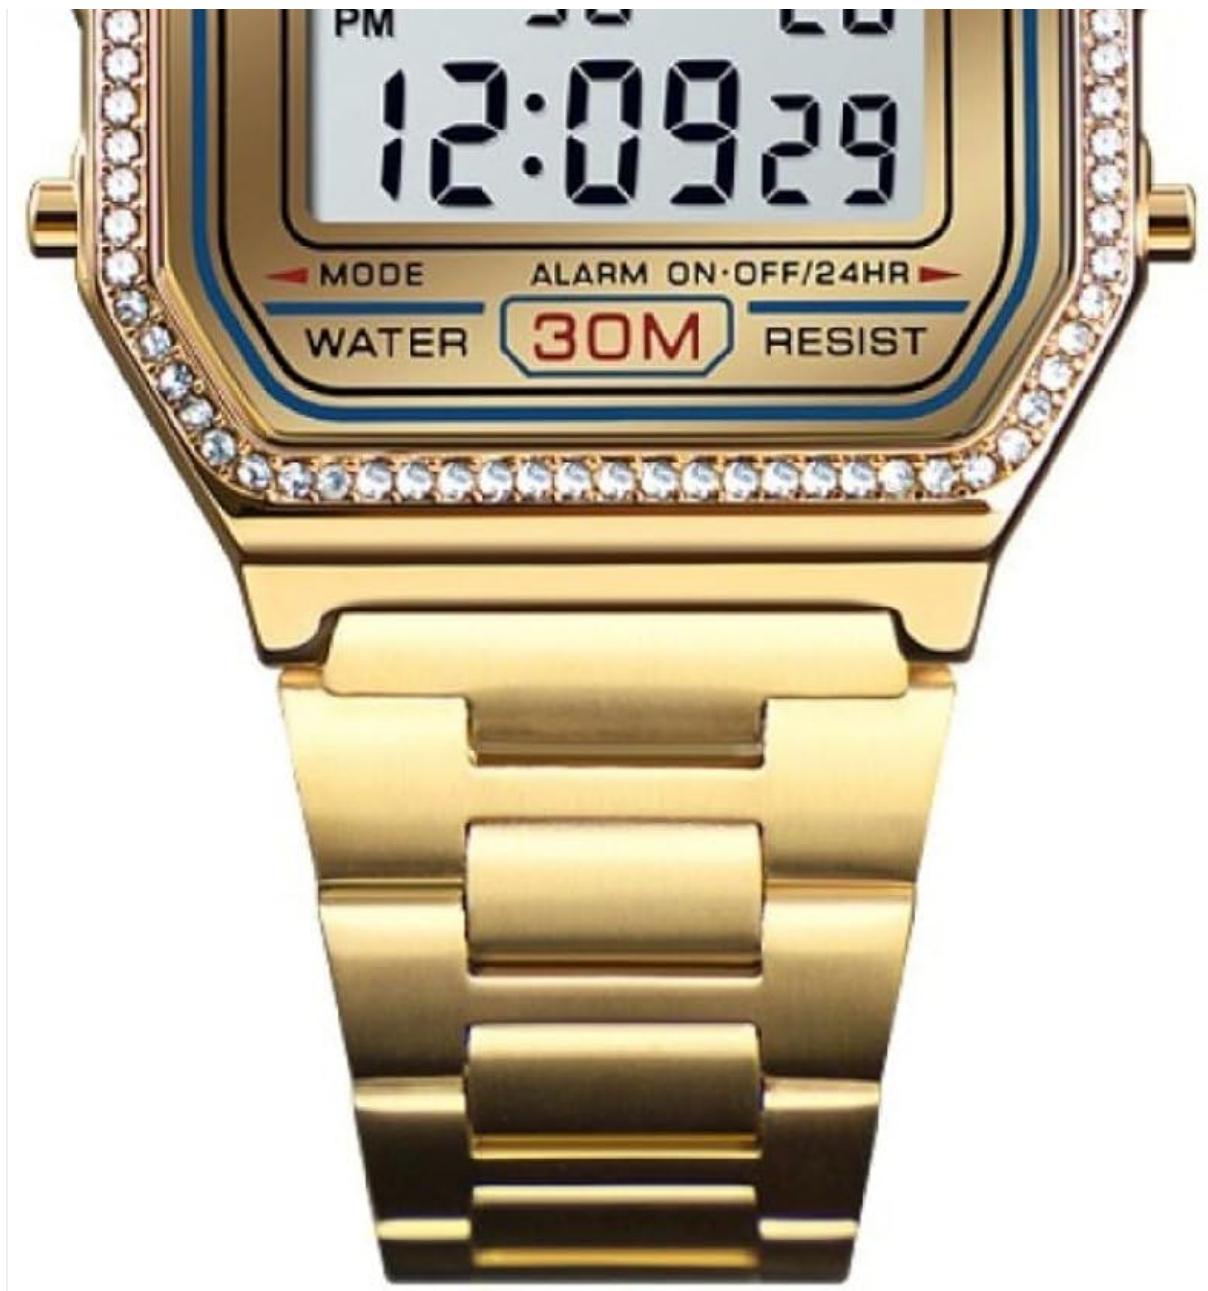


Figure 1: Front view of the INVICTA Activa x Digital ACW1474-002 watch, displaying a digital time and date. The watch features a gold-toned case and bracelet with decorative crystals around the bezel.

SETUP

Before using your watch, it is important to set the correct time and date. Your watch typically has four buttons: **LIGHT**, **MODE**, **START/STOP**, and **RESET**. The exact button functions may vary slightly, but the general procedure is as follows:

1. **Entering Time Setting Mode:** Press the **MODE** button repeatedly until the time display begins to flash, indicating it is ready for adjustment.
2. **Adjusting Time:** Use the **START/STOP** button to increase the flashing digit (hours, minutes). Use the **RESET** button to move to the next digit or setting (e.g., from hours to minutes).
3. **Setting 12/24 Hour Format:** While in time setting mode, you may be able to toggle between 12-hour (with AM/PM indicator) and 24-hour formats using the **START/STOP** or **RESET** button.
4. **Setting Date:** After setting the time, continue pressing the **RESET** button to cycle through date settings (month, day, year) and adjust them using the **START/STOP** button.

5. **Exiting Setting Mode:** Press the **MODE** button again to exit the setting mode and return to normal time display.



Figure 2: Side view of the watch, highlighting the control buttons on the right side of the case, used for setting and operating the watch functions.

OPERATING INSTRUCTIONS

Your INVICTA Activa x Digital watch offers several functions accessible via the **MODE** button.

- **Time Display Mode:** This is the default mode, showing the current time, day of the week, and date.
- **Alarm Mode:**
Press **MODE** until "ALARM" or a bell icon appears. Use **START/STOP** and **RESET** to set the alarm time. Press **MODE** to confirm. To activate/deactivate the alarm, press **START/STOP** while in alarm mode.
- **Chronograph (Stopwatch) Mode:**
Press **MODE** until "CHRONO" or "STOPWATCH" appears. Press **START/STOP** to start and stop the timer. Press **RESET** to clear the timer or record lap times if available.
- **Light Function:**
Press the **LIGHT** button (usually top-left) to illuminate the display for a few seconds in low-light

conditions.



Figure 3: An angled view of the watch, showcasing its digital display and the overall design, including the gold-toned bracelet and crystal-studded bezel.

MAINTENANCE

- **Cleaning:** Wipe the watch case and bracelet regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive materials.
- **Water Resistance (3 BAR):** Your watch is water-resistant to 3 BAR (30 meters). This means it is suitable for daily use and can withstand splashes or brief immersion in water. **It is not suitable for swimming, showering, or diving.** Do not operate buttons while the watch is wet.
- **Battery Replacement:** When the display becomes dim or functions become erratic, the battery may need replacement. This should be performed by a qualified watch technician to ensure proper sealing and water resistance.
- **Storage:** Store your watch in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental button press.	Refer to the "Setup" section to reset the time.
Buttons are unresponsive.	Watch may be in a locked mode or battery is very low.	Try pressing all buttons to see if it unlocks. If not, replace battery.
Condensation inside the watch.	Exposure to extreme temperature changes or water ingress.	Seek professional service immediately to prevent damage. Avoid further water exposure.

SPECIFICATIONS

- Model Number:** ACW1474-002
- Movement:** Electronic Quartz
- Case Diameter:** 37 mm
- Water Resistance:** 3 BAR (30 meters)
- Display Type:** Digital
- Manufacturer:** Activa X Invicta



Figure 4: The yellow and black packaging box for the INVICTA watch, indicating the brand.

WARRANTY

Your INVICTA Activa x Digital ACW1474-002 watch comes with a **2-year Activa X Invicta warranty**. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance, technical support, or warranty service, please contact INVICTA customer service or visit the official INVICTA website. You can find more information and contact details through the [INVICTA Brand Store](#).

	<p><u>Invicta Watch Warranty and Service Guide</u></p> <p>Comprehensive guide to Invicta watch warranties, including registration, service procedures, repair pricing, shipping requirements, and policies. Learn how to maintain your Invicta timepiece for optimal performance and longevity.</p>
	<p><u>Invicta 19289 S1 Rally Watch: Installation and User Guide</u></p> <p>This document provides installation and operational guidance for the Invicta Men's 19289 S1 Rally Analog Display Japanese Quartz Black Watch. It covers essential setup, features, and maintenance to ensure proper use of the timepiece.</p>
	<p><u>Invicta Watch Manual and Warranty Guide: Care, Service, and Features</u></p> <p>Official manual and warranty guide for Invicta watches. Learn about the 3-year warranty, service procedures, watch care, water resistance, and types of movements (Quartz, Automatic, Manual Wind).</p>
	<p><u>Invicta Watch Manual and Warranty Guide</u></p> <p>Comprehensive guide to Invicta watches, covering the 3-year warranty, care instructions, water resistance, safety precautions, and explanations of different watch movement types (Quartz, Automatic, Manual) and dial indicators.</p>
	<p><u>Invicta Watch Manual and Warranty Guide</u></p> <p>Explore the official Invicta watch manual and warranty details. This guide covers your 3-year limited warranty, service center information, watch care, and explanations of various watch features and movements.</p>
	<p><u>Invicta Watch Instruction Manual and Warranty</u></p> <p>A comprehensive guide to understanding and operating your Invicta timepiece, including instructions for setting time, date, day, and alarm functions, as well as chronograph operations and warranty information.</p>