



Manuals.plus /

› **Rolosar** /

› Rolosar Q76 Wireless Earbuds User Manual

## Rolosar Q76

# Rolosar Q76 Wireless Earbuds User Manual

Model: Q76

## 1. INTRODUCTION

---

Thank you for choosing the Rolosar Q76 Wireless Earbuds. This manual provides essential information for setting up, operating, and maintaining your new earbuds. Please read it carefully before use to ensure optimal performance and longevity of your device.

## 2. PRODUCT OVERVIEW

---

The Rolosar Q76 Wireless Earbuds feature advanced Bluetooth 5.4 technology for stable connections and low power consumption. Designed for active lifestyles, they include secure ear hooks and an IP7 waterproof rating, making them suitable for sports and outdoor activities. Enjoy crystal-clear calls with ENC noise-cancelling microphones and immersive Hi-Fi stereo sound with deep bass.



*Image 2.1: Rolosar Q76 Wireless Earbuds and Charging Case*

### 3. WHAT'S IN THE BOX

---

- Rolosar Q76 Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable
- Silicone Ear Tips (S/M/L sizes)
- User Manual

### 4. SETUP AND PAIRING

---

The earbuds utilize Bluetooth 5.4 for quick and stable connections. Follow these steps to pair your earbuds with a device:

1. Ensure the earbuds are charged.
2. Open the lid of the charging case. The earbuds will automatically power on and enter pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth.
4. Search for available Bluetooth devices and select "Q76" from the list.

- Once connected, the earbuds will automatically pair with this device in the future when removed from the case.

# 2025 Bluetooth 5.4

## ONE STEP AUTO PAIRING

Step1: Open the lid (Earbuds auto power on)

Step2: After open the Phone Bluetooth, Click the <Q76> to Pairing



Image 4.1: Bluetooth 5.4 One-Step Auto Pairing

## 5. OPERATING INSTRUCTIONS (SMART TOUCH CONTROLS)

The Rolosar Q76 earbuds feature intuitive smart touch controls located on the upper part of each earbud's surface. Refer to the diagram below for specific functions:

- **Power On/Off:** Touch and hold for 3 seconds.
- **Play/Pause Music:** Single tap on either earbud.
- **Next Song:** Double tap the right earbud.
- **Previous Song:** Double tap the left earbud.
- **Volume Up:** Triple tap the right earbud.
- **Volume Down:** Triple tap the left earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Touch and hold for 2 seconds on either earbud.
- **Activate Voice Assistant:** Touch and hold for 2 seconds on either earbud (when not on a call).

- **Unpair Earbuds:** Quickly tap the left and right earbuds 5 times simultaneously.

## SMART TOUCH CONTROL

High-sensitivity smart touch brings easy operation



Image 5.1: Smart Touch Control Functions

## 6. WEARING THE EARBUDS

For optimal sound quality and secure fit, especially during physical activity, ensure the earbuds are worn correctly. The flexible ear hooks provide additional stability.

1. Choose the correct size ear tips (S/M/L) for your ears. A snug fit enhances noise cancellation and bass response.
2. Place the earbud into your ear canal.
3. Gently position the ear hook over your ear.
4. Rotate and adjust the earbud and hook until a comfortable and secure fit is achieved.

## Designed for sports Earhooks Design

Comfortable, firm, not easy to fall off



- ① Choose the right size ear caps.
- ② Place the earhook over your ear.
- ③ Rotate and adjust to a comfortable angle.

Image 6.1: Proper Earbud Wearing Technique

## 7. CHARGING

The earbuds provide approximately 10 hours of playback on a single charge, with the charging case extending total usage to 50 hours. The case features a transparent cover and an LED display to show battery levels.

- **Charging the Earbuds:** Place the earbuds into the charging case. They will automatically begin charging. The LED display on the case will indicate their charging status.
- **Charging the Case:** Connect the provided USB-C cable to the charging port on the case and to a power source. The LED display will show the case's battery level and charging progress.
- Charging time for earbuds: approximately 1.5 hours.
- Charging time for the case: approximately 2 hours.

# 50H LONG PLAYTIME



Image 7.1: Earbud and Case Charging Information

## 8. WATERPROOFING (IP7 RATING)

The Rolosar Q76 earbuds are rated IP7 waterproof, meaning they can resist sweat, rain, and minor water splashes. This makes them ideal for workouts, gym sessions, cycling, and other activities where exposure to moisture is common. However, they are not designed for swimming or submersion in water.

# IP7 WATERPROOF

ACCOMPANY THE MOVEMENT

No Worries When Using



Image 8.1: IP7 Waterproof Features

## 9. TROUBLESHOOTING

- **Earbuds not pairing:** Ensure both earbuds are charged and removed from the case. Turn off and on your device's Bluetooth. If issues persist, try unpairing the earbuds (refer to Section 5) and re-pairing.
- **One earbud not working:** Place both earbuds back in the charging case, close the lid, and then reopen. Ensure both are charged.
- **Low volume or poor sound quality:** Adjust the earbud's position in your ear and try different sized ear tips to ensure a secure seal. Check your device's volume settings.
- **Charging issues:** Ensure the charging cable is securely connected to both the case and the power source. Verify the charging contacts on the earbuds and inside the case are clean and free of debris.

## 10. SPECIFICATIONS

Feature	Specification
Model Name	Q76
Brand	Rolosar
Connectivity Technology	Wireless (Bluetooth 5.4)
Bluetooth Range	9 Meters (30 feet)
Battery Life (Single Charge)	10 Hours
Total Playtime (with Charging Case)	50 Hours
Water Resistance Level	IP7 Waterproof
Noise Control	Environmental Noise Cancellation (ENC)
Audio Driver Type	Dynamic Driver (14.2mm)
Earpiece Shape	In-ear with Earhooks
Charging Port	USB-C
Item Weight	0.023 ounces (per earbud)
Product Dimensions	1.57 x 0.79 x 1.97 inches

## 11. MAINTENANCE

---

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Remove ear tips and clean them with mild soap and water, ensuring they are completely dry before reattaching.
- **Storage:** Store the earbuds in their charging case when not in use to protect them and keep them charged. Avoid extreme temperatures.
- **Avoid Damage:** Do not expose the earbuds or case to sharp objects, excessive force, or corrosive liquids.

## 12. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation included with your purchase or contact Rolosar customer service through the retailer where the product was purchased. Keep your proof of purchase for warranty claims.