

## MERTTUM HK010

# MERTTUM USB-C Rechargeable Automatic Electric Can Opener User Manual

## 1. PRODUCT OVERVIEW

---

The MERTTUM USB-C Rechargeable Automatic Electric Can Opener (Model HK010) is designed for effortless and safe can opening. It features a one-touch operation, a smooth-edge cutting mechanism, and a magnetic lid lifter, making it ideal for various users, including those with limited hand strength.

This device is equipped with a built-in lithium battery, rechargeable via a USB-C port, offering extended use on a single charge. Its compact and lightweight design ensures easy storage and portability.



Perfect for **Everyone**  
Fits Almost All Can Sizes & Shapes.

Figure 1: The MERTTUM Electric Can Opener is designed for universal use, accommodating individuals with varying needs.

## 2. SETUP AND CHARGING

### 2.1 Initial Charge

Before first use, fully charge the can opener. Connect the provided USB-C cable to the charging port on the device and to a suitable USB power source (e.g., wall adapter, computer USB port).

# USB-C Electric Can Opener



Figure 2: Connect the USB-C cable to the charging port for initial charging.

The LED indicator will illuminate during charging. A full charge typically takes about 2 hours and provides power for over 200 can openings. Ensure the device is fully charged for optimal performance.

## 3. OPERATING INSTRUCTIONS

### 3.1 Opening a Can

1. **Position the Can Opener:** Place the can opener flat on top of the can, ensuring the cutting wheel and gear are aligned with the can's rim.
2. **Start Operation:** Press the single button on top of the can opener. The device will automatically grip the can and begin rotating, cutting along the side of the rim.
3. **Automatic Stop:** The can opener will automatically stop once it has completed a full rotation around the can. If it does not stop automatically, press the button again and wait 2 seconds for it to halt.
4. **Remove the Lid:** Once the cutting is complete, the can opener's magnet will hold the lid. Carefully lift the can opener away from the can. If the lid remains on the can, use the integrated lid lifter to gently pry it off.

# Easy to use

## Carry to Anywhere



1 Place the can opener on the top of can



2 Press the button to start.



3 Automatically rotate 360° to open, press again and stop in 2s.



4 Magnetic can opener will easy lift lid or pry it open with the lid remover.

Figure 3: Step-by-step guide for operating the can opener.

### 3.2 Smooth Edge Cutting

The can opener cuts along the side of the can's rim, leaving a smooth, safe edge on both the can and the lid. This design minimizes the risk of injury from sharp edges.

# Keep Hand Safety & Hygiene



Figure 4: The can opener creates a smooth, safe edge.

### 3.3 Magnetic Lid Removal

After cutting, the can opener's integrated magnet securely holds the lid, preventing it from falling into the can's contents. For stubborn lids, use the small lever on the side of the opener to lift the lid away.

# Protect Your Hand From Sharp Edge



Magnet



Lid Remover

Figure 5: Magnetic lid removal and integrated lid lifter for safe handling.

## 3.4 Video Demonstration

Watch this video for a visual guide on how to use the MERTTUM Automatic Electric Can Opener:

Your browser does not support the video tag.

Video 1: Demonstration of the MERTTUM Electric Can Opener in action, showing placement, one-touch operation, and lid removal.

## 4. MAINTENANCE AND CARE

### 4.1 Cleaning

To clean the can opener, wipe the exterior with a damp cloth. Do not immerse the device in water or wash it under running water, as this can damage the electronic components. Use a small brush or cloth to clean any food residue from the cutting wheel and gear after each use.

### 4.2 Storage

Store the can opener in a dry place, away from direct sunlight and extreme temperatures. Its compact size allows for easy storage in kitchen drawers or cabinets.

## 5. TROUBLESHOOTING

---

- **Device does not start:** Ensure the can opener is fully charged. If the battery is low, connect it to a USB-C charger.
- **Can opener stops mid-operation:** The battery might be low, or the can opener might be misaligned. Re-position the device and try again. If the issue persists, charge the battery.
- **Lid is not completely cut:** Ensure the can opener is properly seated on the can's rim. The device may require a second press of the button to complete the cut if it stopped prematurely.
- **Lid falls into the can:** The magnetic lid lifter may not have engaged properly. Ensure the can opener is lifted straight up after cutting. Use the integrated lid lifter if needed.

## 6. PRODUCT SPECIFICATIONS

---

<b>Brand:</b>	MERTTUM
<b>Model Number:</b>	HK010
<b>Color:</b>	Black
<b>Product Dimensions (L x W x H):</b>	15.9 x 6.4 x 6.4 cm
<b>Item Weight:</b>	324 grams
<b>Material:</b>	Acrylonitrile Butadiene Styrene (ABS)
<b>Blade Material:</b>	Stainless Steel
<b>Operation Mode:</b>	Automatic
<b>Battery:</b>	1 A - included (Rechargeable Lithium)



Figure 6: Product components and dimensions.

## 7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official MERTTUM website. Keep your proof of purchase for any warranty claims.