

MAXLANDER ML-LS03-A

MAXLANDER Electric Leaf Mulcher/Shredder ML-LS03-A User Manual

Model: ML-LS03-A

[Contents](#) [Assembly](#) [Operation](#) [Safety Instructions](#) [Package](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. SAFETY INSTRUCTIONS

Read and understand all safety warnings and instructions before operating this electric leaf mulcher/shredder. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

1.1 Personal Safety

- Always wear appropriate personal protective equipment, including safety goggles, gloves, and hearing protection. The machine can be loud during operation.
- Wear a breathing mask to avoid inhaling dust generated during mulching, especially with dry leaves.
- Do not operate the mulcher while barefoot or wearing open-toed footwear.
- Keep children and bystanders away from the operating area.

1.2 Electrical Safety

- Ensure the power supply matches the voltage specified on the mulcher's rating label.
- Use only extension cords suitable for outdoor use and with the correct wire gauge for the cord length to prevent motor strain.
- Do not operate the mulcher in wet conditions or expose it to rain.
- The unit features a built-in safety lock and overload protection. Do not attempt to bypass these safety features.

1.3 Operation Safety

- Never place hands or feet into the hopper or discharge chute while the machine is running.
- Ensure the mulcher is on a stable, level surface before starting.

- Feed material into the hopper gradually to prevent clogging and maintain optimal performance.
- Disconnect the power supply before performing any maintenance, cleaning, or when clearing a clog.

2. PACKAGE CONTENTS

Verify that all items are present in the package before assembly and operation.

- MAXLANDER Electric Leaf Mulcher/Shredder Unit
- Goggles
- Leaf Scoops (2x)
- Gloves
- Cleaning Rod (Spade)
- Nylon Cutting Lines (20 extra included)

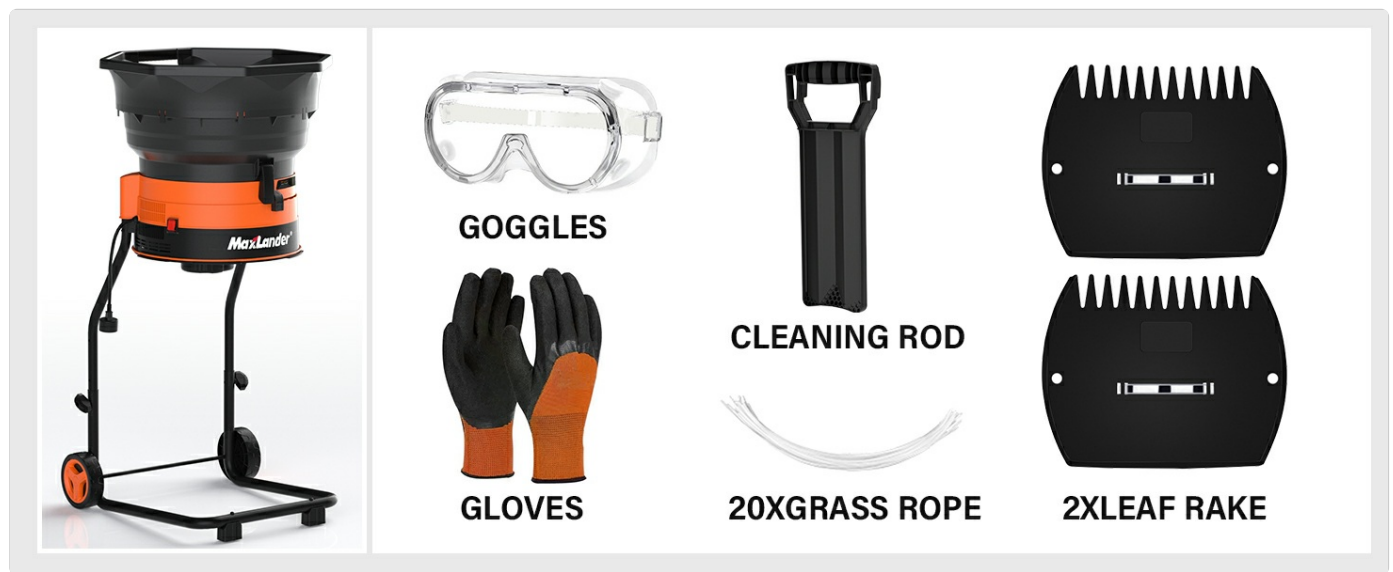


Image: MAXLANDER Electric Leaf Mulcher with its complete accessory kit, including safety goggles, protective gloves, a cleaning rod, extra nylon cutting lines, and leaf scoops.

3. ASSEMBLY

The MAXLANDER Electric Leaf Mulcher is designed for straightforward assembly, typically taking around 20 minutes. All necessary parts and attachment fixtures are organized for convenience.

3.1 Step-by-Step Assembly

1. Carefully unpack all components from the box.
2. Attach the stand to the main mulcher unit. Ensure all connections are secure.
3. Mount the wheels onto the stand. For easier disassembly for storage, plastic wire ties can be used in place of cotter pins, and hub caps can be omitted.
4. Verify that all fasteners are tightened before connecting to power.

4. OPERATION

The MAXLANDER Electric Leaf Mulcher is designed for efficient processing of various types of leaves and light garden debris.

4.1 Starting the Unit

Connect the mulcher to a suitable power outlet. The unit starts instantly with a single button, eliminating the need for gas or dealing with fumes.

4.2 Feeding Material

- Feed leaves into the hopper in moderation. Over-packing can impede performance and increase wear on the cutting lines.
- The mulcher effectively processes maple, pine, and oak leaves, as well as grass and small twigs/petals.
- The unit is capable of handling clumpy debris without clogging, but consistent, moderate feeding is recommended.
- Utilize the included leaf scoops to safely and efficiently transfer leaves into the hopper.



Image: A user feeding leaves into the mulcher, illustrating the significant volume reduction achieved by the 18:1 ratio.





Image: Detail of the mulcher's interior cutting system and a user employing leaf scoops for efficient material input.

4.3 Mulching Performance

- The 15 Amp motor operates at 8400 RPM, providing fast leaf processing.
- Achieves an 18:1 reduction ratio, significantly reducing the volume of leaves.
- Processes up to 55 gallons of material per minute.

EASILY SOLVE THE PROBLEM OF LEAVES

Suitable for various types of leaves

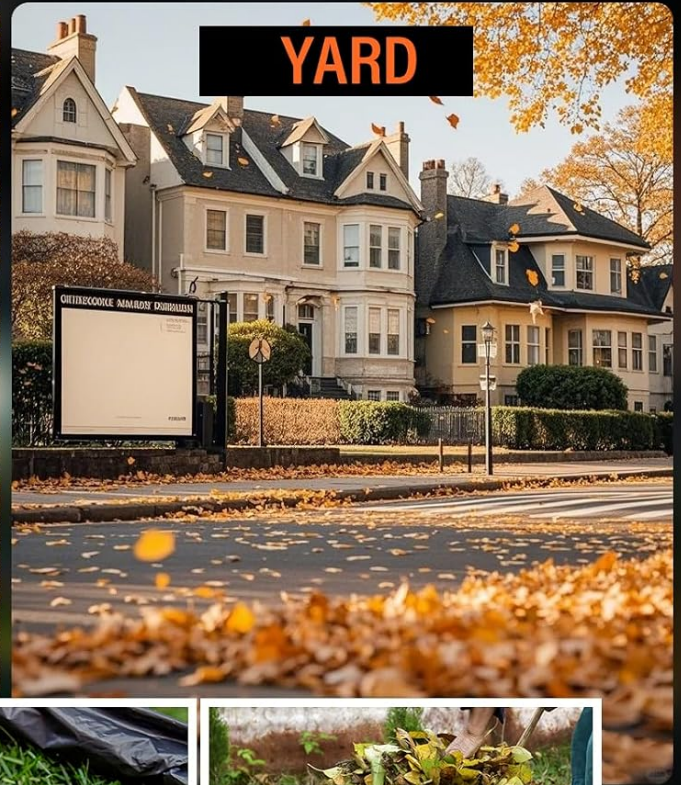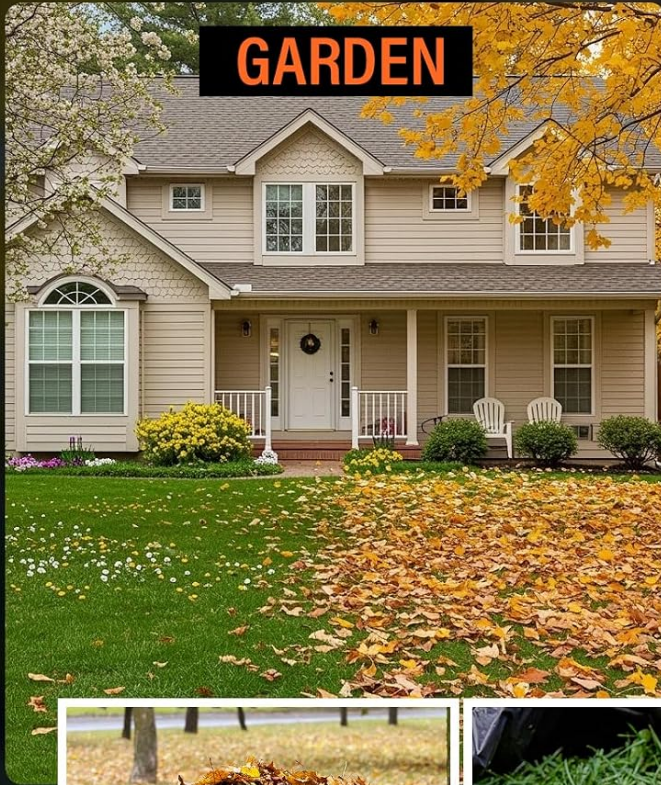

Leaf



Grass



Wet Leaf

Image: Visual representation of various leaf types and garden debris that can be processed by the mulcher.

5. ADJUSTABLE SETTINGS

The mulcher features an adjustable dial to customize the mulching output based on the material's condition.

- Twist the dial to a **coarser setting** for processing soggy or wet debris.
- Adjust the dial to a **finer setting** for dry leaves, producing a finer mulch suitable for gardening.



Image: A user demonstrating the adjustable cutting modes dial on the mulcher for different leaf conditions.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your MAXLANDER Electric Leaf Mulcher.

6.1 Replacing Cutting Lines

- The mulcher uses nylon cutting lines (two at a time) instead of blades.
- Cutting lines will show wear over time and need replacement. The unit includes 20 extra lines.
- Replacement is tool-free and easy. Always disconnect power before replacing lines.

6.2 Cleaning and Storage

- After each use, clean the mulcher to prevent debris buildup. A leaf blower can be used to clear residual material.
- Wipe down the unit with a damp cloth as recommended.
- Ensure the side intake air vent is free of debris for proper airflow.
- For long-term storage, the mulcher is lightweight and detachable, allowing for easy storage in sheds or re-boxing.

7. TROUBLESHOOTING

This section addresses common issues you might encounter during operation.

7.1 Reduced Mulching Efficiency

- **Issue:** Leaves are not mulching effectively or the process is slow.
- **Solution:** Check the nylon cutting lines. If they are too short or worn, replace them. Ensure you are not over-packing the hopper, which can impede the cutting action.

7.2 Unit Clogging

- **Issue:** The mulcher stops or struggles to process material.
- **Solution:** Disconnect power immediately. Carefully remove any jammed material from the hopper or discharge chute using the cleaning rod. Avoid feeding large quantities of very wet or clumpy debris at once.

7.3 Excessive Dust or Noise

- **Issue:** High levels of dust or noise during operation.
- **Solution:** This is normal for mulching dry leaves. Always wear a breathing mask and hearing protection as recommended in the safety instructions.

8. SPECIFICATIONS

Feature	Detail
Model Number	ML-LS03-A
Motor Power	15 Amp
Motor Speed	8400 RPM
Mulch Reduction Ratio	18:1
Mulch Rate	55 Gallons Per Minute
Product Dimensions	54 x 31.5 x 54 cm
Product Weight	14.33 kg (approx. 31.59 lbs)
Cutting Mechanism	Nylon Cutting Lines (Bladeless)
Power Source	Electric

Type	Leaf Shredder	Wood Chipper
Motor Speed	8400RPM	4000RPM
Motor Power	15 Amp	15 Amp
Mulch Ratio	18:1	15:1
Mulch Rate	55 Gal Per Minute	13 Gal Per Minute
Weight	18LBS	29LBS



Leaf Shredder



Wood Chipper

Image: A table comparing key specifications of a leaf shredder (like this model) with a typical wood chipper.

9. WARRANTY AND SUPPORT

For replacement parts, such as additional nylon cutting lines, or for any support inquiries, please contact MAXLANDER customer service. Refer to the product packaging or the MAXLANDER official website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question