

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TABWEE](#) /

› [TABWEE K10 Kids Tablet 10.1-inch Wi-Fi Model User Manual](#)

## TABWEE K10

# TABWEE K10 Kids Tablet 10.1-inch Wi-Fi Model User Manual

Your guide to setting up, operating, and maintaining your TABWEE K10 Kids Tablet.

## 1. INTRODUCTION

Welcome to the TABWEE K10 Kids Tablet! This 10.1-inch Wi-Fi tablet is designed to provide a safe and engaging learning and entertainment experience for children. Featuring Android 15 Go Edition, Google Kids Space, robust parental controls via Google Family Link, and a durable EVA protective case, the K10 is built for young users.

This manual will guide you through the tablet's features, setup process, operation, maintenance, and troubleshooting to ensure a smooth and enjoyable experience.

### What's in the Box

Upon opening your TABWEE K10 Kids Tablet package, you should find the following items:

- TABWEE K10 Kids Tablet (with pre-installed EVA protective case)
- Touch Pen
- USB Type-C Cable
- Power Adapter
- User Manual (this document)
- AR Zoo Cards (for interactive learning)

Your browser does not support the video tag.

*Video: Unboxing the TABWEE K10 Kids Tablet, showing the tablet, protective case, and accessories.*

## 2. SAFETY INFORMATION

Please read the following safety guidelines carefully to ensure safe and proper use of your TABWEE K10 Kids Tablet:

- **Adult Supervision:** Always supervise young children while they are using the tablet.

- **Charging:** Use only the provided power adapter and USB Type-C cable for charging. Do not use damaged chargers or cables. Ensure the tablet is charged in a well-ventilated area.
- **Water and Moisture:** Keep the tablet away from water, liquids, and excessive humidity.
- **Temperature:** Avoid exposing the tablet to extreme temperatures (hot or cold).
- **Physical Damage:** While the EVA case provides protection, avoid dropping the tablet from significant heights or applying excessive force.
- **Screen Time:** Encourage breaks during extended use to prevent eye strain. Utilize parental controls to manage screen time.
- **Hearing Protection:** When using headphones, ensure the volume is set to a safe level to protect hearing.
- **Cleaning:** Use a soft, dry cloth to clean the tablet. Do not use harsh chemicals.

## 3. GETTING STARTED (SETUP)

---

### 3.1 Initial Charge

Before first use, fully charge the tablet using the included USB Type-C cable and power adapter. The battery indicator on the screen will show charging progress.

### 3.2 Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side) for a few seconds until the TABWEE logo appears.
- **To Power Off:** Press and hold the Power button until a menu appears on the screen. Select "Power Off" and confirm.
- **To Restart:** From the power menu, select "Restart."

### 3.3 Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Select your Wi-Fi network and enter the password to connect to the internet.
3. **Google Account:** Sign in with an existing Google account or create a new one. This is necessary for accessing Google services like Kids Space and Play Store.
4. **Date & Time:** Set the correct date and time.
5. **Google Kids Space Setup:** Follow the on-screen prompts to set up Google Kids Space for your child. This will provide age-appropriate content and a child-friendly interface.
6. **Google Family Link Setup:** Install the Google Family Link app on your own smartphone and follow the instructions to link your child's tablet. This enables parental control features.

## 4. PRODUCT OVERVIEW (COMPONENTS & CONTROLS)

---

Familiarize yourself with the physical components and controls of your TABWEE K10 Kids Tablet:

# 5000mAhの大容量バッテリーで 長時間スタンバイ



Type-C充電



3.5mmイヤホン



FMラジオ



OTG対応



学習



ゲーム



お絵かき

Image: The TABWEE K10 tablet showing its various ports, buttons, and cameras.

- **Power Button:** Turns the tablet on/off or puts it to sleep.
- **Volume Buttons:** Adjusts the audio volume.
- **USB Type-C Port:** For charging and data transfer.
- **3.5mm Audio Jack:** For connecting headphones.
- **MicroSD Card Slot:** For expanding storage up to 2TB.
- **Front Camera (2MP):** For video calls and selfies.
- **Rear Camera (5MP):** For taking photos and videos.
- **Speakers:** Provides audio output.
- **Microphone:** For voice input.
- **EVA Protective Case:** Provides drop protection and includes a built-in stand/handle.

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Navigation

The TABWEE K10 uses a touchscreen interface. Use your finger or the included touch pen for navigation:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through pages or menus.
- **Pinch:** Zoom in or out on images and web pages.

## 5.2 Google Kids Space

Google Kids Space offers a curated library of apps, books, and videos designed for children. It categorizes content into "Play," "Read," "Watch," and "Make" to encourage exploration and learning.



Image: The tablet screen showing the Google Kids Space interface with various app categories.

To access Kids Space, tap its icon on the home screen. Parents can manage the content available through Google Family Link.

Your browser does not support the video tag.

Video: Demonstrating the variety of educational apps and content available within Google Kids Space.

### 5.3 YouTube Kids

The tablet supports YouTube Kids, offering a safer video experience for children. You can adjust filter settings based on your child's age and preferences.

# 快適な画面モード切替

## お子様の目にやさしい、3つの特別表示モード



**夜間モード**  
輝度低下でブルーライト低減



**ダークモード**  
暗いトーンで疲労軽減



**リーダーモード**  
紙書籍風の白黒表示

Image: The tablet screen displaying the YouTube Kids application.

### 5.4 Parental Controls (Google Family Link)

Google Family Link allows you to manage your child's tablet usage remotely from your smartphone. Key features include:

- **Screen Time Management:** Set daily usage limits in 15-minute increments.
- **App Restrictions:** Block or allow specific apps.
- **Content Filtering:** Ensure age-appropriate content is displayed.
- **Remote Monitoring:** View your child's activity and screen time.

Your browser does not support the video tag.

Video: Demonstration of Google Family Link features for managing app usage and screen time on the tablet.

## 5.5 Using the Touch Pen

The included touch pen allows for precise interaction with the tablet, making drawing, writing, and educational games more engaging. Simply use the pen as you would your finger on the screen.



*Image: A child interacting with the tablet using the dedicated touch pen.*

## 5.6 Display Modes

The tablet offers various display modes to enhance comfort and reduce eye strain:

- **Night Mode:** Reduces blue light emission for comfortable viewing in low-light conditions.
- **Dark Mode:** Changes the interface to a darker color scheme, which can reduce eye fatigue.
- **Reader Mode:** Optimizes the display for reading, often by adjusting colors to mimic paper.

# EVA保護ケース付き

高耐衝撃のEVAケースでしっかり保護



3段階角度調節



優れた衝撃吸収力



*Image: The tablet screen demonstrating Night Mode, Dark Mode, and Reader Mode.*

## 5.7 AR Zoo App

The tablet comes with an AR Zoo app that uses augmented reality technology. Use the included AR Zoo cards with the tablet's camera to bring animals to life on the screen, providing an interactive learning experience.

# 64GB大容量で、 思い出も学びもまるごと保存！

アニメや映画がぎっしり、飽きずに楽しめる



20000枚  
写真保存可能



200本  
動画収納



16000曲  
音楽ストレージ



Image: The tablet displaying an augmented reality animal from the AR Zoo app, with physical cards nearby.

## 5.8 Storage Management

The tablet has 64GB of internal storage, which can be expanded up to 2TB using a microSD card (sold separately). To insert a microSD card, locate the card slot on the side of the tablet and gently push the card in until it clicks into place.

## 5.9 Camera Usage

The tablet is equipped with a 2MP front camera and a 5MP rear camera. Open the Camera app to take photos or record videos. The intuitive interface makes it easy for children to capture their moments.

## 6. MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to wipe the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water. Avoid using abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the tablet frequently. Charge the tablet when the

battery level is low. Store the tablet in a cool, dry place when not in use for extended periods.

- **Software Updates:** Periodically check for system updates in the tablet's settings. Keeping the software updated ensures optimal performance and security.
- **EVA Case:** The EVA case can be cleaned with mild soap and water if it gets dirty. Ensure it is completely dry before reattaching it to the tablet.

## 7. TROUBLESHOOTING

If you encounter any issues with your TABWEE K10 Kids Tablet, please refer to the following common solutions:

Problem	Solution
Tablet does not power on.	Ensure the tablet is fully charged. Connect the charger and wait a few minutes before attempting to power on again.
Wi-Fi connection issues.	Check if your Wi-Fi router is working correctly. Go to Settings > Network & internet > Wi-Fi, forget the network, and reconnect. Restart the tablet and router.
Apps are crashing or freezing.	Close the problematic app and reopen it. Clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). Restart the tablet.
Slow performance.	Close unnecessary background apps. Clear app caches. Ensure there is sufficient free storage space. Restart the tablet.
Parental controls not working as expected.	Ensure both the tablet and your smartphone have the latest Google Family Link app versions. Check the settings within the Family Link app on your smartphone.
Touch pen not responding.	Ensure the screen is clean. Try restarting the tablet.

If the issue persists after trying these steps, please contact customer support for further assistance.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	TABWEE K10
Operating System	Android 15 Go Edition
Display	10.1-inch HD IPS (1280x800 pixels)
Processor	RK3562 Quad-Core (Cortex-A55, max 2.0GHz)
GPU	Mali-G52
RAM	12GB (4GB physical + 8GB virtual)
Internal Storage	64GB ROM
Expandable Storage	Up to 2TB via microSD card (not included)
Battery	5000mAh Lithium-ion

Feature	Detail
Front Camera	2MP
Rear Camera	5MP
Connectivity	Wi-Fi (802.11ac), Bluetooth
Dimensions	32.79 x 20 x 3.9 cm
Weight	1.02 kg
Certifications	TELEC, GMS

## 9. WARRANTY AND SUPPORT

Your TABWEE K10 Kids Tablet comes with a **24-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures peace of mind.

For any questions, technical support, or warranty claims, please contact TABWEE customer service. Our support team is available 24 hours a day via email in both Japanese and English.

### How to Contact Support:

- Through Amazon:** Go to your Amazon account, navigate to "Order History," select the relevant order, and click "Contact Seller."
- From the Product Page:** On the product page, below the "Add to Cart" button, click on the store name. Then, in the upper right corner, click "Ask a Question" to send an email.

We aim to respond to all inquiries as quickly as possible, excluding holidays.

**2年間安心品質保証**

**日本語対応**

お問い合わせ方法：

1. Amazonアカウント→注文履歴→該当注文→出品者にお連絡。

2. 商品ページに「カートに入れる」ボタンの下に店舗名をクリックし。右上の「質問する」からメールで当店に連絡が可能です。

3. 受付時間：**午前9時～午後6時**  
休日を除き、できるだけ早く返信いたします。

*Image: A customer support representative assisting with inquiries.*

