

[Manuals.plus](#) /

› [FREEPEAR](#) /

› FREEPEAR Party Bluetooth Speaker (Model FREEPEAR01) Instruction Manual

FREEPEAR FREEPEAR01

FREEPEAR Party Bluetooth Speaker Instruction Manual

Model: FREEPEAR01

INTRODUCTION

Thank you for choosing the FREEPEAR Party Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your speaker. Please read it thoroughly before use and retain it for future reference.



Image: Front view of the FREEPEAR Party Bluetooth Speaker, showcasing its design and integrated colorful lighting.

PACKAGE CONTENTS

Ensure all items are present in the package:

- Party Bluetooth Speaker
- Quick Start Guide
- Fast Charging Cable
- Charging Cable
- AUX Cable

PRODUCT OVERVIEW

The FREEPEAR Party Bluetooth Speaker is designed for powerful audio and dynamic light shows. Key features include:

- **240W Peak Sound Output:** Dual 5-inch woofers and dual 3-inch tweeters deliver robust audio.
- **Dazzling Light Shows:** Multiple light modes synchronize with music.
- **TWS Pairing:** Connect two speakers for a 480W stereo experience.
- **15-Hour Playtime:** High-capacity battery for extended use.
- **IPX4 Splashproof:** Resistant to water splashes, suitable for outdoor use.
- **Versatile Connectivity:** Bluetooth 5.3, AUX, USB, TF card, Microphone, and Guitar inputs.
- **Power Bank Function:** Charge external devices via USB.

Control Panel



Image: Detailed view of the speaker's control panel, showing buttons for microphone, bass, track control, volume knob, and light mode.

Input/Output Ports



Image: Close-up of the speaker's side panel, illustrating the various input and output ports including USB, AUX, microphone, and guitar jacks.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided charging cable to the speaker's charging port and a power source. The battery indicator lights will show charging status. A full charge takes approximately 2.5 hours with a 30W charger.

30W FASTER CHARGING

Power Up Quick, Party Longer
fully charge in 2.5 hours

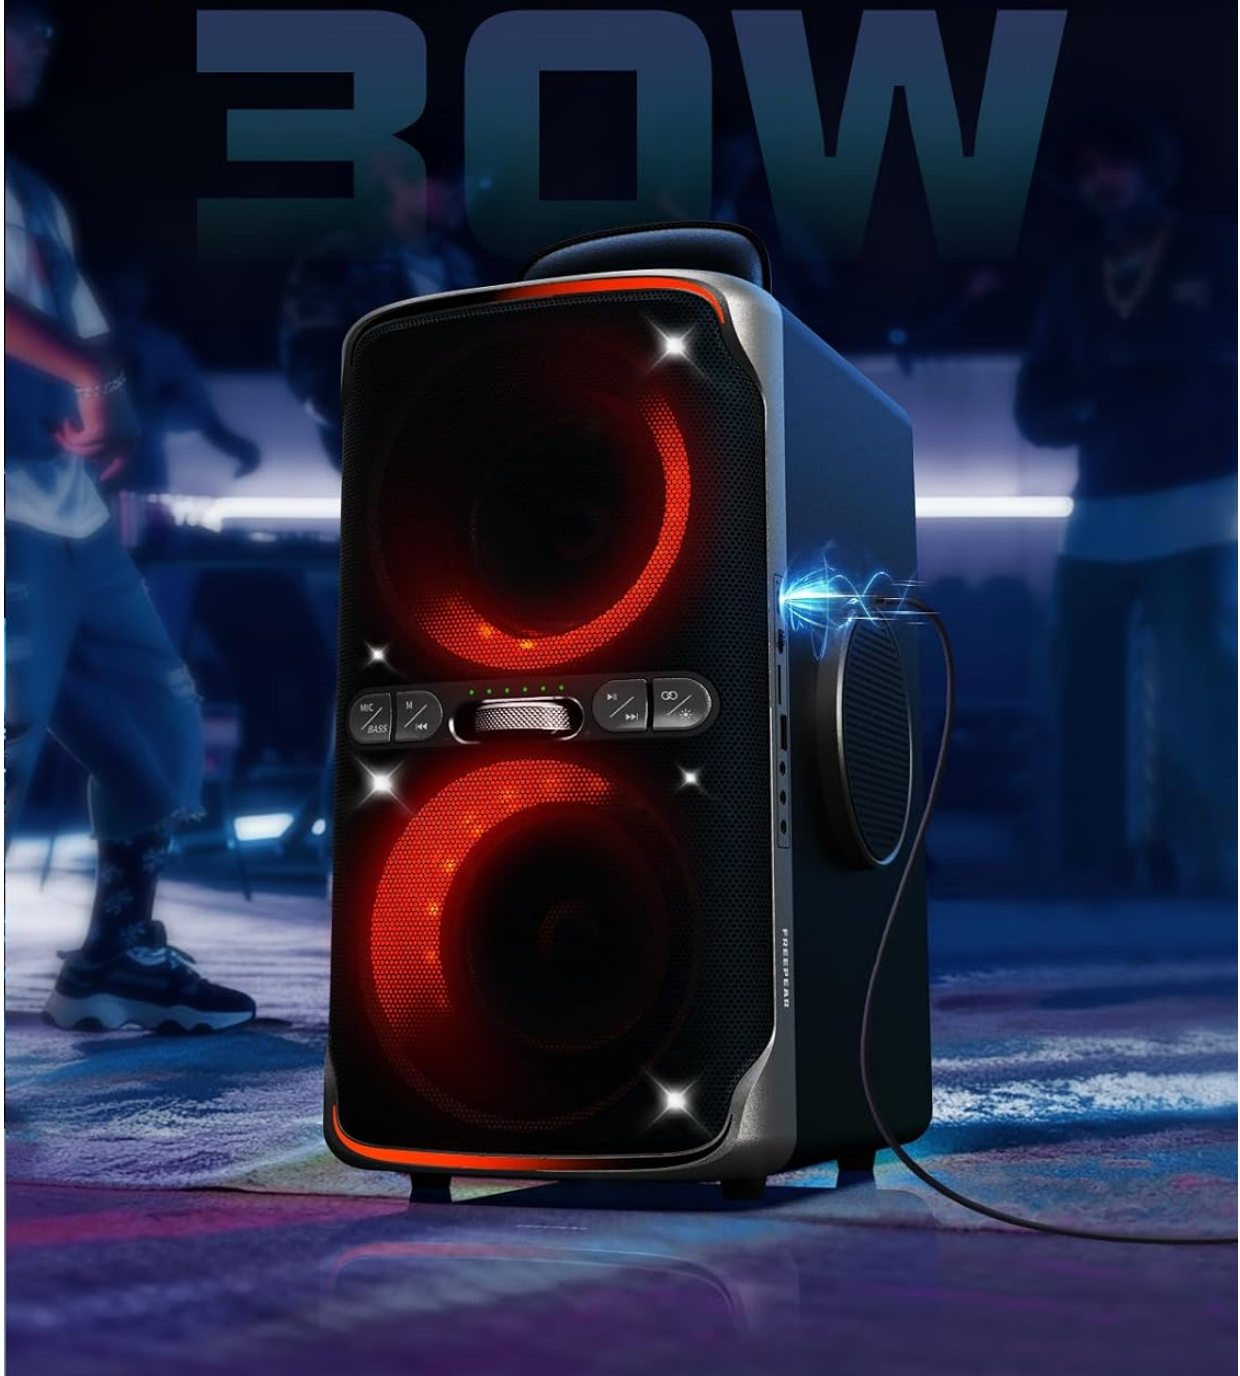


Image: The speaker connected to a power source for charging, indicating its fast-charging capability.

2. Power On/Off

Press and hold the Power button on the control panel for 2-3 seconds to turn the speaker ON or OFF.

3. Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth indicator light.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).

3. Search for "FREEPEAR01" in your device's Bluetooth list and select it to connect.
4. Once connected, the Bluetooth indicator light will be solid, and you will hear a confirmation tone.

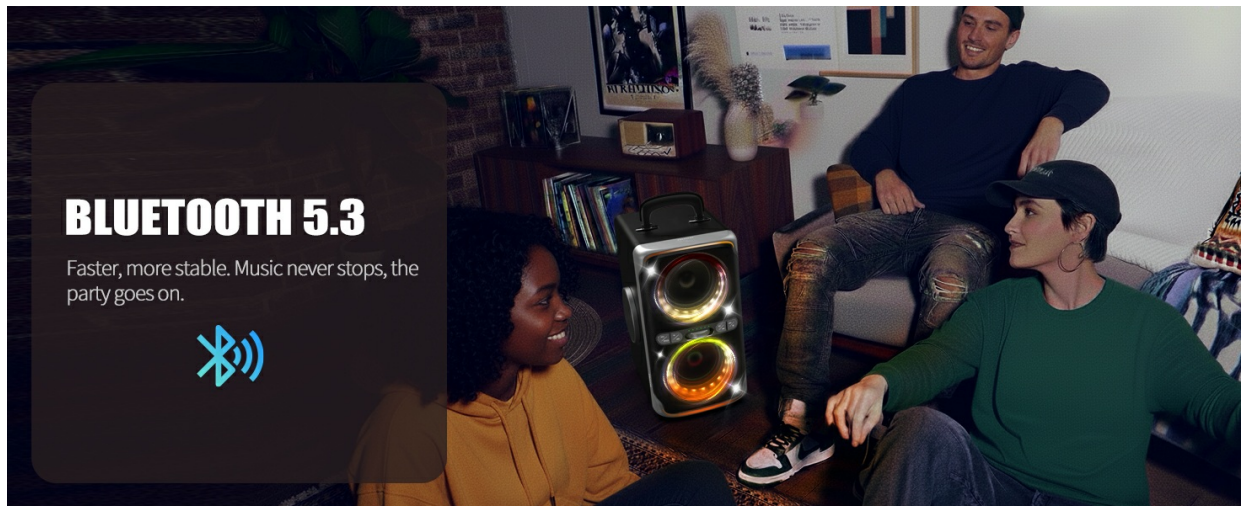 


Image: Individuals listening to music from the speaker, illustrating the seamless Bluetooth 5.3 connection.

4. TWS (True Wireless Stereo) Pairing

To pair two FREEPEAR01 speakers for stereo sound:

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), press the TWS button. The TWS indicator will flash.
3. The primary speaker will automatically search for and connect to the secondary speaker.
4. Once connected, both TWS indicator lights will be solid, and you will hear a confirmation tone.
5. Now, connect your device to the primary speaker via Bluetooth as described above. Audio will play in stereo through both speakers.

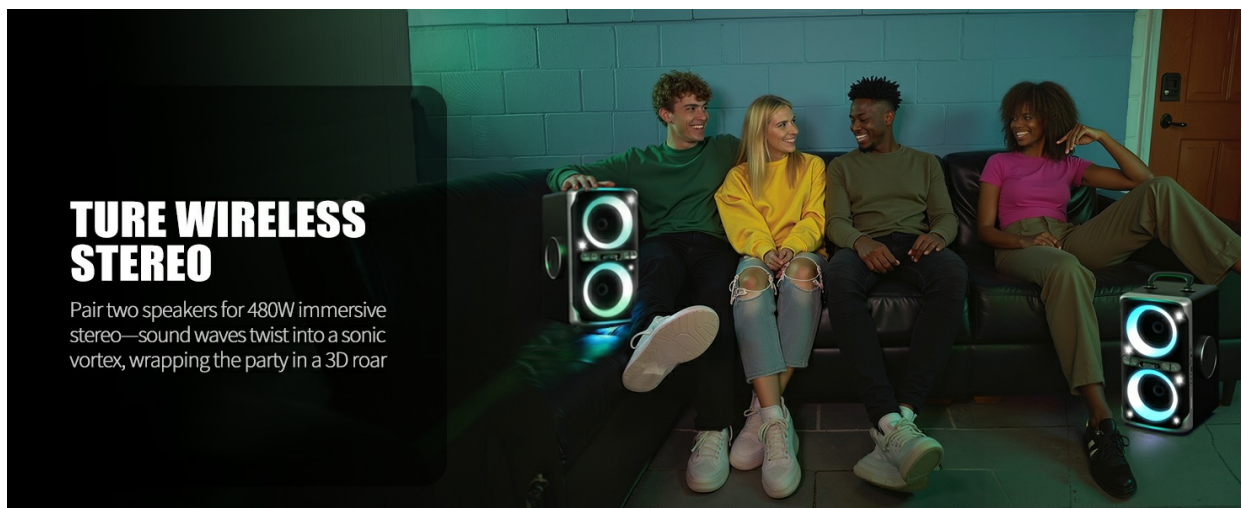 


Image: Two FREEPEAR speakers positioned to demonstrate True Wireless Stereo pairing, creating an immersive sound experience.

OPERATING INSTRUCTIONS

1. Light Show Control

Press the Light Mode button on the control panel to cycle through different dazzling light show patterns. The lights can synchronize with the music or display various static and dynamic effects.

DAZZLING LIGHT SHOWS

Let a party get more energy



Flame



Flow



Flash



Breathing



Light
Rotation



Circular
Flow



Image: The speaker's light show in action, creating a vibrant atmosphere for a group of people.

2. Audio Input Modes

The speaker supports multiple audio input options:

- **Bluetooth:** Connect wirelessly as described in the Setup section.
- **AUX Input:** Connect an external audio device using the provided 3.5mm AUX cable. The speaker will automatically switch to AUX mode.
- **USB/TF Card:** Insert a USB drive or TF card into the respective port. The speaker will automatically play audio files from the storage device.

- **Microphone/Guitar Input:** Connect a microphone or guitar to the dedicated jacks for karaoke or live performance. Adjust volume using the speaker's controls or the connected instrument/mic.

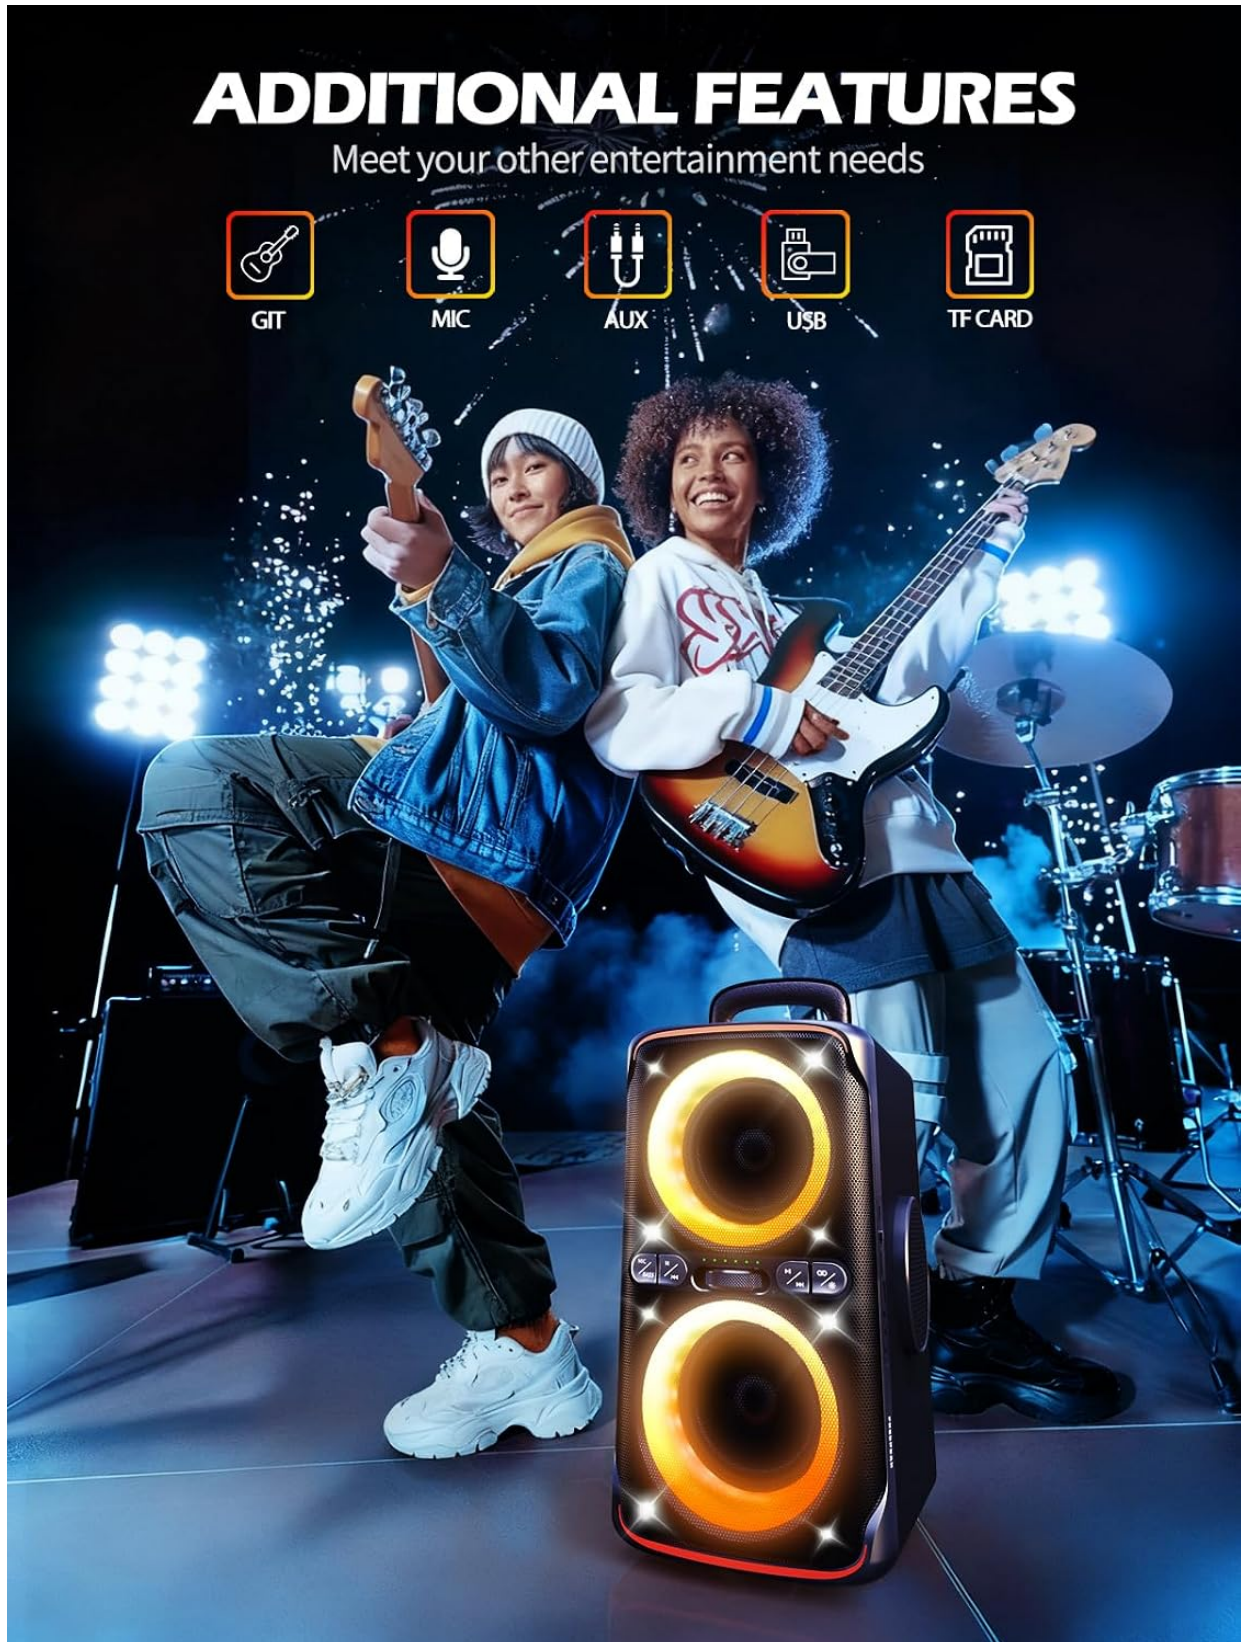 


Image: Musicians utilizing the speaker's microphone and guitar inputs for a performance.

3. Power Bank Function

The speaker can charge other devices. Connect your device's USB charging cable to the speaker's USB output port. This function is active when the speaker is powered on.

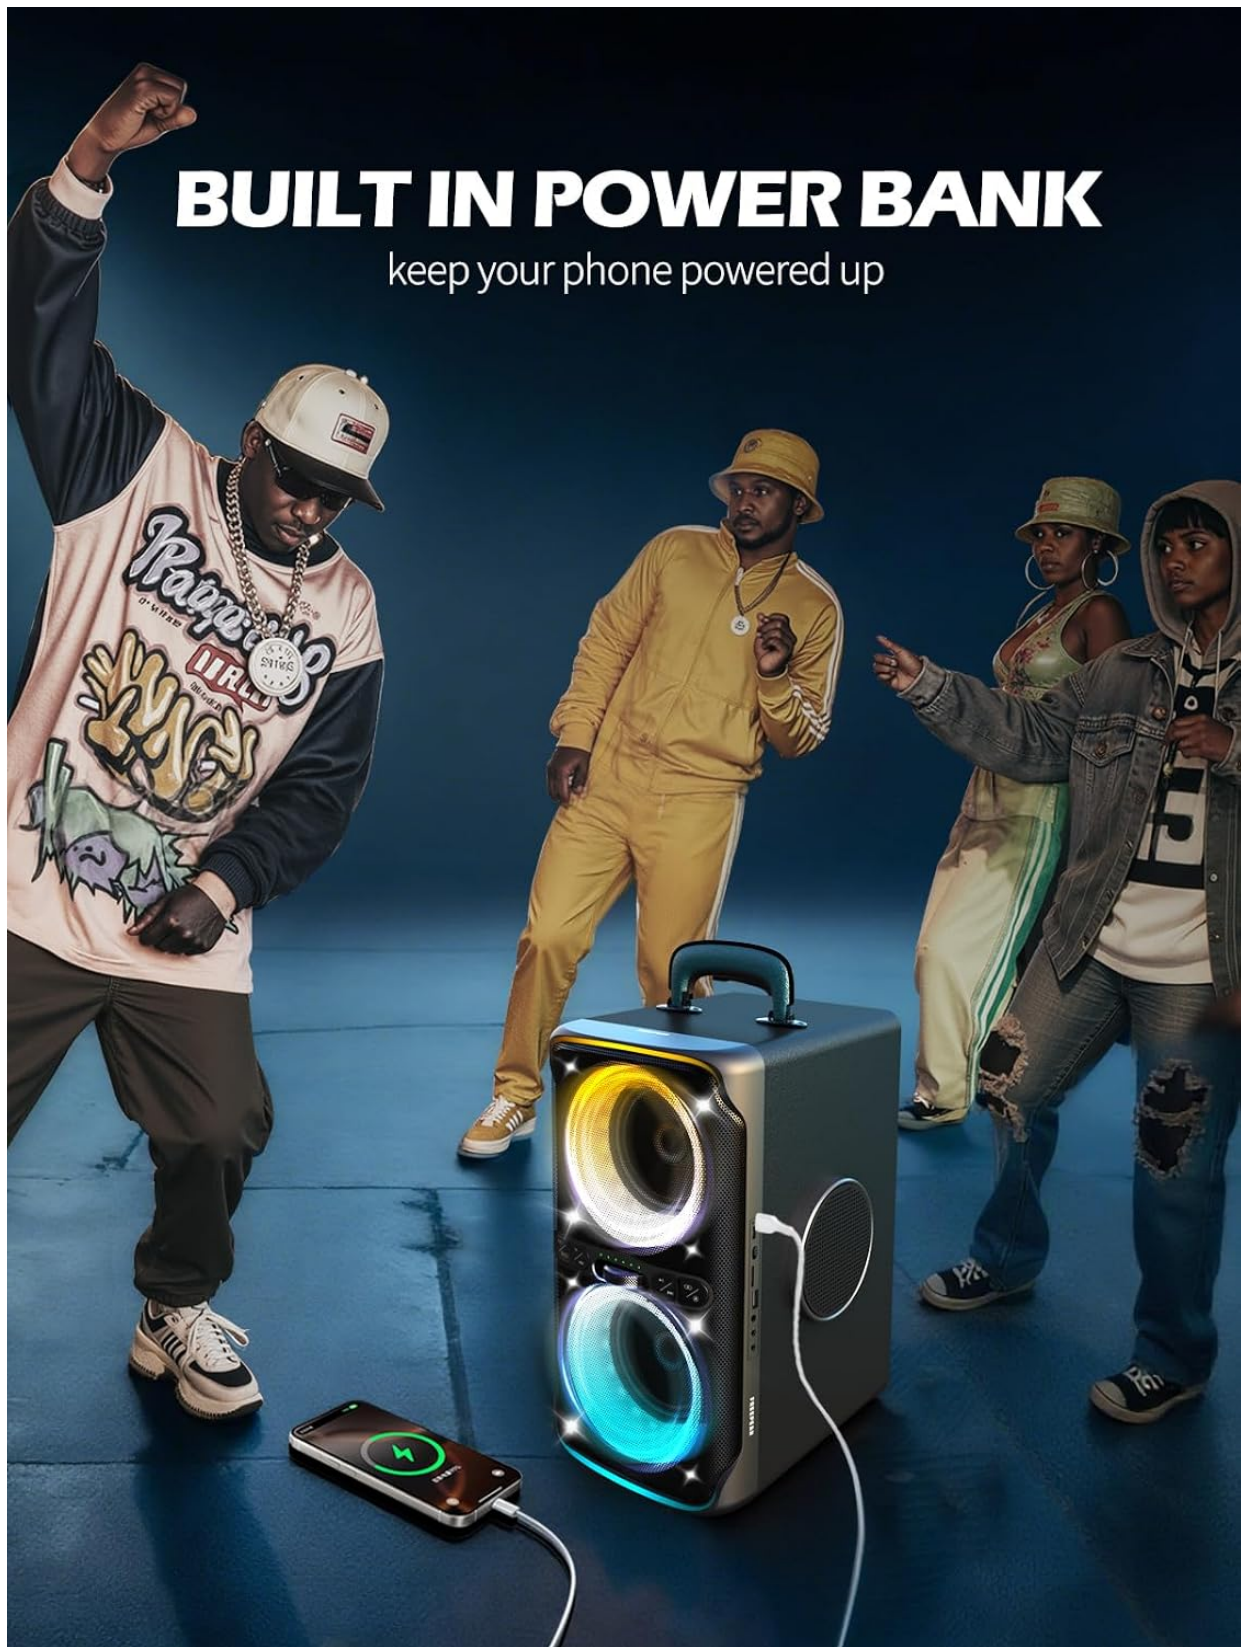 


Image: The speaker acting as a power bank, charging a smartphone, demonstrating its utility beyond audio playback.

4. Sound Modes

The speaker features different sound modes optimized for various environments:

- **Indoor Mode:** Provides richer, more powerful sound, ideal for enclosed spaces.
- **Outdoor Mode:** Delivers clearer, more resonant sound, suitable for open-air environments.

Switch between modes using the dedicated button on the control panel to optimize your listening experience.



Image: The speaker being used in diverse settings, highlighting its adaptability for both indoor and outdoor events.

MAINTENANCE

Cleaning

Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents. Ensure all ports are dry before connecting cables.

Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery to approximately 50% every three months to prolong battery life.

Water Resistance (IPX4)

The speaker is IPX4 splashproof, meaning it can withstand splashes of water. Do not submerge the speaker in water or expose it to heavy rain.



Image: The speaker positioned near a pool, illustrating its IPX4 splashproof rating for use in wet environments.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; Power button not pressed correctly.	Charge the speaker; Press and hold the Power button for 2-3 seconds.
No sound.	Volume too low; Incorrect input mode; Device not connected.	Increase volume; Select correct input mode (Bluetooth, AUX, USB); Ensure device is paired.
Bluetooth not connecting.	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in pairing mode; Move device closer; Disconnect other Bluetooth devices.
TWS pairing fails.	Speakers already connected to other devices; Incorrect pairing sequence.	Disconnect both speakers from any Bluetooth devices; Follow TWS pairing steps carefully.
Light show not working.	Light mode turned off or stuck.	Press the Light Mode button to cycle through options or turn lights on.

SPECIFICATIONS

Feature	Detail
Brand	FREEPEAR
Model Number	FREEPEAR01
Speaker Maximum Output Power	240 Watts (Peak)
Connectivity Technology	Auxiliary, Bluetooth, USB
Bluetooth Version	5.3
Bluetooth Range	33 Feet (10 meters)
Audio Output Mode	Stereo
Waterproof Rating	IPX4
Battery Average Life	15 Hours
Battery Charge Time	2.5 Hours (with 30W charger)
Subwoofer Diameter	5 Inches
Tweeter Diameter	3 Inches
Item Dimensions (D x W x H)	11.22"D x 15.94"W x 9.76"H
Enclosure Material	Metal, Plastic, Wood
Additional Features	Bass Boost, Built-In Powerbank, LED Light, Stereo Pairing

OFFICIAL PRODUCT VIDEOS

Video: No Limits! Just Powerful, Portable Party Sound!!!

Your browser does not support the video tag.

Description: An official video showcasing the FREEPEAR speaker's powerful sound and portability, ideal for various party settings.

Video: Is This Actually Worth It?

Your browser does not support the video tag.

Description: A seller-created video review of the FREEPEAR speaker, discussing its features and value proposition.

WARRANTY AND SUPPORT

Warranty Information

The FREEPEAR Party Bluetooth Speaker comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Customer Support

For technical assistance, warranty claims, or any questions regarding your FREEPEAR speaker, please refer to the contact information provided in your Quick Start Guide or visit the official FREEPEAR store on Amazon: [FREEPEAR Store](#).