

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LOBKIN](#) /

› [LOBKIN X21 Bone Conduction Swimming Headphones User Manual](#)


LOBKIN X21

LOBKIN X21 Bone Conduction Swimming Headphones User Manual

Model: X21

INTRODUCTION

The LOBKIN X21 Bone Conduction Headphones are designed for active users, offering an open-ear listening experience with IPX8 waterproofing and 32GB of internal MP3 storage. This manual provides essential information for setting up, operating, and maintaining your headphones.

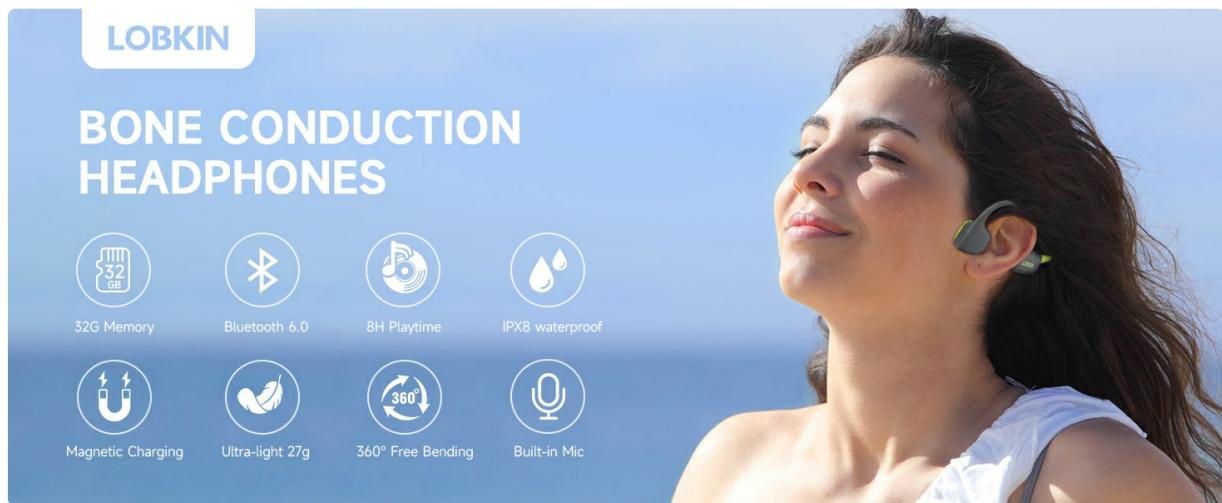

Overview of LOBKIN Bone Conduction Headphones features.

- **Open Ear Design:** Allows you to hear your surroundings while enjoying audio, enhancing safety during outdoor activities.
- **IPX8 Waterproof:** Fully sealed design, suitable for swimming and resistant to sweat and rain, submersible up to 10 meters.
- **Bluetooth 6.0 & 32GB MP3 Storage:** Offers stable wireless connection and internal memory for up to 4,000 songs, enabling phone-free listening.
- **Comfortable Wear:** Lightweight (27g) with a flexible titanium frame wrapped in silicone for a secure and comfortable fit during exercise.
- **Long Battery Life:** Up to 8 hours of continuous playtime on a 2-hour magnetic fast charge.

PACKAGE CONTENTS

Ensure all items are present in the package:

- Bone Conduction Headphones (LOBKIN X21)
- Magnetic Charging Cable
- User Manual (this document)
- A pair of earplugs
- Adjustable strap




Contents included with your LOBKIN X21 headphones.

SETUP GUIDE

1. Charging the Headphones

Before first use, fully charge your LOBKIN X21 headphones.

1. Connect the magnetic charging cable to the charging port on the headphones.
2. Connect the USB end of the cable to a standard USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status (refer to the operating section for LED behavior).
4. A full charge takes approximately 2 hours and provides up to 8 hours of playtime.

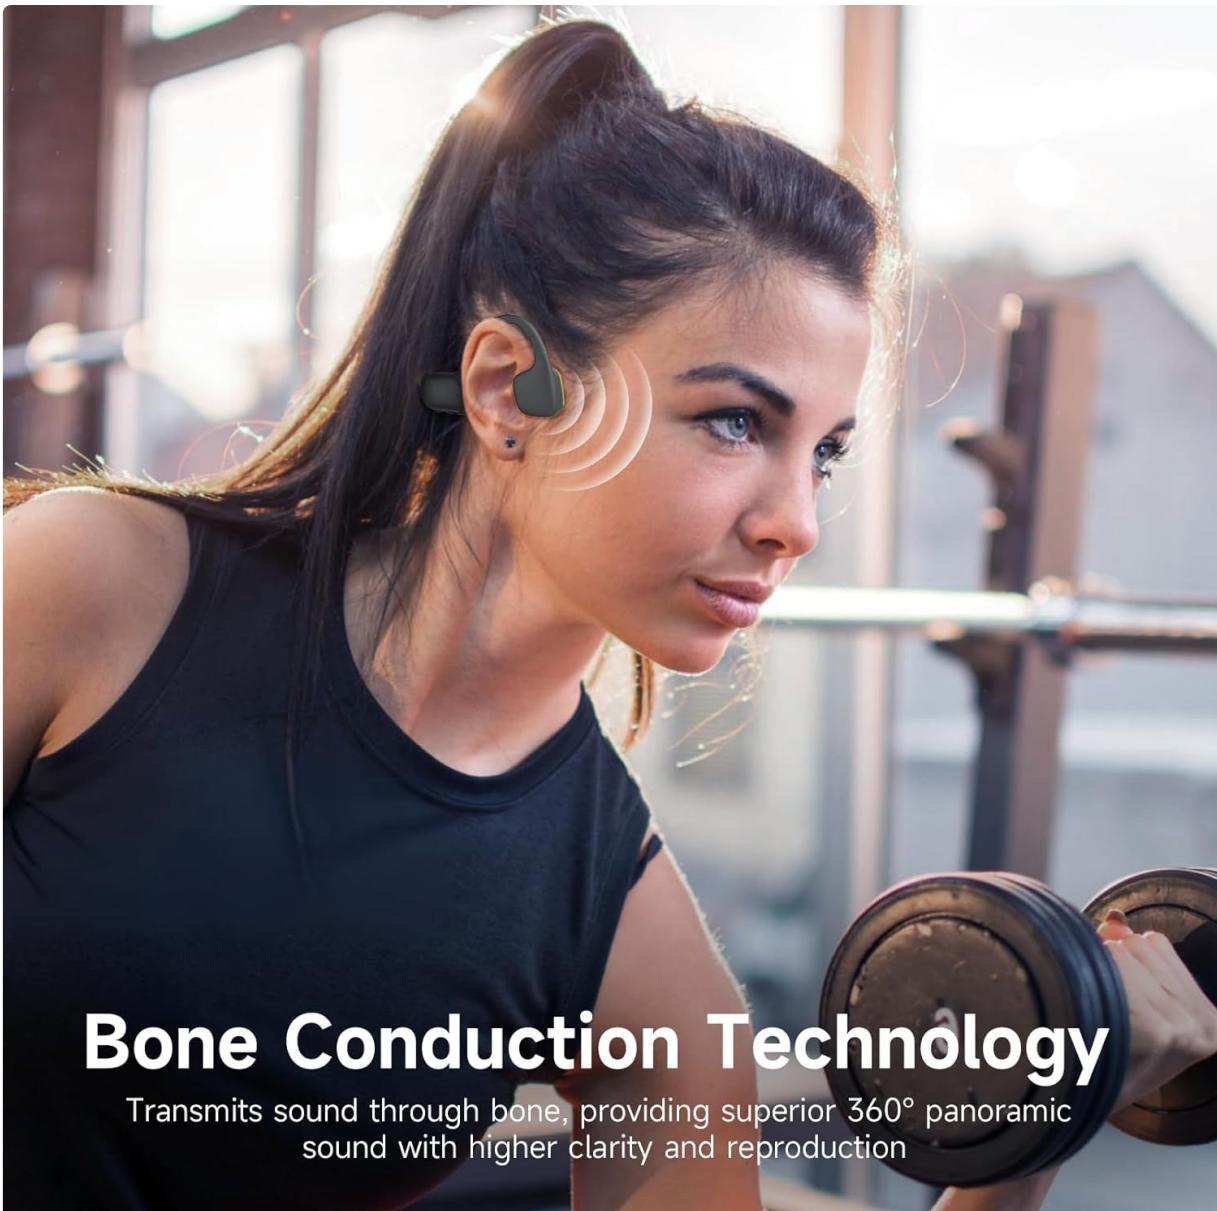

Bone Conduction Technology

Transmits sound through bone, providing superior 360° panoramic sound with higher clarity and reproduction

Magnetic charging and battery life details.

2. Bluetooth Pairing

To connect your headphones to a Bluetooth-enabled device:

1. Ensure the headphones are powered off.
2. Press and hold the Power button for 3-5 seconds until the LED indicator flashes red and blue, indicating pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "LOBKIN X21" from the list.
5. Once connected, the LED indicator will flash blue slowly.
6. The headphones support simultaneous connection to two devices.

Connect 2 Devices Simultaneously

Seamless Switching for Effortless Multitasking



Connecting to multiple devices via Bluetooth 6.0.

3. MP3 Mode (Offline Playback)

The headphones feature 32GB of internal storage for MP3 files, ideal for use where Bluetooth signals are unreliable, such as underwater.

1. To switch to MP3 mode, double-click the Power button.
2. To load music, connect the headphones to a computer using the magnetic charging cable. The headphones will appear as a removable drive.
3. Drag and drop your MP3 audio files into the headphone's storage.
4. Always switch to MP3 mode when swimming, as Bluetooth signals do not transmit effectively underwater.



32GB internal memory for offline music playback.



32GB Music Vault

4,000 Songs · Your Swim Companion



Why can only MP3 mode be used underwater?



The headphones are IPX8 waterproof and feature 32GB offline MP3 mode for underwater use. Bluetooth does not work underwater.

OPERATING INSTRUCTIONS

The LOBKIN X21 headphones feature intuitive button controls.



Control layout and functions of the LOBKIN X21 headphones.

Button Functions:

- **Power Button:**

- Press for 3-5 seconds: Power On/Off
- Single click: Play/Pause music, Answer/Hang up calls, Activate Voice Assistant
- Press for 2 seconds: Decline incoming calls
- Double click: Switch between MP3 Mode and Bluetooth Mode

- **"-" Button:**

- Single click: Reduce volume
- Press for 2 seconds: Previous Song

- **"+" Button:**

- Single click: Increase volume
- Press for 2 seconds: Next Song

Wearing the Headphones

Place the headphones with the bone conduction transducers resting on your cheekbones, just in front of your ears. The band should wrap around the back of your head.

Open Ear & Comfortable

No blockage of the ear canal, comfortable all day long



The open-ear design ensures comfort and allows awareness of surroundings.

Ultra-light, Unfelt Wear


Feather-Light Comfort for Active Moves



Lightweight design (27g) for comfortable, long-term wear.

Never Fall off

Ergonomic ear-hugging design, wireless obstruction, running, skateboarding, biking and other strenuous activities do not fall off, designed for sports

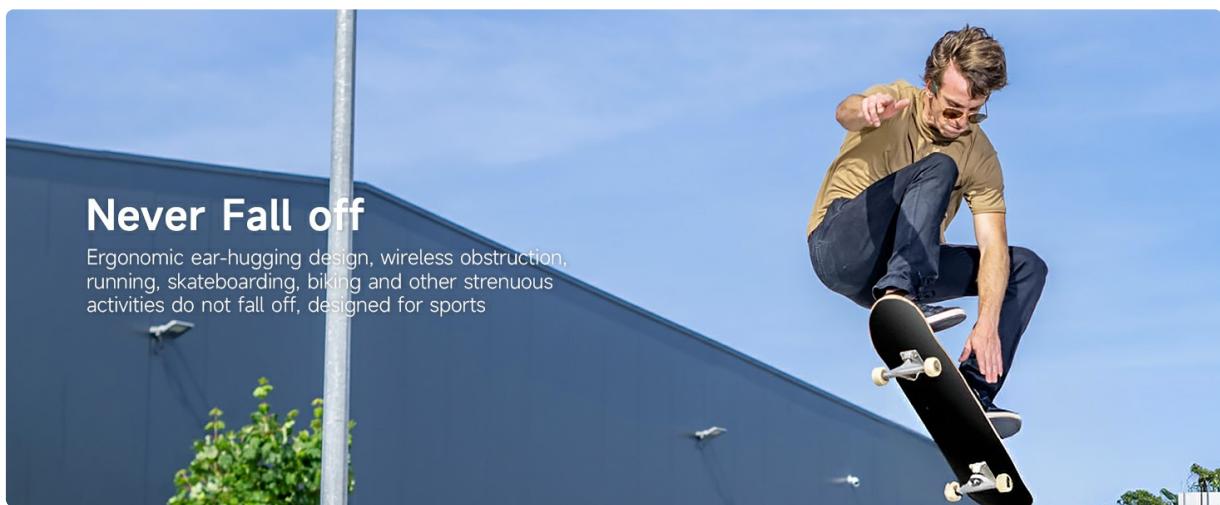

Ergonomic design ensures the headphones stay secure during active use.

MAINTENANCE AND CARE

Proper care will extend the lifespan of your LOBKIN X21 headphones.

- **Cleaning:** Wipe the headphones with a soft, damp cloth after each use, especially after swimming or heavy sweating. Do not use harsh chemicals or abrasive cleaners.
- **Drying:** Although IPX8 waterproof, ensure the charging port is completely dry before connecting the magnetic charging cable to prevent damage.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Earplugs:** Use the included earplugs when you desire a more immersive audio experience or when in noisy environments, as they can enhance the bone conduction sound quality by blocking external noise.

Your browser does not support the video tag.

Official LOBKIN video demonstrating the use of swimming headphones, highlighting their waterproof capabilities and suitability for swimmers. This video is provided by the seller, LOBKIN-US.

TROUBLESHOOTING

If you encounter issues with your headphones, refer to the following common solutions:

Problem	Possible Cause	Solution
No Power	Low battery.	Charge the headphones fully (approx. 2 hours).
Cannot Pair via Bluetooth	Headphones not in pairing mode; device Bluetooth off; too far from device.	Ensure headphones are in pairing mode (flashing red/blue LED). Turn on device Bluetooth. Move headphones closer to the device (within 10 meters).
No Sound / Low Sound	Volume too low; incorrect mode (Bluetooth/MP3); earplugs not used in noisy environments.	Increase headphone and device volume. Double-check if you are in the correct mode. Use earplugs for better sound clarity in loud surroundings.
Bluetooth Disconnects Underwater	Bluetooth signals do not transmit through water.	Switch to MP3 mode before entering water for uninterrupted music playback.
Headphones not recognized by computer	Improper connection or driver issue.	Ensure the magnetic cable is securely connected. Try a different USB port or computer.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	X21
Brand	LOBKIN
Connectivity Technology	Wireless (Bluetooth 6.0)
Wireless Communication Technology	Bluetooth
Bluetooth Version	6.0

Feature	Detail
Bluetooth Range	10 Meters
Water Resistance Level	IPX8 Waterproof
Internal Memory	32GB (for MP3 playback)
Audio Driver Type	Bone Conduction Driver
Audio Driver Size	16 Millimeters
Frequency Response	20 KHz
Sensitivity	84.5 dB
Impedance	8 Ohms
Battery Life	8 Hours
Charging Time	2 Hours
Item Weight	27 Grams (0.952 ounces)
Product Dimensions	4.74 x 3.7 x 1.77 inches
Material	Acrylonitrile Butadiene Styrene (ABS), Metal, Silicone
Special Features	Fast Charging, Lightweight, Microphone Included, Sweatproof, Waterproof
Recommended Uses	Calling, Cycling, Exercising, Running, Swimming

WARRANTY AND SUPPORT

LOBKIN products are manufactured with high-quality standards. For any warranty claims or technical support, please refer to the contact information provided on the product packaging or visit the official LOBKIN website. Keep your purchase receipt for warranty validation.

Included components: Cable, Swimming Headphones, User Manual.