



[Manuals.plus](#) /

› [TECKNET](#) /

› TECKNET TK-WA701 Door/Window Alarm System User Manual

TECKNET TK-WA701

TECKNET TK-WA701 Door/Window Alarm System

USER MANUAL

1. Introduction

The TECKNET TK-WA701 Door/Window Alarm System is designed to enhance the security of your home or property. This versatile device functions as both an alarm and a chime, providing alerts when a door or window is opened. It features adjustable volume levels and is suitable for various applications, including homes, apartments, garages, and for ensuring kids' safety.

2. Package Contents

- 3 x TECKNET TK-WA701 Alarm Units
- 3 x Magnetic Strips
- Adhesive Mounting Pads
- User Manual

3. Product Overview

Each TECKNET TK-WA701 unit consists of an alarm main body and a magnetic strip. The main body houses the speaker, indicator light, ON/OFF switch, and a Volume/Mode button.

3 Adjustable Volume Levels

3 level volume adjustment, you can control the volume according to your needs

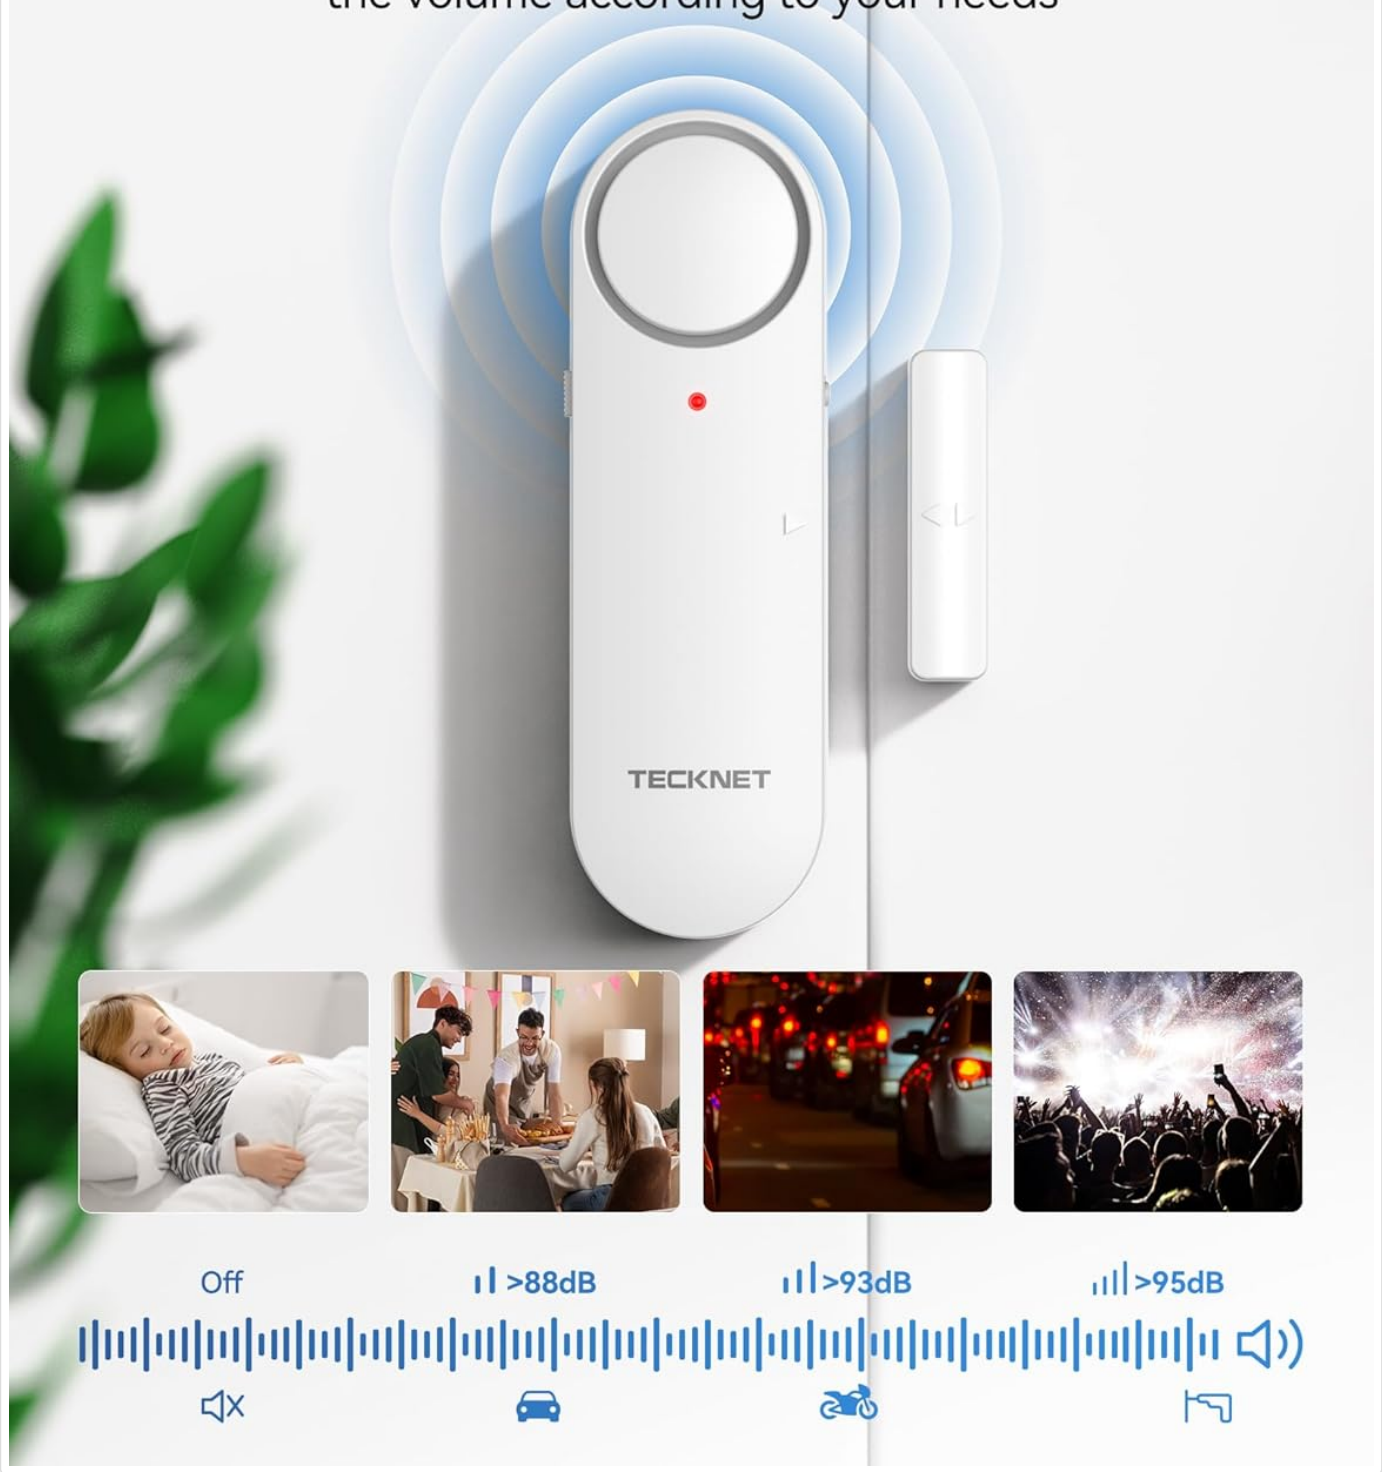


Figure 1: Components of the TECKNET TK-WA701 Alarm Unit

- **Speaker:** Emits alarm or chime sounds.
- **Indicator:** LED light for status indication.
- **Magnetic Strip:** Triggers the alarm when separated from the main unit.
- **ON/OFF Switch:** Located on the side for powering the unit on or off.

- **Volume/Mode Button:** Used to switch between alarm and chime modes, and adjust volume levels.

4. Setup

4.1 Battery Installation

1. Gently slide off the back cover of the main alarm unit.
2. Insert two (2) AAA batteries into the battery compartment, ensuring correct polarity (+/-).
3. Replace the back cover, ensuring it clicks securely into place.



Figure 2: Battery Installation and Initial Setup Steps

4.2 Mounting the Alarm

1. Clean the desired installation surface (door, window frame, cabinet) thoroughly to ensure it is free of dust and grease. Allow it to dry completely.
2. Peel off the protective film from the adhesive pads on the back of both the main alarm unit and the magnetic strip.
3. Attach the main alarm unit to the fixed part of the door/window frame.
4. Attach the magnetic strip to the moving part of the door/window, aligning the arrows on both components.
5. Ensure the gap between the main alarm unit and the magnetic strip is less than 2 cm (0.78 inches) when the door/window is closed. A larger gap may prevent proper function.



Figure 3: Correct Installation Method and Gap Requirement

5. Operating Instructions

5.1 Powering On/Off

Locate the ON/OFF switch on the side of the main alarm unit. Slide the switch to 'ON' to activate the alarm or 'OFF' to

deactivate it.

5.2 Switching Modes (Alarm/Chime)

Press and hold the Volume/Mode button for 3 seconds to switch between Alarm mode and Chime mode. In Alarm mode, a continuous loud sound will be emitted when triggered. In Chime mode, a single chime sound will be heard when triggered.

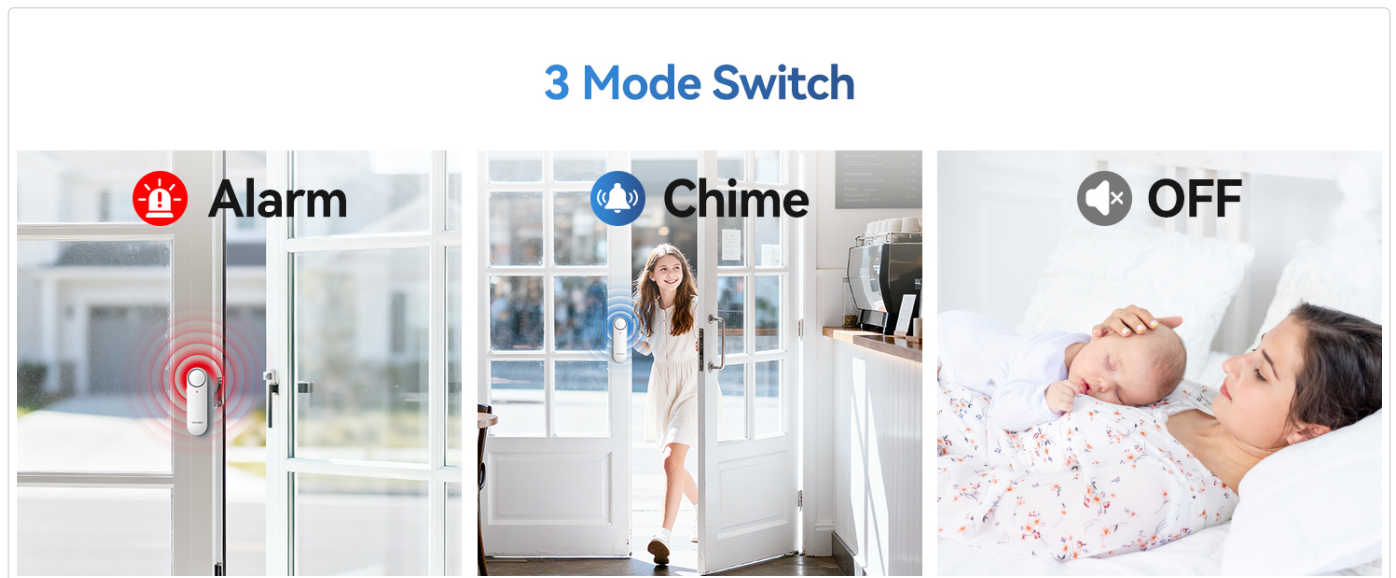


Figure 4: 3-Mode Switch (Alarm, Chime, OFF)

5.3 Adjusting Volume

The alarm features 3 adjustable volume levels: Low, Medium, and High. Briefly press the Volume/Mode button to cycle through the volume settings. This allows you to customize the alert sound to your environment.

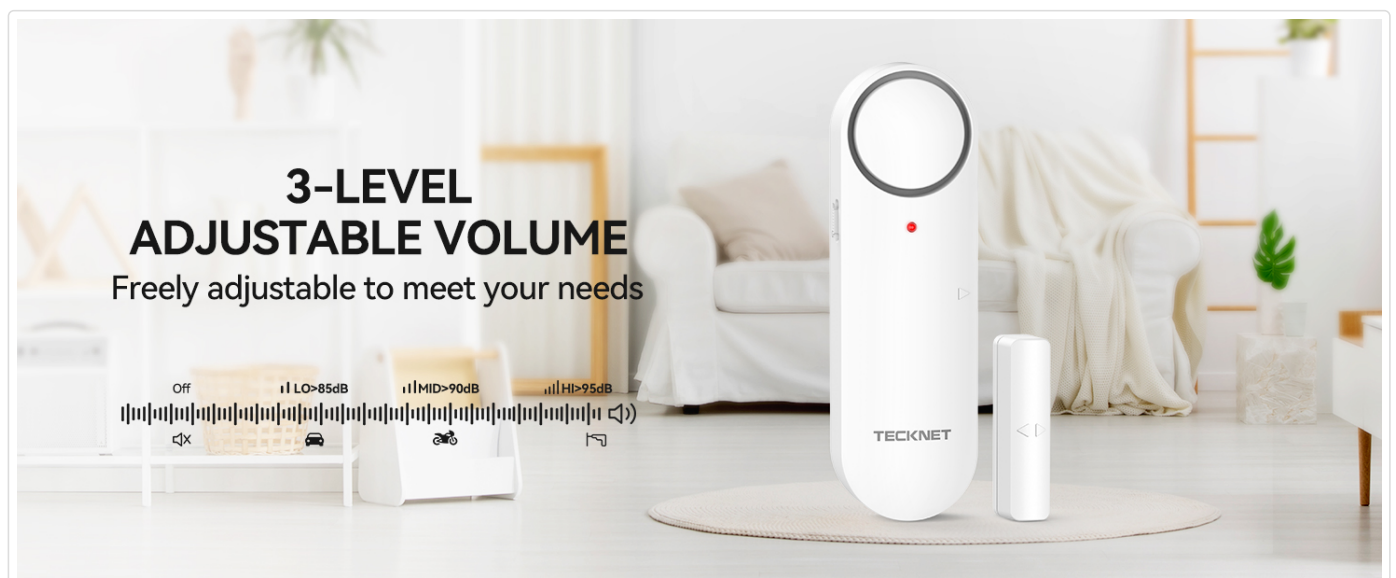


Figure 5: 3-Level Adjustable Volume

5.4 Triggering the Alarm/Chime

When the main alarm unit and the magnetic strip are separated by more than 2 cm (0.78 inches), the device will trigger according to the selected mode (Alarm or Chime).

Your browser does not support the video tag.

Video 1: Demonstration of TECKNET Door Alarms When Opened 2-in-1 Alarm & Chime functionality.

6. Maintenance

6.1 Battery Replacement

When the alarm sound becomes weak or the indicator light does not illuminate, it is time to replace the batteries. Follow the battery installation steps (Section 4.1) to replace the two (2) AAA batteries in each unit.



Figure 6: TECKNET Door/Window Alarm System in a home setting.

6.2 Cleaning

Wipe the alarm units with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the surface or internal components.

7. Troubleshooting

- **Alarm not triggering:** Ensure the ON/OFF switch is in the 'ON' position. Verify that the magnetic strip is aligned with the main unit and the gap is less than 2 cm. Check battery levels.
- **Weak or no sound:** Replace the batteries with new AAA batteries. Ensure the volume is not set to the lowest level or 'OFF' in chime mode.
- **False alarms:** Check the stability of the mounting. Ensure the magnetic strip and main unit are securely attached and do not shift.

8. Specifications

Feature	Detail
Brand	TECKNET
Model Number	TK-WA701
Color	White
Power Source	Battery Powered
Battery Type	2 AAA batteries required per unit (Alkaline recommended)
Control Method	Push Button, ON/OFF Switch

Mounting Type	Door Mount (Adhesive)
Sensor Technology	Contact Sensor
Smart Home Compatibility	Not Smart Home Compatible
Item Weight	141 Grams (per unit)
Unit Count	3.0 Count

9. Warranty and Support

TECKNET provides a 36-month warranty for this product. If you encounter any problems when using the product, please feel free to contact our professional customer service team for assistance. Warranty registration may be required.

For customer support, please visit the official TECKNET website or refer to the contact information provided on the product packaging.