

[Manuals.plus](#) /

› [Monster](#) /

› Monster Shock Portable Bluetooth Speaker User Manual

Monster s22

Monster Shock Portable Bluetooth Speaker User Manual

Model: S22

INTRODUCTION

Thank you for choosing the Monster Shock Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

PACKAGE CONTENTS

Upon unboxing, please verify that all items listed below are included in your package:

- Monster Shock Portable Bluetooth Speaker
- Audio Cable
- USB-C Charging Cable
- Quick Start Guide
- Warranty Letter

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied USB-C cable to the speaker's charging port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator will illuminate during charging and turn off when fully charged.

2. Powering On/Off

Press and hold the Power button located on the top panel of the speaker for approximately 3 seconds to turn the speaker on or off.

3. Bluetooth Pairing

The Monster Shock speaker features Bluetooth 5.4 for stable and efficient wireless connectivity.

1. Ensure the speaker is powered on and in pairing mode (indicated by a flashing LED, if applicable).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Monster Shock" from the list of found devices.

4. Once connected, the speaker will indicate a successful pairing (e.g., a solid LED light or an audible prompt).

Bluetooth Compatibility

Be it a smartphone, tablet, laptop, or any Bluetooth-enabled device, this speaker will provide you with a seamless and reliable connection experience.



Figure 1: Bluetooth Compatibility - The speaker seamlessly connects to various Bluetooth-enabled devices like smartphones and laptops.

4. TWS (True Wireless Stereo) Pairing

For an immersive stereo experience, you can pair two Monster Shock speakers together.

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker, press and hold the TWS pairing button (refer to the quick start guide for exact button location, typically indicated by a TWS icon).
3. The speakers will automatically search for and connect to each other. A successful connection will be indicated by an audible prompt.
4. Once TWS paired, connect your device to one of the speakers via Bluetooth as described in step 3. Audio will now play through both speakers in stereo.



Figure 2: TWS Stereo Pairing - Two speakers can be wirelessly connected for a synchronized, immersive audio experience.

OPERATING THE SPEAKER

Basic Controls

- **Power Button:** Press and hold to turn on/off.
- **Volume Up (+):** Short press to increase volume.
- **Volume Down (-):** Short press to decrease volume.
- **Play/Pause Button:** Short press to play or pause audio.
- **Next Track:** Long press the Volume Up (+) button.
- **Previous Track:** Long press the Volume Down (-) button.

Battery Life

The Monster Shock speaker provides up to 17 hours of continuous music playback on a single charge, depending on

volume level and audio content. For optimal battery performance, avoid fully discharging the battery frequently.



Figure 3: Extended Playback - Enjoy up to 17 hours of audio on a single charge.

MAINTENANCE

Cleaning

To clean the speaker, use a soft, dry cloth. Do not use abrasive cleaners, alcohol, or other chemical solvents, as these may damage the surface of the speaker.

Water Resistance (IPX6)

The Monster Shock speaker is IPX6 water resistant, meaning it can withstand high-pressure water jets from any direction. This makes it suitable for outdoor use and environments where it might be exposed to splashes or rain. However, it is not designed for submersion in water.

IPX6 Water Resistant



Figure 4: IPX6 Water Resistant - The speaker is protected against powerful water jets, suitable for various outdoor conditions.

Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery periodically to maintain its health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker won't turn on.	Battery is depleted.	Charge the speaker using the provided USB-C cable.
Cannot connect via Bluetooth.	Speaker is not in pairing mode or already connected to another device.	Ensure the speaker is in pairing mode. Disconnect from any other devices. Move speaker closer to your device.

Problem	Possible Cause	Solution
No sound or low volume.	Volume too low on speaker or connected device.	Increase volume on both the speaker and your connected device.
Sound distortion.	Volume too high or audio source quality is poor.	Reduce volume. Try a different audio source or file.
TWS pairing fails.	Speakers are too far apart or already connected to a device.	Ensure both speakers are close to each other and not connected to any other Bluetooth devices. Restart both speakers and try again.

SPECIFICATIONS



Figure 5: Pristine Stereo Audio - The speaker's design ensures clear highs, crisp mids, and rich lows.

- **Brand:** Monster

- **Model Number:** S22
- **Speaker Maximum Output Power:** 30 Watts
- **Bluetooth Version:** 5.4
- **Wireless Range:** Up to 100 feet (approx. 30 meters)
- **Water Resistance Rating:** IPX6
- **Battery Life:** Up to 17 hours (at moderate volume)
- **Battery Type:** 1 A battery (included)
- **Product Dimensions:** 13.46 x 5.08 x 12.7 cm (5.3 x 2.0 x 5.0 inches)
- **Item Weight:** 690 g (1.52 lbs)
- **Mounting Type:** Tabletop

WARRANTY AND SUPPORT

Your Monster Shock Portable Bluetooth Speaker comes with a warranty. Please refer to the included warranty letter for specific terms and conditions. For any questions, technical assistance, or support, Monster provides 24-hour customer service. Please contact the customer service team using the information provided in your warranty letter or on the official Monster website.

© 2025 Monster. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FF4WCNFX>

More documents and user manuals: <https://manuals.plus/>