

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NEEWER](#) /

› [NEEWER Basics PA991 Selfie Stick Tripod Instruction Manual](#)

## NEEWER PA991

# NEEWER Basics PA991 Selfie Stick Tripod Instruction Manual

Model: PA991 | Brand: NEEWER

## 1. INTRODUCTION

The NEEWER Basics PA991 Selfie Stick Tripod is a versatile and portable accessory designed for mobile phone photography and video recording. It functions as both an extendable selfie stick and a stable tripod, featuring a built-in remote control for convenient operation. This manual provides essential information for proper setup, usage, and care of your device.

## 2. WHAT'S IN THE BOX

- 1 x Selfie Stick Tripod
- 1 x Remote Control
- 1 x USB C to USB C charging cable
- 1 x User Manual



1 x Selfie Stick Tripod

## SPECIFICATIONS

Model: PA991

Item Type: Selfie Stick Tripod

Compatibility: Phones

Application: Photo & Video

Main Features: Mid Spreader

Mounting Points: Phone Clamp

Load Capacity: 17.6oz / 500g

Main Material: Aluminum Alloy

Dimensions: 12.2" to 57.9" / 31 to 147 cm

Weight: 14.8oz / 420g

Note: Only the selfie stick is included; other accessories sold separately.



1 x Remote Control



1 x USB C to USB C  
charging cable



1 x User Manual

Figure 2.1: Package Contents - Selfie Stick Tripod, Remote Control, USB-C Cable, and User Manual.

## 3. SETUP

### 3.1 Deploying the Tripod Legs

1. Hold the selfie stick tripod firmly.
2. Locate the push button at the base of the handle.
3. Press the button to release the tripod legs. The legs will automatically extend and lock into a stable tripod configuration.



Figure 3.1: One-Touch Setup for Tripod Mode, showing extended legs and non-slip pads.

### 3.2 Attaching Your Mobile Phone

1. Extend the phone clip at the top of the selfie stick. The clip is adjustable from 60mm to 100mm.
2. Carefully place your smartphone into the clip, ensuring it is securely held.
3. The phone holder supports both vertical and horizontal orientations. Rotate the phone mount 180° to switch between portrait and landscape modes as needed.

## BLUETOOTH REMOTE CONTROL

The detachable Bluetooth remote control responds quickly and works within a distance of 10 meters.

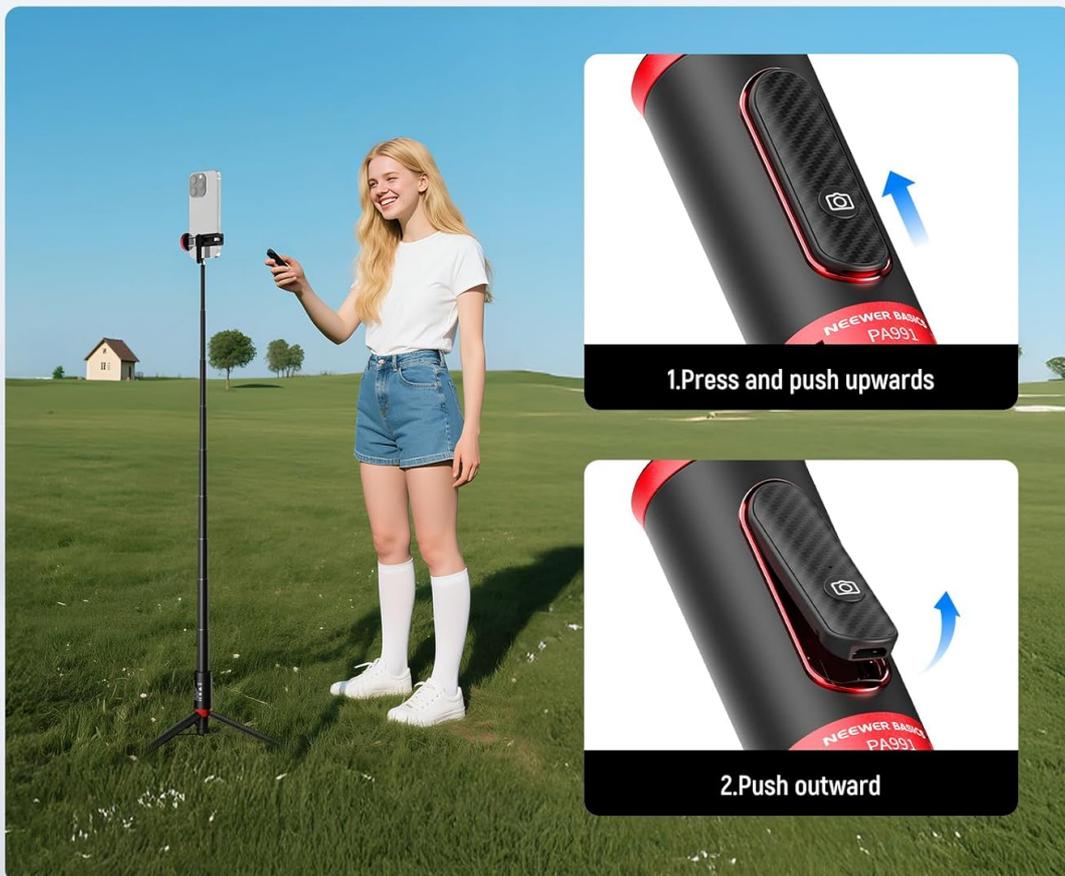


Figure 3.2: Adjustable Phone Holder, compatible with phones from 60mm to 100mm wide.



Figure 3.3: 180° Dual Axis Phone Mount for flexible shooting angles.

### 3.3 Pairing the Remote Control

1. Remove the remote control from its slot on the selfie stick handle.
2. Turn on the remote control (refer to the remote's specific instructions if needed, usually a long press on the button).
3. On your smartphone, go to Bluetooth settings and search for available devices.
4. Select the device named 'NEEWER' or similar to pair. Once paired, the remote is ready for use.


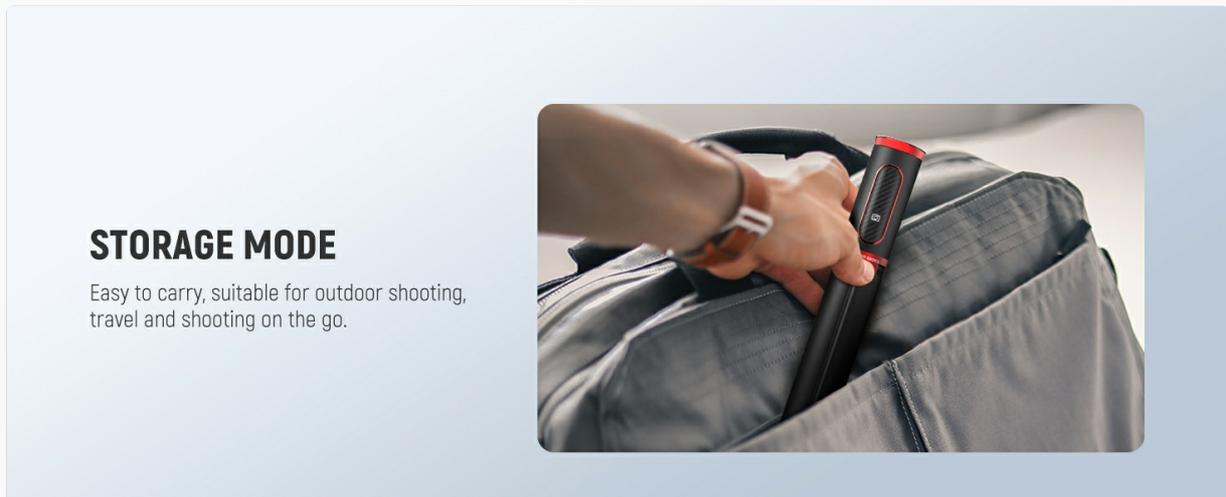


Figure 3.4: Detachable Bluetooth Remote Control for wireless operation.

## 4. OPERATING INSTRUCTIONS

### 4.1 Using as a Selfie Stick

1. Ensure the tripod legs are folded and secured within the handle.
2. Extend the telescopic pole to your desired length (from 31cm to 147cm).
3. Hold the handle firmly and use the paired remote control to capture photos or start/stop video recording.

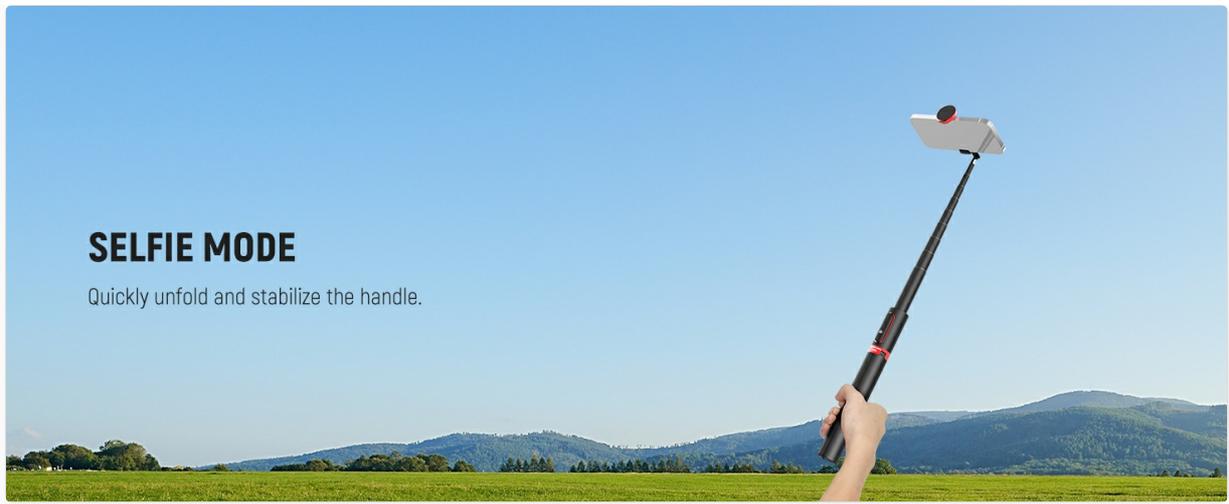

## SELFIE MODE

Quickly unfold and stabilize the handle.

Figure 4.1: Selfie Mode - Extended pole for capturing wider shots.

### 4.2 Using as a Tripod

1. Deploy the tripod legs as described in Section 3.1.
2. Place the tripod on a flat, stable surface.
3. Adjust the telescopic pole to your desired height.
4. Use the remote control to operate your phone's camera functions.

## 180° DUAL AXIS PHONE MOUNT

180° rotation with vertical/horizontal mode switching.



Vertical Shooting



Horizontal Shooting

Figure 4.2: Tripod Mode - Fully extended for stable, hands-free recording.

### 4.3 Adjusting Angles

The phone mount allows for 180° rotation, enabling you to switch between portrait and landscape orientations. The ball head joint provides flexibility to tilt and pan your phone for optimal framing.

## 5. MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, fold the selfie stick tripod to its compact size and store it in a dry, cool place away from direct sunlight.
- **Battery Care:** The remote control has a built-in 50 mAh rechargeable battery. Charge it regularly to maintain battery health. Avoid overcharging or completely draining the battery for extended periods.

## 6. TROUBLESHOOTING

- **Remote Control Not Connecting:** Ensure the remote is charged and turned on. Check your phone's Bluetooth settings to ensure it's discoverable and try re-pairing the device.
- **Tripod Instability:** Ensure the tripod legs are fully deployed and locked. Place the tripod on a flat, stable surface. Avoid exceeding the maximum load capacity of 500g (17.6 oz).
- **Telescopic Pole Not Extending/Retracting Smoothly:** Check for any obstructions or debris in the pole sections. Clean the sections if necessary. Do not force the pole.

## 7. SPECIFICATIONS

Feature	Specification
Model	PA991
Item Type	Selfie Stick Tripod
Compatibility	Smartphones (iPhone, Samsung, Android)
Phone Holder Adjustment	60mm to 100mm
Material	Aluminum Alloy
Adjustable Length (Selfie Stick)	31cm (12.2") to 147cm (57.9")
Folded Length	31cm (12.2")
Max Load Capacity	500g (17.6 oz)
Item Weight	420g (14.8 oz)
Remote Control Battery	50 mAh Rechargeable
Remote Control Range	Up to 10m (33 ft)

## 8. WARRANTY AND SUPPORT

For warranty information, technical support, or customer service, please refer to the official NEEWER

website or contact the retailer where you purchased the product. Keep your purchase receipt as proof of purchase.

**Manufacturer:** NEEWER

---

© 2025 NEEWER. All rights reserved.