

[Manuals.plus](#) /

› [Nintens](#) /

› Nintens RM-C3401 Remote Control User Manual for JVC 4K Smart LED TVs

Nintens RM-C3401

Nintens RM-C3401 Remote Control User Manual

For JVC 4K Smart LED TV Models: LT-39N3105, LT-50N7105, LT-55N775, LT-75N775

INTRODUCTION

This manual provides instructions for the Nintens RM-C3401 remote control, designed for use with various JVC 4K Smart LED TV models. Please read this manual thoroughly before using the remote control to ensure proper operation and to familiarize yourself with its features.

PRODUCT OVERVIEW

Remote Control Layout

The Nintens RM-C3401 remote control features a standard layout for easy navigation and control of your JVC 4K Smart LED TV.



This image displays the full front view of the Nintens RM-C3401 remote control, showing all buttons and their general arrangement.

Key Button Functions

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Selects channels directly.
- **Volume Up/Down (VOL +/-):** Adjusts the sound volume.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Mute Button:** Mutes or unmutes the TV sound.
- **Source Button:** Selects input sources (HDMI, AV, etc.).
- **Navigation Buttons (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Home Button:** Accesses the TV's smart home interface.
- **Menu Button:** Opens the TV's main settings menu.
- **Exit Button:** Exits the current menu or function.
- **EPG (Electronic Program Guide):** Displays program information.
- **REC (Record):** Initiates recording (if supported by TV and external storage).
- **Media Button:** Accesses media playback functions.
- **NFX, YouTube, ESHARE:** Dedicated buttons for specific smart TV applications.

SETUP

Battery Installation

The remote control requires two AAA batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



This image shows the back of the remote control with the battery compartment open, illustrating the correct orientation for inserting two AAA batteries.

OPERATING INSTRUCTIONS

Basic Operation

Point the remote control directly at the TV's infrared sensor. Ensure there are no obstructions between the remote and the TV.

Power On/Off

Press the **Power** button once to turn the TV on or off.

Channel Selection

Use the **CH +/-** buttons to cycle through channels.

To enter a specific channel number, use the **Number Buttons (0-9)**.

Volume Control

Press **VOL +** to increase the volume and **VOL -** to decrease it.

Press the **Mute** button to temporarily silence the TV. Press it again to restore sound.

Input Source Selection

Press the **Source** button to display the list of available input sources. Use the **Navigation Buttons** (Up/Down) to select the desired source and press **OK**.

Smart TV Functions

Press the **Home** button to access the main Smart TV interface.

Use the dedicated **NFX**, **YouTube**, or **ESHARE** buttons to quickly launch these applications.

MAINTENANCE

Cleaning and Storage

To maintain the remote control's performance and appearance:

- Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Avoid exposing the remote control to direct sunlight, high temperatures, or high humidity.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Remote Control Not Responding

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Make sure the remote control is pointed directly at the TV.

Limited Functionality

- Verify that the remote control is compatible with your specific JVC TV model. Refer to the list of compatible models in the introduction.
- Some advanced TV functions may require using the TV's on-screen menu directly.

SPECIFICATIONS

Product Specifications

- **Model:** RM-C3401
- **Brand:** Nintens
- **Compatible TV Models:** JVC 4K Smart LED TV LT-39N3105, LT-50N7105, LT-55N775, LT-75N775
- **Power Source:** 2 x AAA batteries (not included)
- **Dimensions:** Approximately 0.39 x 0.39 x 0.39 inches (1 x 1 x 1 cm)
- **Weight:** Approximately 1.76 ounces (50 grams)
- **Material:** ABS Plastic

WARRANTY AND SUPPORT

Warranty Information

This product is covered by a standard manufacturer's warranty. Please refer to the packaging or contact your retailer for specific warranty terms and conditions.

Customer Support

For technical assistance or inquiries, please contact the retailer where you purchased this product.

Nintens RM-C3401 User Manual. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question