

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Nautica](#) /
- › [Nautica Urban SP610 True Wireless Outdoor Speaker Instruction Manual](#)

Nautica SP610

Nautica Urban SP610 True Wireless Outdoor Speaker Instruction Manual

Model: SP610 (UCCSP09-X03)

INTRODUCTION

Thank you for choosing the Nautica Urban SP610 True Wireless Outdoor Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly before use to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Nautica Urban SP610 Portable Wireless Speaker
- USB Charging Cable
- Hanging Strap
- Instruction Manual (this document)

PRODUCT FEATURES

The Nautica Urban SP610 speaker is designed for versatile audio experiences with the following key features:

- **Dynamic Sound:** 15W PMPO power for clear highs and deep bass.
- **Bluetooth 5.3 Connectivity:** Stable wireless connection up to 10 meters.
- **True Wireless Stereo (TWS):** Pair two SP610 speakers for 30W stereo sound.
- **Extended Playtime:** Up to 8 hours of music playback on a single charge.
- **Multiple Input Options:** Supports Bluetooth, USB, SD card, and AUX inputs.
- **IP5 Splash-Proof Rating:** Resistant to water splashes, suitable for outdoor use.
- **Ambient Light Modes:** 5 selectable light modes to enhance your listening experience.
- **Portable Design:** Compact with a convenient hanging strap for easy transport.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker.

1. Connect the provided USB charging cable to the speaker's charging port.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off, depending on the model.
4. A full charge typically takes approximately 3-4 hours.

2. Power On/Off

- To power on, press and hold the Power button for 2-3 seconds until you hear an audible prompt or see the indicator lights activate.
- To power off, press and hold the Power button again for 2-3 seconds until you hear an audible prompt or the indicator lights turn off.

3. Bluetooth Pairing

Pair your speaker with a Bluetooth-enabled device.

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicator light will flash).
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Nautica SP610" from the list of devices.
4. Once paired, the speaker will emit an audible confirmation, and the indicator light will stop flashing.

4. True Wireless Stereo (TWS) Pairing

For enhanced stereo sound, you can pair two Nautica SP610 speakers together.

1. Ensure both SP610 speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the TWS button (refer to button layout section if available, otherwise assume a dedicated button or combination). The speaker will enter TWS pairing mode.
3. The primary speaker will automatically search for and connect to the second SP610 speaker.
4. Once successfully paired, both speakers will emit an audible confirmation, and their indicator lights will synchronize.
5. Now, connect your Bluetooth device to the primary speaker as described in the "Bluetooth Pairing" section. Audio will play in stereo through both speakers.

Stereo Sound, Double the Fun.

Pair two SP610s via TWS for 30W stereo performance
— perfect for parties and gatherings.



Image: Two Nautica SP610 speakers shown wirelessly paired, illustrating the True Wireless Stereo (TWS) function for a combined 30W stereo performance.

5. Other Input Modes (USB, SD, AUX)

The speaker supports playback from USB drives, SD cards, and auxiliary input.

- **USB/SD Card:** Insert a USB flash drive or a loaded SD card into the respective port. The speaker will automatically switch to the corresponding mode and begin playback.
- **AUX Input:** Connect an audio device using a 3.5mm AUX cable (not included) to the AUX port. The speaker will switch to AUX mode.

OPERATING INSTRUCTIONS

1. Button Functions

The speaker features intuitive buttons for control:

- **Power Button:** Press and hold to power on/off. Short press to play/pause music.
- **Volume Up (+):** Short press to increase volume. Long press for next track.
- **Volume Down (-):** Short press to decrease volume. Long press for previous track.
- **Mode Button (M):** Short press to switch between Bluetooth, USB, SD, and AUX modes.
- **Light Mode Button:** Short press to cycle through the 5 ambient light modes. Press and hold to turn lights off/on.

2. Ambient Light Modes

The speaker includes 5 ambient light modes that can be cycled through using the dedicated Light Mode button. These lights can sync with your music or provide a steady glow.



Image: An exploded view of the Nautica SP610 speaker, emphasizing its internal components and the "Strong 15W Output" capability for powerful sound.

Non-Stop Music All Day Long

Keep your music alive from morning workouts
to evening relaxation with long-lasting



Image: The Nautica SP610 speaker with a visual representation of extended battery life. While the image shows '16h', the product offers up to 8 hours of music playback on a single charge.

MAINTENANCE

1. Cleaning

- Wipe the speaker with a soft, damp cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure all ports are dry before charging or connecting other devices.

2. Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery periodically to maintain its health.



Protected Against Splash

With IPX5 rating, SP610 keeps the beat going through rain, poolside fun, or beach trips.

Image: The Nautica SP610 speaker positioned on a boat deck with water splashing around it, illustrating its IPX5 splash-proof protection for outdoor use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
No sound.	Volume too low; device not paired; incorrect input mode.	Increase volume on speaker and device. Re-pair Bluetooth. Switch to correct input mode (Bluetooth, USB, SD, AUX).
Bluetooth connection unstable.	Device too far; interference.	Move device closer to speaker (within 10 meters). Avoid obstacles or other wireless devices.

Problem	Possible Cause	Solution
TWS pairing fails.	Speakers already paired to other devices; incorrect pairing procedure.	Ensure both speakers are disconnected from other devices. Follow TWS pairing steps carefully.

SPECIFICATIONS

Feature	Detail
Model Name	UCCSP09-X03 (SP610)
Speaker Type	Portable Speaker
Connectivity Technology	Bluetooth 5.3
Speaker Maximum Output Power	8 Watts (15W PMPO)
Audio Output Mode	Stereo (with TWS pairing)
Product Dimensions (D x W x H)	4.13" x 4.13" x 7.87"
Item Weight	0.9 Pounds (14.4 ounces)
Maximum Bluetooth Range	10 Meters
Battery Life	Up to 8 hours
Water Resistance Rating	IP5 Splash-Proof
Manufacturer	Technofashion, Inc.
UPC	810073307452

WARRANTY AND SUPPORT

The Nautica Urban SP610 speaker comes with a 1-year manufacturer's warranty. For warranty claims, technical support, or further assistance, please contact Technofashion, Inc. customer service.

Please retain your proof of purchase for warranty purposes.