

## Sony BDP-S1700

# Sony BDP-S1700 Blu-ray Player User Manual

Your comprehensive guide to setup, operation, and maintenance.

## 1. WHAT'S IN THE BOX

---

Upon unboxing your Sony BDP-S1700 Blu-ray Player bundle, please verify that all the following items are included:

- Sony BDP-S1700 Blu-Ray Player (Black)
- Hook-and-Loop Fastening Cable Ties (9-Inch x 1/2-Inch, 10-Pack)
- 8-Foot 4K Ultra HD High-Speed Data Transfer Thin Ethernet HDMI Cable (Silver)

# WHAT'S IN THE **BOX**



Sony BDP-S1700 Blu-ray Player (Black)



Hook-and-Loop Fastening  
Cable Ties (9-Inch x 1/2-Inch,  
10-Pack)



8-Foot 4K Ultra HD High-  
Speed Data Transfer Thin  
Ethernet HDMI Cable (Silver)

Image 1.1: All components included in the Sony BDP-S1700 Blu-ray Player bundle.



Image 1.2: Sony BDP-S1700 Blu-ray Player.



Image 1.3: Hook-and-Loop Fastening Cable Ties.



Image 1.4: 8-Foot HDMI Cable.

## 2. PRODUCT OVERVIEW

The Sony BDP-S1700 is a compact Blu-ray Player designed for high-definition entertainment. It supports 1080p Full HD playback for Blu-ray Discs and streamed content, delivering sharp details and vibrant clarity. The player incorporates TRILUMINOS Color Technology for a wider color spectrum, resulting in richer and more natural hues.

For audio, it supports Dolby TrueHD and DTS-HD, providing lossless multi-channel surround sound. The BDP-S1700 offers wired streaming access via its built-in Ethernet port, ensuring stable and lag-free connection to popular online services. It also features DVD upscaling to near-HD quality and USB multimedia playback for various file types.

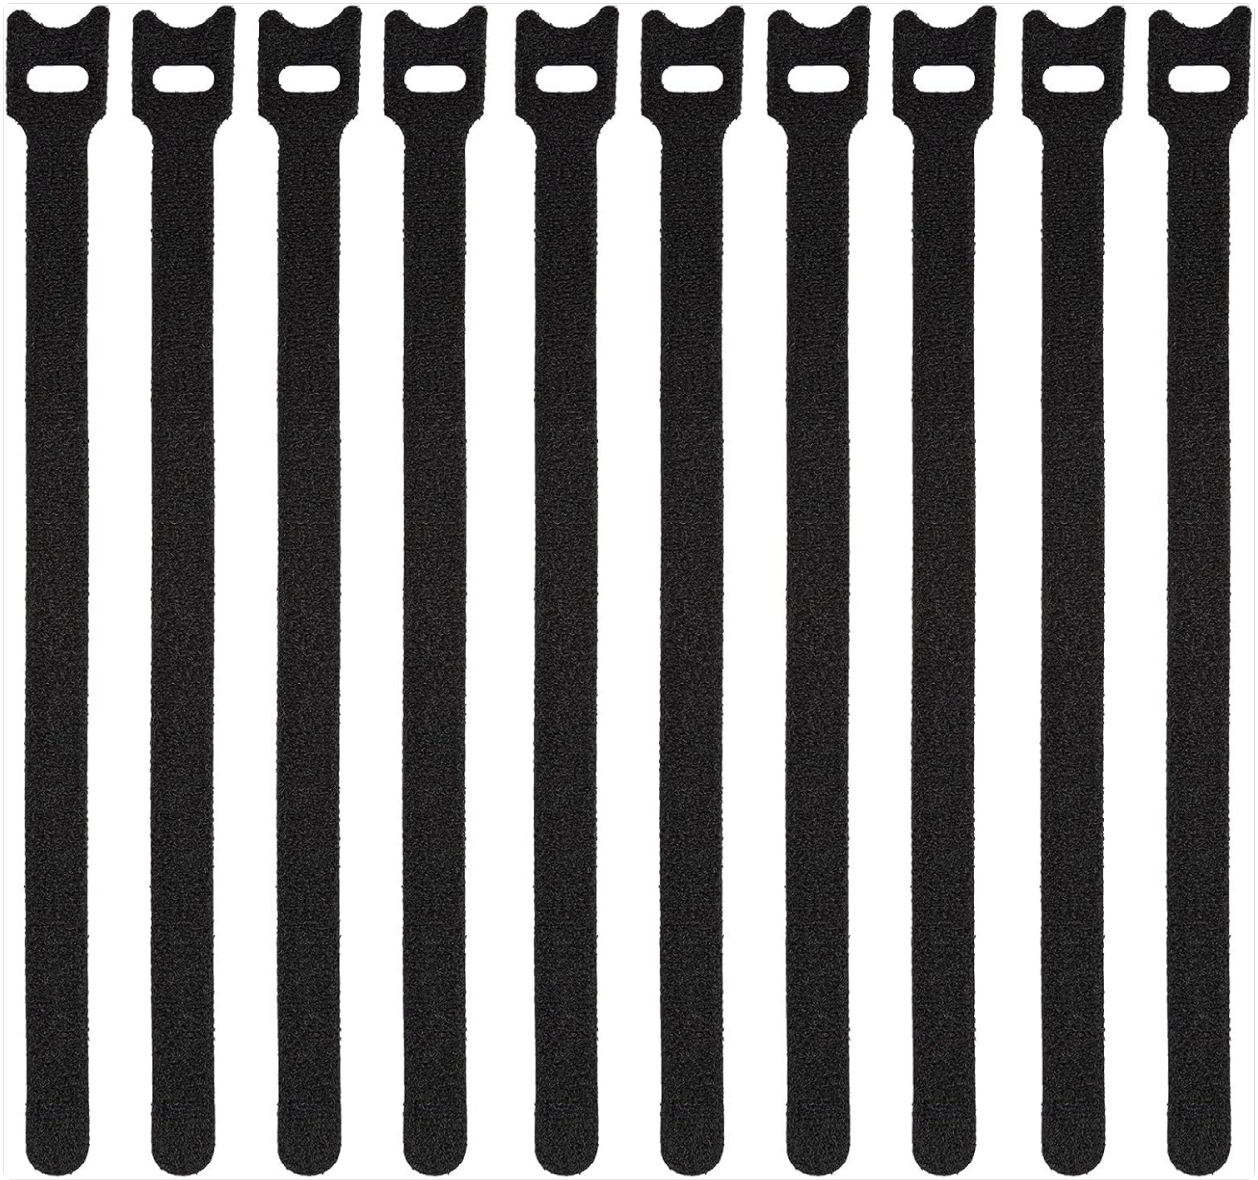


Image 2.1: Detailed view of the Sony BDP-S1700 Blu-ray Player.

### 3. SETUP GUIDE

---

Follow these steps to connect your Sony BDP-S1700 Blu-ray Player to your television and network.

#### 3.1 Connecting to a Television

1. **Power Off:** Ensure your television and the Blu-ray player are turned off before making any connections.
2. **HDMI Connection:** Connect one end of the supplied HDMI cable to the HDMI OUT port on the back of the Blu-ray player. Connect the other end to an available HDMI IN port on your television. Note the HDMI input number on your TV (e.g., HDMI 1, HDMI 2).
3. **Power Connection:** Plug the AC power cord of the Blu-ray player into a wall outlet.

#### 3.2 Network Connection (Wired)

For wired streaming access, connect the player to your home network:

1. **Ethernet Cable:** Connect an Ethernet cable (not supplied) from your router or modem to the LAN port

on the back of the Blu-ray player.

2. **Network Setup:** After powering on, navigate to the network settings menu on the player to configure your wired connection if necessary. Most wired connections are automatically detected.

## 4. OPERATING INSTRUCTIONS

---

This section covers the basic operation of your Sony BDP-S1700 Blu-ray Player.

### 4.1 Powering On/Off

- **Power On:** Press the **POWER** button on the player or the remote control. The player features a Super Quick Start Mode, allowing it to start up in under a second.
- **Power Off:** Press the **POWER** button again.

### 4.2 Disc Playback

1. **Insert Disc:** Gently insert a Blu-ray Disc or DVD into the disc slot on the front of the player. The player will automatically load the disc.
2. **Start Playback:** The disc will typically begin playing automatically. If not, select 'Play' from the on-screen menu using the remote control.
3. **Controls:** Use the remote control for playback functions such as Play, Pause, Stop, Fast Forward, and Rewind.

### 4.3 Wired Streaming Access

With a wired Ethernet connection, you can access various online streaming services:

1. **Access Home Menu:** Press the **HOME** button on the remote control.
2. **Select Streaming App:** Navigate to the 'Network' or 'Video' section and select your desired streaming application (e.g., Netflix, YouTube).
3. **Login:** Log in with your account credentials for the selected service.

### 4.4 USB Multimedia Playback

The player supports playback of movies, music, and photos directly from a USB drive:

1. **Insert USB Drive:** Insert your USB drive into the USB port on the front of the player.
2. **Access USB Content:** From the Home menu, navigate to the 'Photo', 'Music', or 'Video' section and select 'USB'.
3. **Select File:** Browse and select the file you wish to play.

## 5. MAINTENANCE

---

Proper care ensures the longevity and optimal performance of your Blu-ray player.

- **Cleaning the Unit:** Use a soft, dry cloth to wipe the exterior of the player. Do not use abrasive pads, scouring powder, or solvents such as alcohol or benzene.
- **Disc Care:** Handle discs by their edges. Keep discs clean and free of scratches. Wipe discs from the center outwards with a soft, lint-free cloth if cleaning is necessary.
- **Ventilation:** Ensure adequate ventilation around the player. Do not block ventilation openings.
- **Storage:** When not in use for extended periods, unplug the player from the power outlet.

## 6. TROUBLESHOOTING

---

If you encounter issues with your Blu-ray player, refer to the following common problems and solutions.

### 6.1 No Picture or Distorted Picture

- Check HDMI cable connections at both the player and the TV.
- Ensure the correct HDMI input is selected on your television.
- Try a different HDMI cable or HDMI port on your TV.

### 6.2 No Sound or Distorted Sound

- Verify that the audio settings on your TV and player are correctly configured.
- Check the volume level on your TV or audio receiver.
- Ensure the HDMI cable is securely connected.

### 6.3 Disc Does Not Play

- Ensure the disc is inserted correctly with the label side facing up.
- Check if the disc is clean and free of scratches or smudges.
- Verify that the disc format is supported by the player (Blu-ray, DVD).

### 6.4 Streaming Issues

- Check your Ethernet cable connection to the player and router.
- Verify your internet connection is active and stable.
- Restart your router/modem and the Blu-ray player.

## 7. SPECIFICATIONS

---

Feature	Detail
Product Dimensions	11.9 x 10.9 x 6.7 inches

Feature	Detail
Item Weight	3.5 pounds
Manufacturer	Sony
ASIN	B0FF6YYKFD
Date First Available	June 23, 2025

## 8. ACCESSIBILITY FEATURES

---

The Sony BDP-S1700 Blu-ray Player includes features designed to enhance accessibility for all users:

- **Screen Reader:** Provides audible descriptions of on-screen text and menu options.
- **Audio Descriptions:** Offers narrative descriptions of visual content in supported movies and shows.
- **Closed Captioning:** Displays text versions of audio content, including dialogue and sound effects.
- **Magnification:** Allows users to enlarge portions of the screen for better visibility.

## 9. WARRANTY AND SUPPORT

---

For information regarding the product warranty, please refer to the warranty card included with your purchase or visit the official Sony support website. If you require technical assistance or have questions not covered in this manual, please contact Sony customer support.

You can find more information and support resources by visiting the official Sony Store on Amazon:

[Visit the Sony Store](#)