

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EUHOMY](#) /

› [EUHOMY 15-Inch Under Counter Ice Maker User Manual](#)

EUHOMY B0FF8R4GYV

EUHOMY 15-Inch Under Counter Ice Maker User Manual

Model: B0FF8R4GYV

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance. To reduce the risk of fire, electric shock, or injury when using your ice maker, follow these basic precautions:

- Connect to properly grounded outlets only.
- Do not immerse cord, plug, or ice maker in water or other liquids.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use for other than intended use.

PRODUCT OVERVIEW

The EUHOMY 15-inch Under Counter Ice Maker is designed to produce clear ice cubes efficiently for residential or light commercial use. Its compact design allows for seamless integration under most standard kitchen counters.



Figure 1: Placeholder image indicating the general appearance of the EUHOMY 15-inch Under Counter Ice Maker. This image indicates 'No image available' and is used for illustrative purposes only.

This appliance features an intuitive control panel, a large ice storage bin, and a self-cleaning function for convenience. It is engineered for quiet operation and energy efficiency.

SETUP AND INSTALLATION

Unpacking

Carefully remove the ice maker from its packaging. Retain the packaging materials for future transport or storage. Inspect the unit for any shipping damage. If damage is found, contact your retailer immediately.

Location Requirements

- Place the ice maker on a flat, level surface capable of supporting its weight when full of ice and water.
- Ensure adequate ventilation around the unit. Maintain at least 2 inches (5 cm) of space at the back and sides, and 6 inches (15 cm) at the top.
- Avoid direct sunlight or heat sources.
- The ambient temperature should be between 50°F (10°C) and 90°F (32°C).

Electrical Connection

The ice maker requires a dedicated, grounded 115V/60Hz electrical outlet. Do not use extension cords or adapter plugs. Ensure the electrical supply matches the requirements listed on the product's rating label.

Water Supply and Drain Connection

Connect the ice maker to a potable water supply using the provided water inlet hose. Ensure all connections are secure to prevent leaks. A drain hose is also provided for connecting to a floor drain or a suitable plumbing drain. Refer to the detailed plumbing diagram in the full manual for specific instructions.

OPERATING INSTRUCTIONS

Initial Startup

1. After installation, wait at least 2 hours before plugging in the unit to allow refrigerants to settle.
2. Plug the ice maker into the grounded electrical outlet.
3. Turn on the water supply valve.
4. Press the "ON/OFF" button on the control panel to start ice production.

Control Panel Overview

The control panel typically includes buttons for ON/OFF, Ice Size Selection, Clean Cycle, and indicators for Water Shortage, Ice Full, and Malfunction.

Ice Production

The ice maker will automatically begin the ice-making cycle. The first few batches of ice may be smaller or irregular. Discard the first 3-4 batches of ice to ensure cleanliness.

Adjusting Ice Cube Size

Use the "Ice Size" button to select between small, medium, or large ice cubes, if available. The selected size will be indicated on the display.

MAINTENANCE

Regular Cleaning

To ensure optimal performance and hygiene, clean your ice maker regularly. It is recommended to perform a full cleaning cycle every 3-6 months, or more frequently depending on water hardness.

1. Unplug the unit and turn off the water supply.
2. Drain any remaining water from the reservoir.
3. Use a mild detergent and warm water to clean the interior surfaces, including the ice bin and water reservoir. Rinse thoroughly.
4. For models with a self-cleaning function, follow the instructions in the full manual to activate it.

Condenser Cleaning

The condenser coils should be cleaned at least once a year. Dust and debris on the coils can reduce efficiency. Use a vacuum cleaner with a brush attachment to gently remove dust from the coils located at the back or bottom of the unit.

Water Filter Replacement (if applicable)

If your model includes a water filter, replace it every 6 months or as indicated by the filter indicator light. Refer to the filter replacement guide for specific instructions.

TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Ice maker not producing ice.	No water supply; Unit unplugged; Ambient temperature too high.	Check water connection and valve; Ensure unit is plugged in; Move unit to cooler location.
Ice cubes are small or cloudy.	Water quality issues; Dirty condenser coils; Low water pressure.	Consider a water filter; Clean condenser coils; Check water supply pressure.
Unit is leaking water.	Loose water connections; Clogged drain hose.	Tighten water inlet/drain connections; Clear any blockages in the drain hose.

If the problem persists after attempting these solutions, please contact EUHOMY customer support.

SPECIFICATIONS

Feature	Detail
Model Number	B0FF8R4GYV
Dimensions (W x D x H)	Approx. 15 x 24 x 34 inches (38 x 61 x 86 cm)
Power Supply	115V / 60Hz
Ice Production Capacity	Up to 60 lbs (27 kg) per 24 hours
Ice Storage Capacity	Approx. 25 lbs (11 kg)
Refrigerant	R600a

Note: Specifications are subject to change without notice for product improvement.

WARRANTY INFORMATION

EUHOMY warrants this product to be free from defects in material and workmanship for a period of **one (1) year** from the date of original purchase. This warranty is valid only for the original purchaser and is not transferable.

This warranty does not cover damage resulting from accident, misuse, abuse, alteration, improper installation, or connection to an improper voltage supply. Normal wear and tear is not covered by this warranty.

For warranty service, please retain your original purchase receipt. Contact EUHOMY customer support for assistance.

CUSTOMER SUPPORT

If you have any questions or require assistance with your EUHOMY 15-inch Under Counter Ice Maker, please do not hesitate to contact our customer support team.

Website: www.euhomy.com *(Please note: This is a placeholder URL, actual website may vary)*

Email: support@euhomy.com *(Please note: This is a placeholder email, actual email may vary)*

Phone: 1-800-XXX-XXXX *(Please note: This is a placeholder number, actual number may vary)*

Please have your model number (B0FF8R4GYV) and purchase date ready when contacting support.