

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Parrot Uncle](#) /

› [Parrot Uncle 100 Inch Ceiling Fan with Lights and Remote \(Model F8002SY\) - Instruction Manual](#)

## Parrot Uncle F8002SY

# Parrot Uncle 100 Inch Ceiling Fan with Lights and Remote

Model: F8002SY

## INTRODUCTION

Thank you for choosing the Parrot Uncle 100 Inch Industrial Ceiling Fan. This manual provides detailed instructions for the safe installation, operation, and maintenance of your new ceiling fan. Please read this manual thoroughly before installation and retain it for future reference.

This 100-inch ceiling fan is designed for large spaces, featuring 7 aerodynamic aluminum blades that deliver a powerful 11,500 CFM airflow. It includes an energy-saving DC motor, a dimmable LED light with 3 color temperatures, and a multi-functional remote control for convenient operation. The fan also offers reversible airflow for year-round comfort.



Image: The 100-inch ceiling fan installed in a spacious living area, highlighting its high efficiency and powerful 11,500 CFM airflow for optimal air circulation.

## SAFETY INFORMATION

**WARNING:** To reduce the risk of fire, electric shock, or personal injury, always follow these instructions:

- Read all instructions and safety information before installing your fan and save these instructions.
- All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, consult a qualified electrician.
- Before installation, disconnect power by turning off the circuit breakers at the main fuse box.

- Ensure the installation site allows the fan blades to rotate without obstruction. Maintain a minimum clearance of 7 feet from the floor to the blade trailing edge.
- The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 35 lbs (15.9 kg). Use only UL/ETL listed outlet boxes marked "FOR FAN SUPPORT."
- Do not operate the fan with damaged blades. Replace all blades if one is damaged.
- Avoid placing objects in the path of the fan blades.
- Do not use the fan with a dimmer switch not specifically designed for ceiling fans.

## PACKAGE CONTENTS

Carefully unpack your ceiling fan and inspect the contents to ensure all parts are present and undamaged. If any parts are missing or damaged, contact customer service immediately.

- Ceiling Fan Assembly
- LED Light Kit
- Remote Control
- Mounting Hardware
- Instruction Manual
- Downrods (8" and 12")

## SPECIFICATIONS

Feature	Specification
Model Name	100 Inch Ceiling Fans with Lights
Model Number	F8002SY
Brand	Parrot Uncle
Color	Silver
Material	Aluminum Blades, Copper DC Motor
Product Dimensions	100"L x 100"W x 15.3"H
Airflow	11,500 CFM (Cubic Feet per Minute)
Motor Type	55W DC Motor
Noise Level	Approximately 40dB
Light Source	Integrated 22W LED
Brightness	2200 Lumens
Color Temperatures	3000K Warm, 4500K Natural, 6000K Cool White
Dimmable	Yes, full-range dimming
Control Method	Remote Control (6 speeds, timer, light control)
Timer Settings	1/2/4/8 hours
Reversible Airflow	Yes (Summer/Winter Mode)

Installation Type	Downrod Mount (8" and 12" downrods included)
Indoor/Outdoor Usage	Indoor, Covered Outdoor
Certifications	ETL Certified



Image: An exploded view of the fan's 55W pure copper DC motor, emphasizing its brushless design for higher performance and energy efficiency, offering 6 wind speeds.



Image: A diagram illustrating the physical dimensions of the 100-inch ceiling fan, including its 15.3-inch height and the availability of 8-inch and 12-inch downrods for installation.

## SETUP AND INSTALLATION

Professional installation is recommended for safety and optimal performance. Ensure power is disconnected at the circuit breaker before beginning installation.

### Pre-Installation Checklist:

- Verify all components are present as listed in 'Package Contents'.
- Ensure the mounting location is suitable for fan support (minimum 35 lbs).
- Confirm wiring is up to code and accessible.

### Installation Steps:

- Mounting Bracket Installation:** Securely attach the mounting bracket to the ceiling outlet box. Ensure the box is rated for fan support.
- Downrod Assembly:** Select the appropriate downrod (8" or 12") for your ceiling height. Feed the fan wires through the downrod and attach the downrod to the fan motor assembly.
- Hanging the Fan:** Carefully lift the fan assembly and place the downrod ball into the mounting bracket.
- Electrical Connections:** Connect the fan's electrical wires to the household wiring according to the wiring diagram provided in the full instruction manual. Ensure all connections are secure.
- Canopy Installation:** Slide the canopy up to the ceiling and secure it to the mounting bracket, covering the wiring connections.
- Blade Attachment:** Attach the 7 aluminum blades to the motor housing using the provided screws. Ensure all blades are securely fastened.
- Light Kit Installation:** Connect the LED light kit wires and attach the light kit to the bottom of the fan motor housing. Secure the acrylic shade.
- Power Restoration:** Once installation is complete, restore power at the circuit breaker.

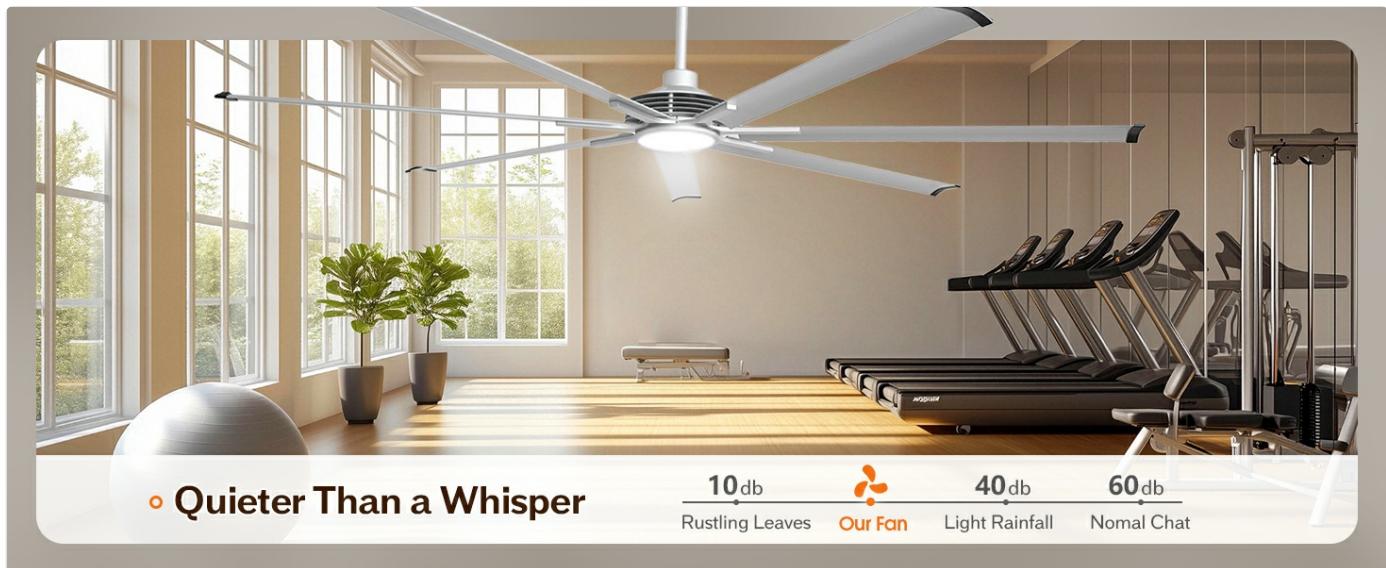


Image: A person on a ladder installing the ceiling fan, illustrating the installation process. The fan is designed for a straightforward setup.

## OPERATING INSTRUCTIONS

Your Parrot Uncle ceiling fan is operated using the included multi-functional remote control.

### Remote Control Functions:

- Fan ON/OFF:** Press to turn the fan on or off.
- Fan Speed Control (1-6):** Adjust the fan speed from 1 (lowest) to 6 (highest).
- Light ON/OFF:** Press to turn the LED light on or off.
- Brightness Adjustment (+/-):** Hold to dim or brighten the LED light.
- Color Temperature Change:** Cycle through 3000K (Warm), 4500K (Natural), and 6000K (Cool White) light settings.
- Timer Settings (1H/2H/4H/8H):** Set the fan to turn off automatically after 1, 2, 4, or 8 hours.
- Forward/Reverse Rotation:** Toggle between Summer Mode (downdraft) and Winter Mode (updraft).

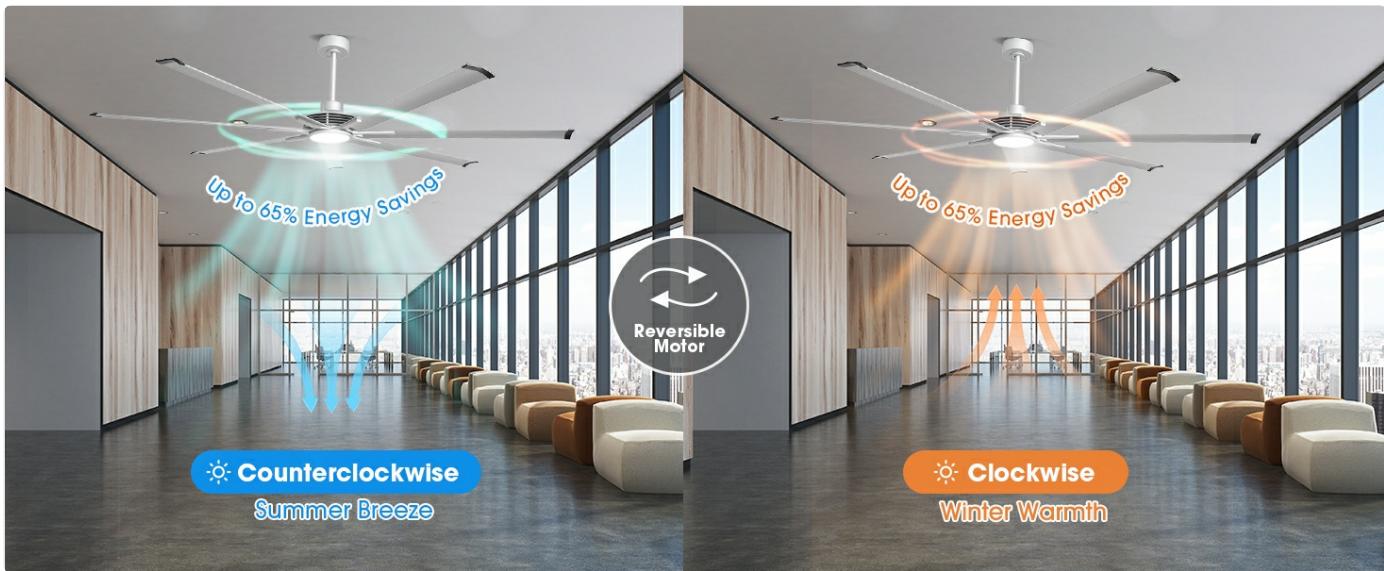


Image: A hand holding the multi-functional remote control, demonstrating its ease of use for adjusting fan speeds, light brightness, and color temperature.

### Reversible Airflow (Summer/Winter Mode):

The fan features a reversible DC motor for year-round comfort. Use the remote control to switch between modes:

- **Summer Mode (Counter-clockwise):** Creates a cooling downdraft, ideal for warm weather.
- **Winter Mode (Clockwise):** Circulates warm air trapped near the ceiling, helping to reduce heating costs.



Image: A visual representation of the fan's reversible motor, showing counter-clockwise rotation for a summer breeze and clockwise rotation for winter warmth, contributing to energy savings.

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Blade Inspection:** Check blade attachments regularly to ensure all screws are tight. Loose blades can cause wobbling and noise.
- **Light Kit:** The integrated LED light is designed for long life and typically does not require replacement. If issues arise, contact customer support.
- **No Lubrication Needed:** The DC motor is permanently lubricated and does not require oiling.

Always ensure the power is turned off at the circuit breaker before performing any cleaning or maintenance.

## TROUBLESHOOTING

If you experience issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low/dead.	Check circuit breaker and wall switch; Verify all wire connections are secure; Replace remote control battery.
Fan wobbles	Loose blade screws; Improperly balanced blades; Loose mounting bracket.	Tighten all blade screws; Use a balancing kit (not included) to balance blades; Ensure mounting bracket is securely fastened.
Light does not work	Loose wire connections in light kit; LED driver issue.	Check light kit wiring connections; If problem persists, contact customer support.
Remote control not working	Low/dead battery; Remote not paired with fan.	Replace remote battery; Refer to the full manual for remote pairing instructions.
Excessive noise	Loose screws; Fan not level; Internal motor issue.	Check and tighten all screws; Ensure fan is installed level; If noise persists, contact customer support.

## WARRANTY AND SUPPORT

Parrot Uncle offers a comprehensive warranty and customer support for your peace of mind.

- 30-Day Free Return and Exchange Service:** If you are not satisfied with your purchase, you may return or exchange it within 30 days.
- THREE-YEAR FREE Replacement Parts Service:** We provide free replacement parts for three years from the date of purchase.
- Lifetime Professional Customer Service:** Our dedicated customer service team is available to assist you with any questions or concerns you may have throughout the product's lifetime.

For warranty claims or technical assistance, please contact Parrot Uncle customer support through the retailer where you purchased the product or visit the official Parrot Uncle website.