

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Extol Premium](#) /

› [Extol Premium Digital Tyre Inflator with Pressure Gauge Model 8865065 User Manual](#)

Extol Premium 8865065

Extol Premium Digital Tyre Inflator with Pressure Gauge

Model: 8865065

INTRODUCTION

Thank you for choosing the Extol Premium Digital Tyre Inflator with Pressure Gauge. This device is designed for accurate measurement of tyre pressure and efficient inflation. Please read this manual thoroughly before use to ensure safe and optimal operation.

SAFETY INSTRUCTIONS

- Always wear appropriate eye protection when operating this device.
- Do not exceed the maximum pressure rating of the tyre or the inflator. Refer to your vehicle's manual for recommended tyre pressures.
- Keep the device away from children and pets.
- Ensure all connections are secure before operating to prevent air leaks or accidental disconnections.
- Do not use the device if it is damaged or malfunctioning.
- Store the device in a dry, clean environment when not in use.

PACKAGE CONTENTS

Verify that all items are present upon unpacking:

- Extol Premium Digital Tyre Inflator with Pressure Gauge (Model 8865065)
- Flexible Air Hose
- User Manual (this document)

SETUP

- Connect to Air Compressor:** Attach the inflator's air inlet (typically at the base of the handle) to your air compressor's output hose. Ensure a tight, leak-free connection.
- Power On:** Press the **ON/OFF** button on the digital display to power on the device. The backlit display will illuminate.
- Select Pressure Unit:** Press the **FUNC** button repeatedly to cycle through available pressure units (e.g.,

PSI, BAR, KPA, kg/cm²). Select your desired unit.



Figure 1: Front view of the Extol Premium Digital Tyre Inflator, highlighting the digital display and control buttons.

OPERATING INSTRUCTIONS

Measuring Tyre Pressure

1. Ensure the inflator is powered on and the correct pressure unit is selected.
2. Remove the valve cap from the tyre.
3. Firmly press the inflator's chuck onto the tyre valve stem. The digital display will show the current tyre pressure.
4. If the pressure reading is stable, it indicates a good connection. If not, adjust the chuck until a stable reading is obtained.

Inflating Tyres

1. After measuring the current pressure, if inflation is required, ensure your air compressor is running.
2. With the chuck securely attached to the tyre valve, press the trigger on the inflator handle. Air will flow into the tyre, and the display will update in real-time.
3. Release the trigger once the desired pressure is reached.
4. Remove the chuck from the tyre valve and replace the valve cap.

Deflating Tyres

If the tyre is over-inflated, you can reduce the pressure using the integrated bleed valve (if present, typically a small button near the chuck or trigger). Press and hold the bleed valve to release air until the desired pressure is displayed.



Figure 2: Side view of the Extol Premium Digital Tyre Inflator, illustrating the handle and trigger mechanism.

MAINTENANCE

- Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Storage:** Store the inflator in a clean, dry place, away from direct sunlight and extreme temperatures.
- Hose Inspection:** Regularly inspect the air hose for any signs of wear, cracks, or damage. Replace if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No display/Device won't turn on	Low or dead batteries (if applicable); Power button not pressed firmly.	Replace batteries (if applicable); Press ON/OFF button firmly.
Inaccurate pressure reading	Poor connection to tyre valve; Device malfunction.	Ensure chuck is firmly seated on valve; Compare reading with another gauge.
Air leaks during inflation	Loose connection to compressor or tyre valve; Damaged hose/chuck.	Tighten connections; Inspect hose and chuck for damage and replace if necessary.
Cannot inflate tyre	Air compressor not running or insufficient pressure; Blockage in hose/inflator.	Check air compressor operation; Inspect for blockages.

SPECIFICATIONS

Model Number	8865065
Brand	Extol Premium
Material	Acrylonitrile Butadiene Styrene (ABS)
Item Weight	15.8 ounces (447.9 grams)
Product Dimensions (L x W x H)	7.87 x 5.12 x 2.7 inches (20 x 13 x 6.86 cm)
Style	Digital display
Batteries Required	No

WARRANTY AND SUPPORT

This Extol Premium product is manufactured to high-quality standards. For information regarding warranty coverage, please refer to the documentation provided with your purchase or visit the official Extol Premium website.

For technical support or service inquiries, please contact Extol Premium customer service. Contact details can typically be found on the manufacturer's website or product packaging.

Note: Protection plans may be available for purchase separately from third-party providers. These are not directly offered or managed by Extol Premium.


Related Documents - 8865065

	<p>Extol Premium 8893405 Electric Planer User Manual</p> <p>This user manual provides comprehensive instructions for the Extol Premium 8893405 electric planer. It covers product features, technical specifications, preparation, operation, safety guidelines, maintenance, and warranty information.</p>
	<p>Extol Premium 8891152 Brushless Cordless Drill User Manual</p> <p>Comprehensive user manual for the Extol Premium 8891152 brushless cordless drill, covering features, technical specifications, safety instructions, operation, maintenance, and disposal.</p>



Návod k použití: Olejové vzduchové kompresory Extol® Premium (8895310, 8895315, 8895320)

Kompletní uživatelský manuál pro olejové vzduchové kompresory Extol® Premium. Obsahuje informace o vlastnostech, účelu použití, technických specifikacích, bezpečném provozu, údržbě a odstraňování závad.

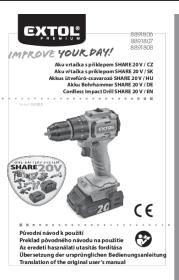

Návod k použití vrtačky Extol Premium SHARE 20V s příklepem

Tento návod k použití poskytuje podrobné informace oaku vrtačce Extol Premium SHARE 20V s příklepem, včetně jejích funkcí, specifikací, bezpečnostních pokynů a návodu k použití. Seznamte se s bezkartáčovým motorem, funkcí SPINLOCK a systémem baterií SHARE 20V.



[EXTOL PREMIUM 8822003 Digital Luggage Scale - User Manual](#)

User manual for the EXTOL PREMIUM 8822003 digital luggage hand scale. Features include weighing range up to 50kg, multiple units (lb, kg, g, oz), tare function, low battery indicator, and backlit LCD display. Learn how to install batteries, turn on/off, select units, and weigh items.



[EXTOL PREMIUM Voltage Tester 8831203 - User Manual and Specifications](#)

Detailed information on the EXTOL PREMIUM Voltage Tester 8831203, including operating conditions, safety warnings, and overvoltage category specifications. This manual provides essential guidance for safe and effective use.