

[manuals.plus](#) /› [CLY](#) /› **CLY 100W LED Outdoor Floodlight with Motion Sensor Instruction Manual**

CLY CLY 100W LED Motion Sensor Floodlight

CLY 100W LED Outdoor Floodlight with Motion Sensor

Model: CLY 100W LED Motion Sensor Floodlight

Brand: CLY

1. INTRODUCTION

Thank you for choosing the CLY 100W LED Outdoor Floodlight with Motion Sensor. This product is designed to provide efficient and versatile outdoor lighting with advanced motion detection capabilities and remote control for ease of use. Please read this manual carefully before installation and operation to ensure proper function and safety.

2. SAFETY INSTRUCTIONS

- Ensure the power supply is disconnected before installation or maintenance.
- Installation should be performed by a qualified electrician or in accordance with local electrical codes.
- Do not look directly into the LED light when it is on, as it may cause eye strain.
- Keep the product away from flammable materials.
- Do not attempt to disassemble or modify the product, as this will void the warranty and may cause damage or injury.
- Ensure the mounting surface is stable and can support the weight of the fixture.
- This product is rated IP66 for outdoor use, but avoid submerging it in water.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1x CLY 100W LED Outdoor Floodlight with Motion Sensor (and 1m cable)
- 1x Remote Control (with 2 AAA batteries included)
- 1x Set of Mounting Accessories (screws, wall plugs)



Image: Contents of the CLY 100W LED Floodlight package, including the light, remote, cable, and mounting accessories.

4. PRODUCT SPECIFICATIONS

Brand	CLY
Model	CLY 100W LED Motion Sensor Floodlight
Power	100 Watts

Luminous Flux	9600 Lumens
Color Temperature	6500 Kelvin (Cool White)
Voltage	230 Volts
Material	Aluminum
Color	White
Waterproof Rating	IP66
Beam Angle	Adjustable (up to 270° with 3 heads)
Motion Sensor Angle	180°
Max Sensing Distance	12 meters (39.37 feet)
Ideal Mounting Height	6-8 meters (19.69-26.25 feet)
Control Method	Remote Control
Dimensions (L x W x H)	22 x 15 x 18 cm
Weight	1.47 kg
Special Features	Anti-rust, Dimmable, Shatterproof, Timer, Waterproof

5. INSTALLATION GUIDE


The CLY 100W LED Floodlight is designed for easy wall or ceiling mounting. Ensure the power is off before beginning installation.

5.1 Mounting Location

- Choose a location that provides the desired illumination area and allows for optimal motion sensor detection.
- The ideal mounting height is between 6 to 8 meters (19.69 to 26.25 feet) for effective motion detection and light coverage.
- The three adjustable heads allow for a wide beam angle of up to 270°, making it suitable for corners and broad areas.

Light Up From 3 Sides

More flexibility to suit different locations

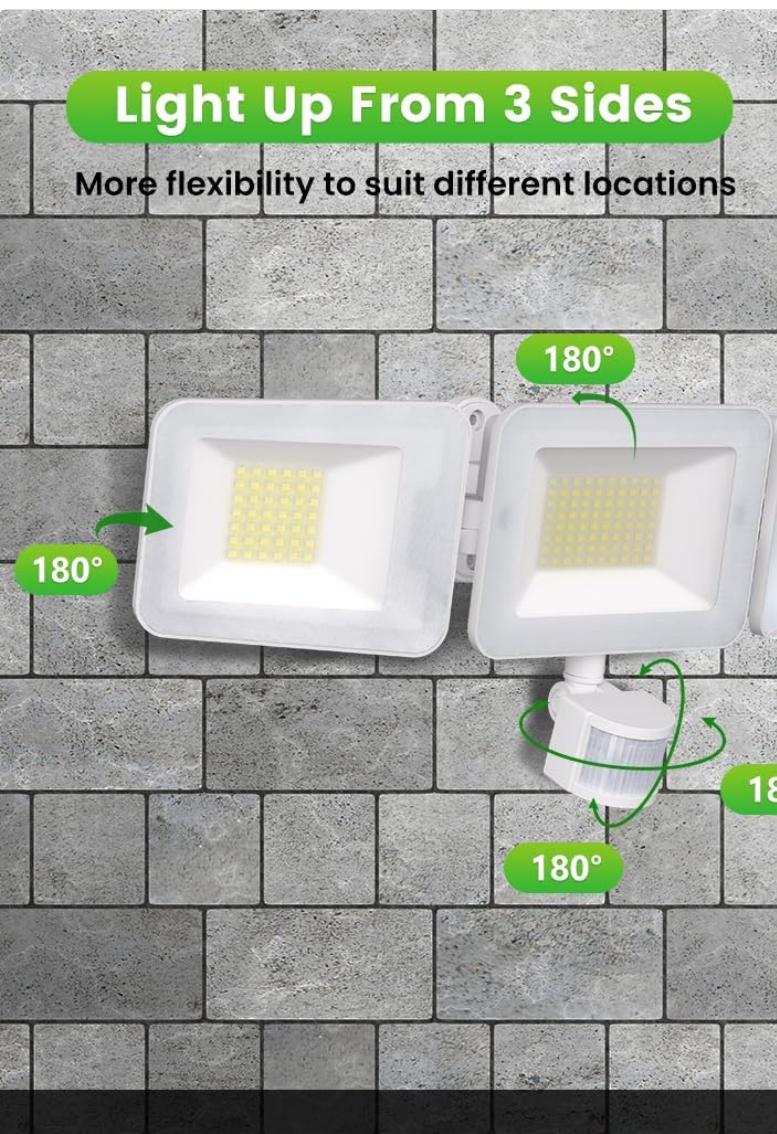

• Ceiling Installation



• Wall Installation

Image: Adjustable light heads and installation options (ceiling, wall).

5.2 Wiring Instructions

- Disconnect Power:** Turn off the main power supply at the circuit breaker before starting any electrical work.
- Prepare Wires:** The floodlight comes with a 1-meter cable. Connect the wires according to standard electrical practices:
 - Brown wire: Live (L)
 - Blue wire: Neutral (N)
 - Yellow/Green wire: Earth (E)

3. **Secure Connections:** Use appropriate wire connectors (not included) to ensure secure and insulated connections.

5.3 Mounting the Fixture

1. **Mark Holes:** Use the mounting bracket as a template to mark the drilling points on the wall or ceiling.
2. **Drill Holes:** Drill holes at the marked positions and insert the provided wall plugs.
3. **Attach Bracket:** Secure the mounting bracket to the surface using the provided screws.
4. **Mount Light:** Attach the floodlight fixture to the mounting bracket, ensuring it is firmly secured.
5. **Adjust Heads:** Adjust the three light heads to direct illumination to your desired areas. The sensor can also be rotated for optimal detection.

Super Bright Sensor Light With 360° Remote Control

10%-100% Stepless Dimming



100W
CLY



9600
LUMEN



6500K
Cool White



360°
Remote Control



Motion
Sensor

Image: CLY LED floodlight installed, showing coverage and sensor range.

6. OPERATING INSTRUCTIONS

The CLY floodlight features multiple operating modes and is controlled via the included remote control.

6.1 Remote Control Functions

The remote control allows for convenient adjustment of modes, brightness, detection distance, and lighting duration without needing to access the physical unit.



RF Remote Control



24H
Sensing Mode



Night
Sensing Mode



Constant
Light Mode



Timing



Adjustable
Sensor
Lighting Time



Adjustable
Sensing Distance



10 Level Brightness
Adjustable



Memory
Function



Image: Remote control with various function buttons.

- **ON/OFF:** Power the light on or off.
- **Mode Selection:** Buttons for 24H Sensing, Night Sensing, Constant Light, and Timing modes.
- **Brightness Adjustment:** Increase or decrease light intensity (10%-100% stepless dimming).
- **Sensing Distance:** Adjust detection range (6M/9M/12M).
- **Lighting Duration:** Set how long the light stays on after motion detection (45S/90S/120S/5MIN/10MIN).
- **Timer:** Set the light to stay on for 1H/2H/3H.

- **Memory Function:** The light retains the last selected settings.

6.2 Operating Modes

The floodlight offers four intelligent operating modes:

4 Working Modes

Adjustable Sensor Lighting Time
45S/90S/120S/5MIN/10MIN



24H Sensing Mode
Lights up when motion is detected at day and night




Adjustable Sensing Distance
6M(19.69FT)/9M(29.53FT)/12M(39.37FT)



Night Sensing Mode
Lights up when motion is detected at night



10%-100% Stepless Dimming

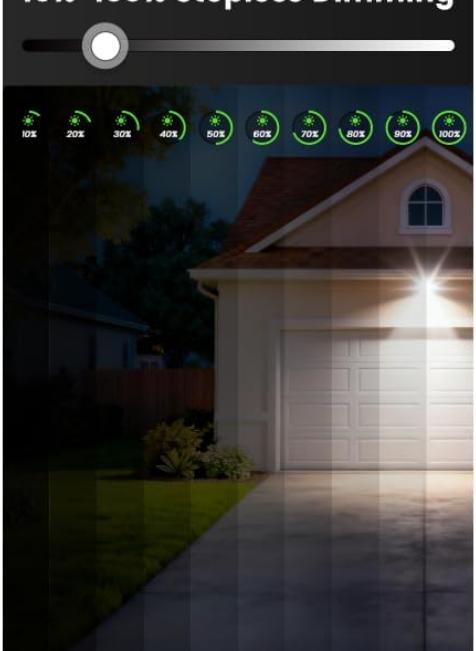

Always-on Mode
Constant Light Mode: Lights up when press "ON" until press "OFF"



Timing
Lights up for 1H/2H/3H at day or night



Image: Explanation of the 4 intelligent operating modes.

1. **24H Sensing Mode:** The light automatically turns on when motion is detected, both during the day and at night.
2. **Night Sensing Mode:** The light automatically turns on only when motion is detected at night.
3. **Always-on Mode:** The light remains continuously on until manually turned off.

4. **Timing Mode:** The light turns on for a set duration (1H/2H/3H) regardless of motion, day or night.

Note: In 24H Sensing Mode and Night Sensing Mode, you can adjust the lighting duration (45S/90S/120S/5MIN/10MIN) and detection distance (6M/9M/12M) using the remote control. Brightness can be adjusted in all modes.

7. MAINTENANCE

- **Cleaning:** Clean the surface of the floodlight and sensor regularly with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Inspection:** Periodically check the mounting screws and wiring connections to ensure they are secure.
- **Durability:** The product is constructed from aluminum for good heat dissipation and corrosion resistance, ensuring a long lifespan of up to 50,000 hours. It is IP66 waterproof, resistant to heat and frost, suitable for extreme weather conditions.

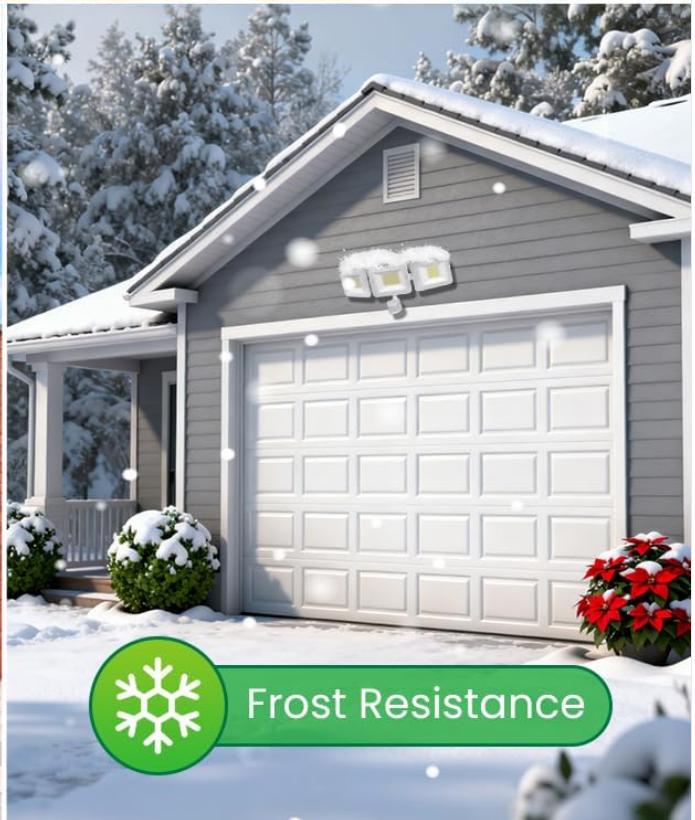
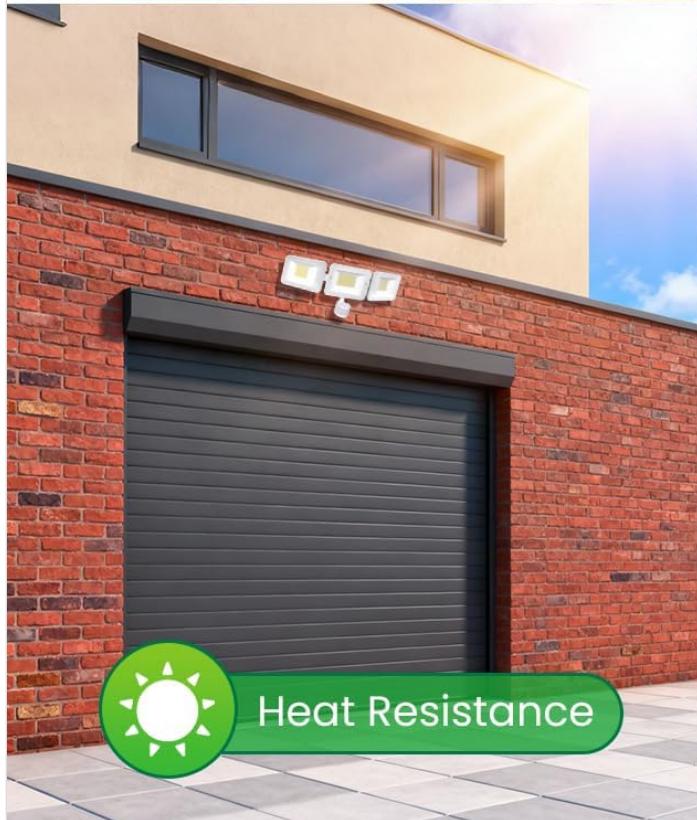


Image: IP66 waterproof and durable design, resistant to heat and frost.

Excellent Heat Dissipation



Image: Excellent heat dissipation and detailed view of the motion sensor features.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Light does not turn on.	No power supply. Incorrect wiring. Remote control batteries are dead.	Check circuit breaker and power connections. Verify wiring connections (Live, Neutral, Earth). Replace remote control batteries (2x AAA).
Motion sensor not detecting.	Sensor obstructed. Incorrect mode selected. Detection distance set too low.	Clear any obstructions in front of the sensor. Ensure 24H Sensing or Night Sensing mode is active. Increase detection distance using the remote control.
Light stays on continuously.	Constant Light Mode is active. Continuous motion detected.	Switch to a sensing mode using the remote control. Check for objects or activities that might be continuously triggering the sensor.
Remote control not working.	Batteries are dead or incorrectly inserted. Obstruction between remote and sensor. Remote control out of range.	Replace batteries (2x AAA) and ensure correct polarity. Ensure a clear line of sight to the sensor. Move closer to the floodlight (max 12m/39ft range).

9. WARRANTY AND SUPPORT

CLY products are manufactured to high-quality standards. For warranty information or technical support, please contact your retailer or CLY customer service.

Please retain your proof of purchase for any warranty claims.

Contact information for customer service may be found on the product packaging or the official CLY website.